

Spare Parts List

Model PM/RM

Semi mounted plough

No 733015



Notes

GB Model	GB Interbody clearance	GB Headstock
D Modell	D Körperlängsabstand	D Drehwerk
F Modèle	F Dégagement sous age	F Type de tête
E Modelo	E Separación entre cuerpos	E Tipo de cabezal



MOD

NO

WEIGHT

KG


MADE IN NORWAY
BY KVERNELAND KLEPP AS
N-4344 KVERNALAND - NORWAY

CE

GB Serial number	Type of beam:	GB Type of body
D Seriennummer	Heavy Duty	D Körperform
F Numéro de série	Vibromat	F Type de corps
E Numero de serie	On-land	E Tipo de cuerpo

- GB** Complete model code and serial number must be stated to avoid mistakes when ordering spare parts and misunderstandings regarding service consultations. The identification plate is located on the headstock.
- F** Le code complet et le numéro de série doivent être indiqués pour éviter des erreurs lors de la commande de pièces de rechange et des malentendus concernant des demandes de Service-Après-Vente. La plaque d'identité est située sur la tête.
- D** Um bei Ersatzteilbestellungen und Serviceleistungen Fehler und Mißverständnisse zu vermeiden ist es erforderlich, daß die genaue Bezeichnung und die Seriennummer angegeben werden. Die Plakette befindet sich am Drehwerk.
- E** Debe figura el código completo del modelo y el número de serie para evitar errores al pedir las piezas de recambio y al hacer consultas técnicas. La placa de identificación esta situada en el cabezal.


Plate		Page
244	Bodies no 6, 7, 8 and 9	4
367	Bodies no 12, 15 and 19	8
494	Body no 14 (Plastic mouldboard)	12
414	Body no 20 (Finger Body) (Before 01.03.99)	14
1089	Bodies no. 29 and no. 30	16
458	Auto Reset Beam	20
1009	Beam (Shear bolt)	22
187	Disc coultter for Auto Reset beam (Before 01.01.99)	24
1073	Disc coultter 18" and 20", E-saddle (From 01.01.99)	26
574	Disc coultter	28
1007	Disc coultter for shear bolt beam	30
341	Manure skimmer / Maize skimmer	32
1041	Front for PM/RM	34
1039	Front frame for PM/RM	36
1040	Rear frame for PM/RM	38
1042	Truck for PM/RM	40
1016	Fixing device for PL/RL and PM/RM	42
846	Turn-over hydraulics layout for PL/RL and PM/RM	44
1043	Hydraulic wheel lifting for PM/RM	46
1028	Hydraulic front furrow width adjustment (PL/RL from 01.11.99, PL/RL and PM/RM before 01.08.00)	48
1020	Hydraulic front furrow width adjustment for On land	50
1170	Hydraulic layout for S-arm, PM/RM and PL/RL	52
1025	Hydraulic cylinder D75 x 400 and D100 x 400 mm w/stop	54
	(D100 x 400 before 15.05.99)	54
1084	Hydraulic cylinder D100 x 400 mm w/stop (From 15.05.99)	56
890	Hydraulic cylinder D75 x 200 mm (353704 - 353707)	58
	(From 01.08.96) (Before 01.04.01)	58
1104	Support cylinder D80 x 240 mm	60
1026	Hydraulic cylinder D100 x 215 mm w/stop (Before 01.06.00)	62
1129	Hydraulic cylinder D100 x 200 mm w/stop and bellow	64
	(From 01.06.00, w/garmax from 01.08.00)	64
445	Hydraulic cylinder D75 x 130 mm w/90° turned connectors (Before 01.09.99)	66
1092	Hydraulic cylinder D75 x 130 mm w/90° turned connectors (From 01.09.99)	68
1027	Telescopic cylinder D95 x 445 mm (Before 01.08.00)	70
1062	Hydraulic cylinder D80 x 200 mm (From 01.03.99)	72
582	Fix for wheel (From 01.09.95, serial no. PX223 and RX261 and	74
	PM/RM from 01.04.00)	74
527	Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"	76
	(From 01.03.97)	76
299	Depth wheel 200 x 14.5	78
1088	Depth/transport wheel 99	80
864	Transfers for PM/RM	84
	Index	86

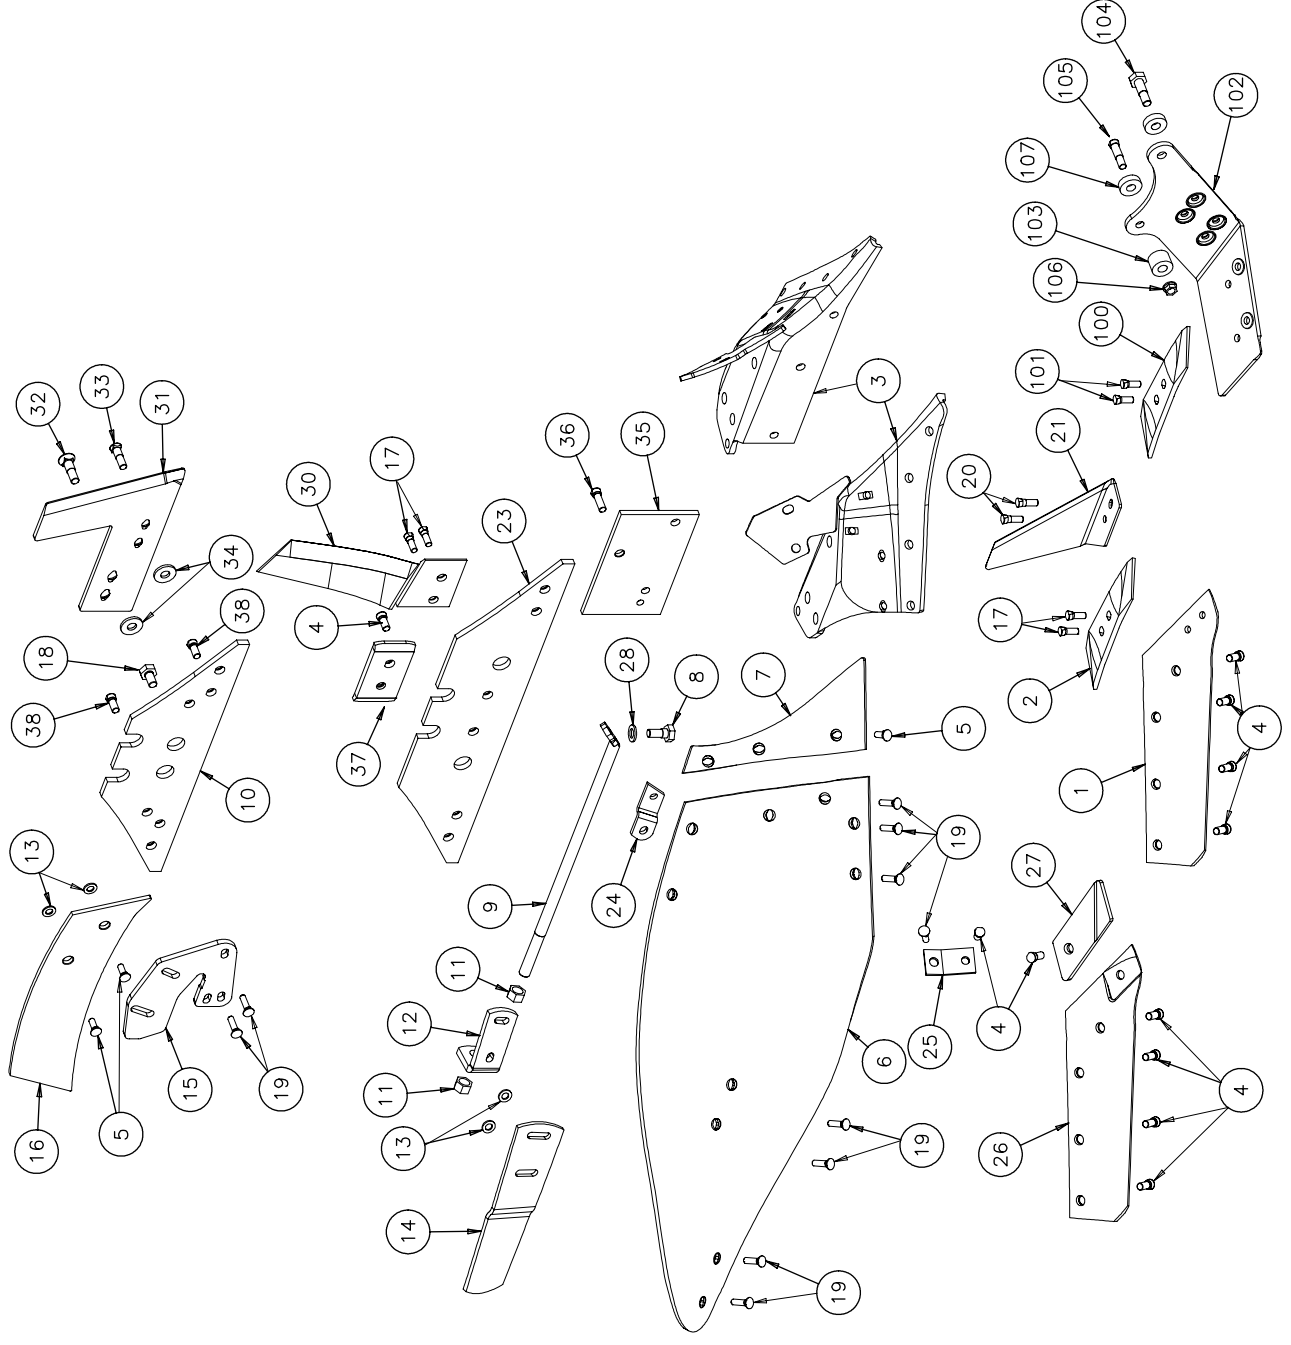


1	KK 07 30 00	Share 12" R (30 cm)	KK 07 38 31	Stay R + L for body no. 9 E - saddle, L = 725 (From 01.12.95)	21	KK 07 30 91	Share knife, R
	KK 07 30 01	Share 12" L (30 cm)				KK 07 30 92	Share knife, L
	KK 07 30 02	Share 14" R (35 cm)	KK 07 38 30	Stay R + L for body no. 9 A - saddle, L = 710 (From 01.12.95)		KK 06 30 91	Share knife, R (for Sweden)
	KK 07 30 03	Share 14" L (35 cm)				KK 06 30 92	Share knife, L (for Sweden)
	KK 07 30 04	Share 16" R (40 cm)	KK 06 38 01	Extra stay R + L, no. 9 E - saddle L = 550 (From 01.12.95)	23	KK 07 36 09	Landside, long R + L
	KK 07 30 05	Share 16" L (40 cm)				KK 07 32 66	Bracket for stay, body no. 6 and 9, R
	KK 07 30 06	Share 18" R (45 cm)	KK 07 03 94	Extra stay R for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	24	KK 07 32 67	Bracket for stay, body no. 6 and 9, L
	KK 07 30 07	Share 18" L (45 cm)				KK 07 34 14	Connecting plate, 16" - 20", R
	KK 07 30 08	Share 20" R (50 cm)	KK 07 03 95	Extra stay L for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	25	KK 07 34 15	Connecting plate, 16" - 20", L
	KK 07 30 09	Share 20" L (50 cm)	KK 07 38 03	Extra stay R + L, no. 9 A - saddle L = 560 (From 01.12.95)	26	KK 07 30 40	Flush fit share 12", R
2	KK 05 30 90	Reversible point, R				KK 07 30 41	Flush fit share 12", L
	KK 06 30 90	Reversible point, L	KK 07 03 90	Extra stay R for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 07 30 42	Flush fit share 14", R
3	KK 07 34 06	Saddle, R (for E-saddle)				KK 07 30 43	Flush fit share 14", L
	KK 07 34 07	Saddle, L (for E-saddle)	KK 07 03 91	Extra stay L for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 07 30 44	Flush fit share 16", R
	KK 07 34 11	Saddle, R (for A-saddle)				KK 07 30 45	Flush fit share 16", L
	KK 07 34 12	Saddle, L (for A-saddle)	10	Landside, R and L, short	27	KK 07 30 30	Flush point, R
4	KK 01 33 32	Cone screw M14 x 34 mm w/nut				KK 07 30 31	Flush point, L
5	KK 03 31 00	Oval screw M12 x 30 mm w/nut	11	Nut M20 mm	28	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)
6	KK 07 32 60	Mouldboard 12" - 16" no. 6, R	12	Bracket for stay, R for body no. 6, 7, 8 (And no. 9 before 01.12.95)	30	KK 07 36 15	Furrow widener, R
	KK 07 32 61	Mouldboard 12" - 16" no. 6, L				KK 07 36 16	Furrow widener, L
	KK 07 32 63	Mouldboard 12" - 14" no. 7, R			31	KK 07 30 88	Landside knife w/screw, R
	KK 07 32 64	Mouldboard 12" - 14" no. 7, L				KK 07 30 89	Landside knife w/screw, L
	KK 07 32 80	Mouldboard 12" no. 8, R	KK 07 38 08	Bracket for stay, L for body no. 9 (From 01.12.95)	32	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)
	KK 07 32 81	Mouldboard 12" no. 8, L				KK 03 32 56	Screw M16 x 55 mm w/ nut (for E-saddle) (From 01.02.00)
	KK 07 32 86	Mouldboard 14" - 18" no. 8, R	13	Washer 12.5 x 23 x 3.2 mm		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 32 87	Mouldboard 14" - 18" no. 8, L	14	Mouldboard extension, R		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
	KK 07 32 90	Mouldboard 14" - 20" no. 9, R				KK 03 31 75	Screw M14 x 50 mm w/nut
	KK 07 32 91	Mouldboard 14" - 20" no. 9, L	15	Mouldboard extension, L	34	KK 01 29 22	Washer 17 x 40 x 4.58 mm
7	KK 07 32 50	Shinpiece for no. 8, R	KK 07 33 10	Bracket for trashboard, R	35	KK 06 36 07	Plate
	KK 07 32 51	Shinpiece for no. 8, L	KK 07 33 11	Bracket for trashboard, L		KK 07 36 07	Plate cpl.
	KK 07 32 56	Shinpiece for no. 6 and 9, R	16	Trashboard, R	33	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 07 32 57	Shinpiece for no. 6 and 9, L	KK 07 33 01	Trashboard L	36	KK 07 36 14	Wearing plate
8	KK 03 27 35	Hex screw M16 x 35 mm w/nut	KK 07 06 40	Trashboard, R cpl.	37	KK 01 33 33	Cone screw M14 x 34 mm
9	KK 06 38 01	Stay R + L for body no. 6, 7 and 8 E - saddle, L = 550 (And no. 9 before 01.12.95)	KK 07 06 41	Trashboard, L cpl.			
			KK 07 06 42	Trashboard, R + L cpl.			
	KK 07 38 03	Stay R + L for body no. 6, 7 and 8 A - saddle, L = 560 (And no. 9 before 01.12.95)	17	Cone screw M12 x 34 mm w/nut			
			18	Hex screw M16 x 27 mm w/nut			
			19	Oval screw M12 x 35 mm w/nut			
			20	Cone screw M12 x 38 mm w/nut			




Pos.	100 - 107	Eco-share from 01.04.00
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)

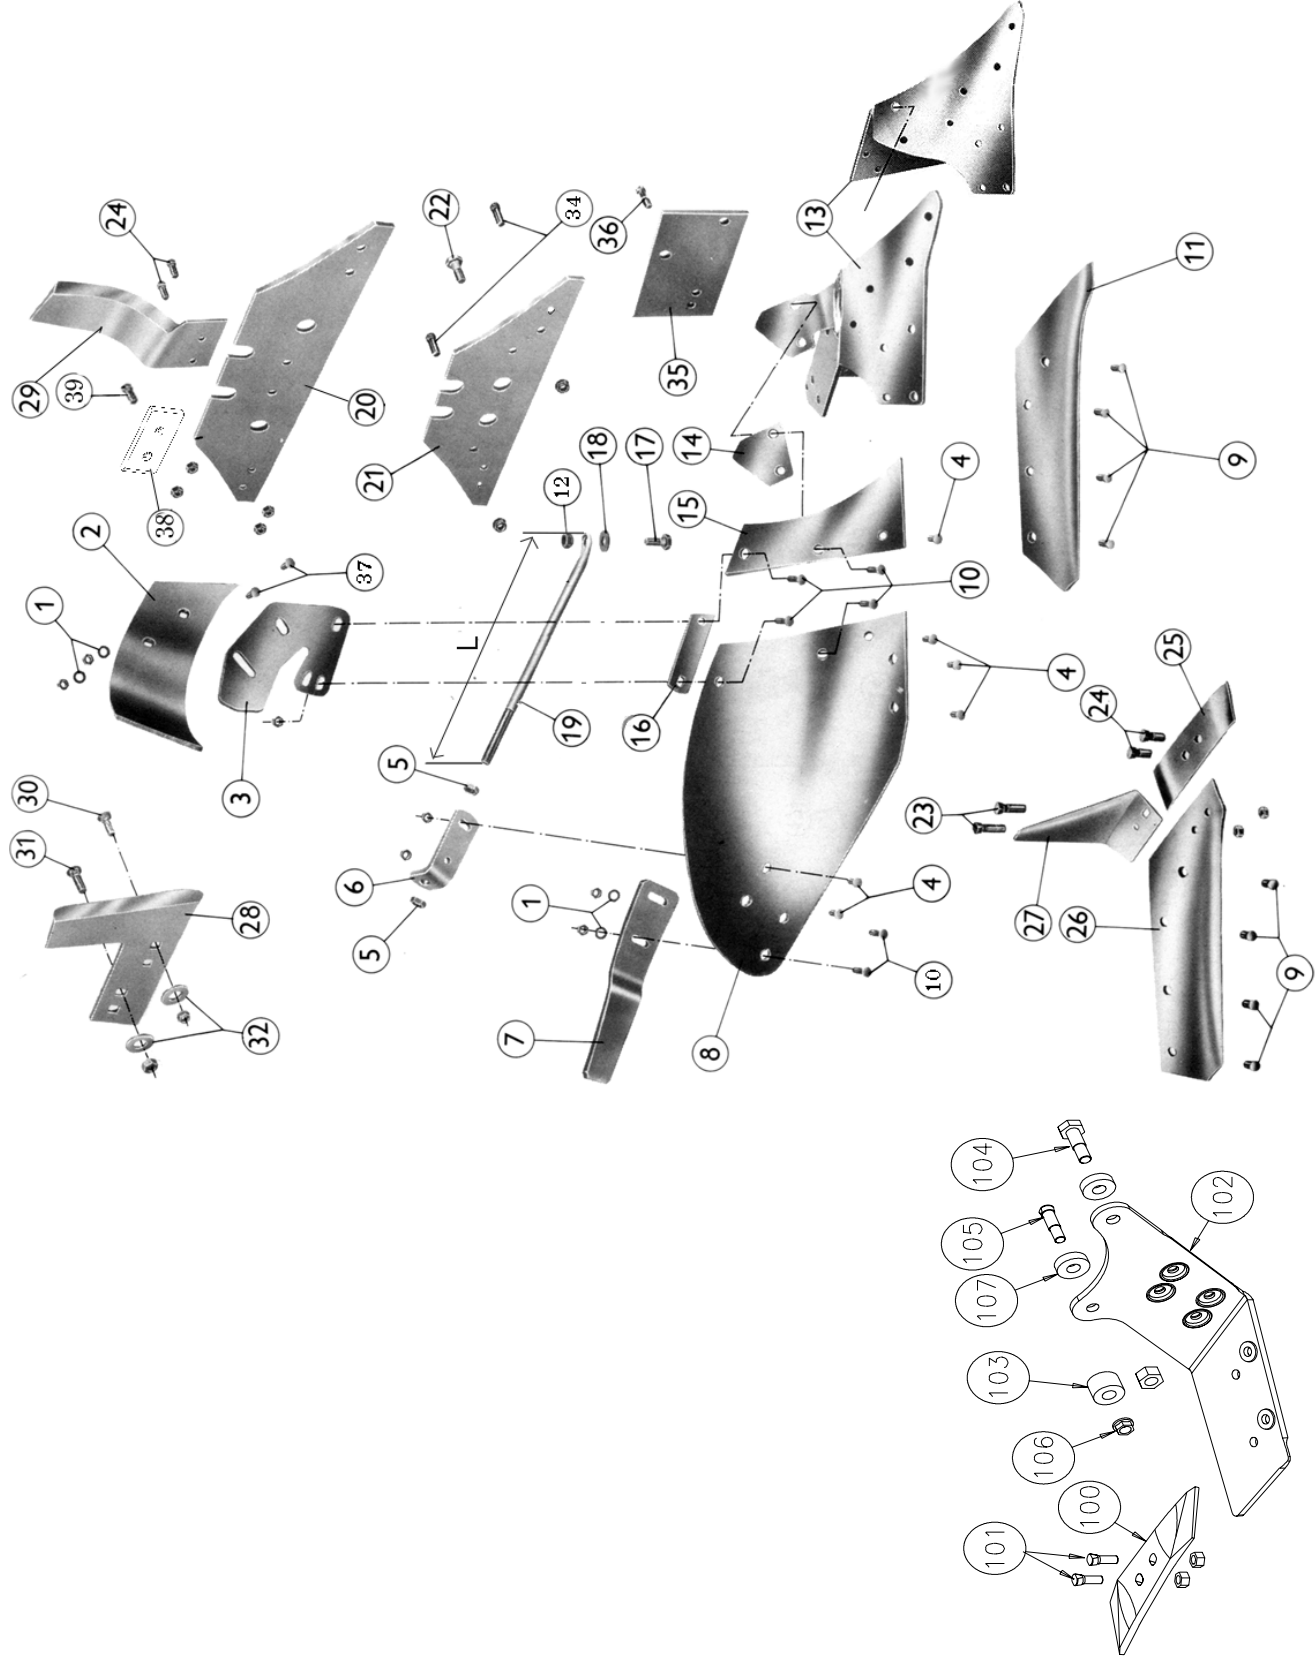

1	KK 01 29 19	Washer		KK 07 32 31	Shinpiece no. 19, L	KK 07 03 93	Extra stay L for body no. 19 A - saddle cpl. w. bracket (pos. 6) (From 01.12.95)
2	KK 07 33 00	Trashboard, R		KK 07 32 39	Connecting piece no. 12 and 15, R	20	Landside, long, R + L
	KK 07 33 01	Trashboard, L		KK 07 32 40	Connecting piece no. 12 and 15, L	21	Landside, short, R + L
	KK 07 06 40	Trashboard, R cpl.		KK 07 32 66	Connecting piece no. 19, R	22	Hex screw M16 x 27 mm
	KK 07 06 41	Trashboard, L cpl.		KK 07 32 67	Connecting piece no. 19, L	23	Cone screw M12 x 38 mm w/nut
3	KK 07 06 42	Trashboard, R + L cpl.		KK 03 27 50	Hex screw M16 x 50 mm w/nut (for use with two stays)	24	Cone screw M12 x 34 mm w/nut
	KK 07 33 10	Bracket, R		KK 03 27 35	Hex screw M16 x 35 mm w/nut (for use with one stay only)	25	Reversible point, R
4	KK 07 33 11	Bracket, L		KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)	26	Reversible point, L
5	KK 03 31 00	Oval screw M12 x 30 mm w/nut		KK 07 38 05	Stay R + L for body no. 12 and 15 E - saddle, L = 540 (And no. 19 before 12.01.95)	27	Share 14", R
6	KK 01 58 34	Nut M20 mm		KK 07 38 31	Stay R + L for body no. 19 E - saddle, L = 730 (From 12.01.95)	28	Share 14", L
7	KK 07 38 00	Bracket, R		KK 07 38 04	Stay R + L for body no. 12 and 15 A - saddle, L = 550 (And no. 19 before 12.01.95)	29	Share 16", R
8	KK 07 38 01	Bracket, L		KK 07 38 26	Stay R + L for body no. 19 A - saddle, L = 770 (From 12.01.95)	30	Share 16", L
9	KK 05 33 87	Mouldboard extention, R		KK 07 38 26	Extra stay R + L, no. 15 E - saddle L = 770 (From 01.12.96)	31	Share 18", R
10	KK 06 33 88	Mouldboard extention, L		KK 07 03 88	Extra stay R for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	32	Share 18", L
11	KK 07 32 36	Mouldboard no. 12, R		KK 07 03 89	Extra stay L for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	33	Share knife, R
	KK 07 32 37	Mouldboard no. 12, L		KK 07 38 29	Extra stay R + L, no. 15 A - saddle L = 785 (From 01.12.96)	34	Share knife, L
	KK 07 32 24	Mouldboard no. 15, R		KK 07 03 98	Extra stay R for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	35	Landside knife, R w/nuts
	KK 07 32 25	Mouldboard no. 15, L		KK 07 03 99	Extra stay L for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	36	Landside knife, L w/nuts
	KK 07 32 90	Mouldboard no. 19, R		KK 07 38 42	Extra stay R + L, no. 19 E - saddle L = 570 (From 01.12.95)	37	Furrow widener, R
	KK 07 32 91	Mouldboard no. 19, L		KK 07 03 96	Extra stay R for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)	38	Furrow widener, L
12	KK 01 33 32	Cone screw M14 x 34 mm w/nut		KK 07 03 97	Extra stay L for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)	39	Screw M14 x 50 mm w/nut
13	KK 03 31 07	Oval screw M12 x 35 mm w/nut		KK 07 38 04	Extra stay R + L, no. 19 A - saddle L = 550 (From 01.12.95)	40	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)
	KK 07 30 62	Share 14", R		KK 07 03 92	Extra stay R for body no. 19 A - saddle cpl. w. bracket (pos. 6) (From 01.12.95)	41	Screw M16 x 56 mm w/nut (for E-saddle) (From 01.02.00)
	KK 07 30 63	Share 14", L				42	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 30 64	Share 16", R				43	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
	KK 07 30 65	Share 16", L				44	Washer 17 x 40 x 4.58 mm
14	KK 06 20 25	Nut M16 mm				45	Cone screw M14 x 34 mm w/nut
15	KK 07 34 35	Saddle, R (for E-saddle)				46	Plate for On-Land ploughs
	KK 07 34 36	Saddle, L (for E-saddle)				47	Plate for On-Land ploughs cpl.
	KK 07 34 40	Saddle, R (for A-saddle)				48	Screw M14 x 45 mm w/nut
	KK 07 34 41	Saddle, L (for A-saddle)				49	Oval screw M12 x 35 mm
	KK 07 34 17	Connecting plate no. 12 and 15, R				50	Wearing plate
	KK 07 34 18	Connecting plate no. 12 and 15, L				51	Cone screw M14 x 34 mm
15	KK 07 32 41	Shinpiece no. 12, R					
	KK 07 32 42	Shinpiece no. 12, L					
	KK 07 32 27	Shinpiece no. 15, R					
	KK 07 32 28	Shinpiece no. 15, L					
	KK 07 32 30	Shinpiece no. 19, R					

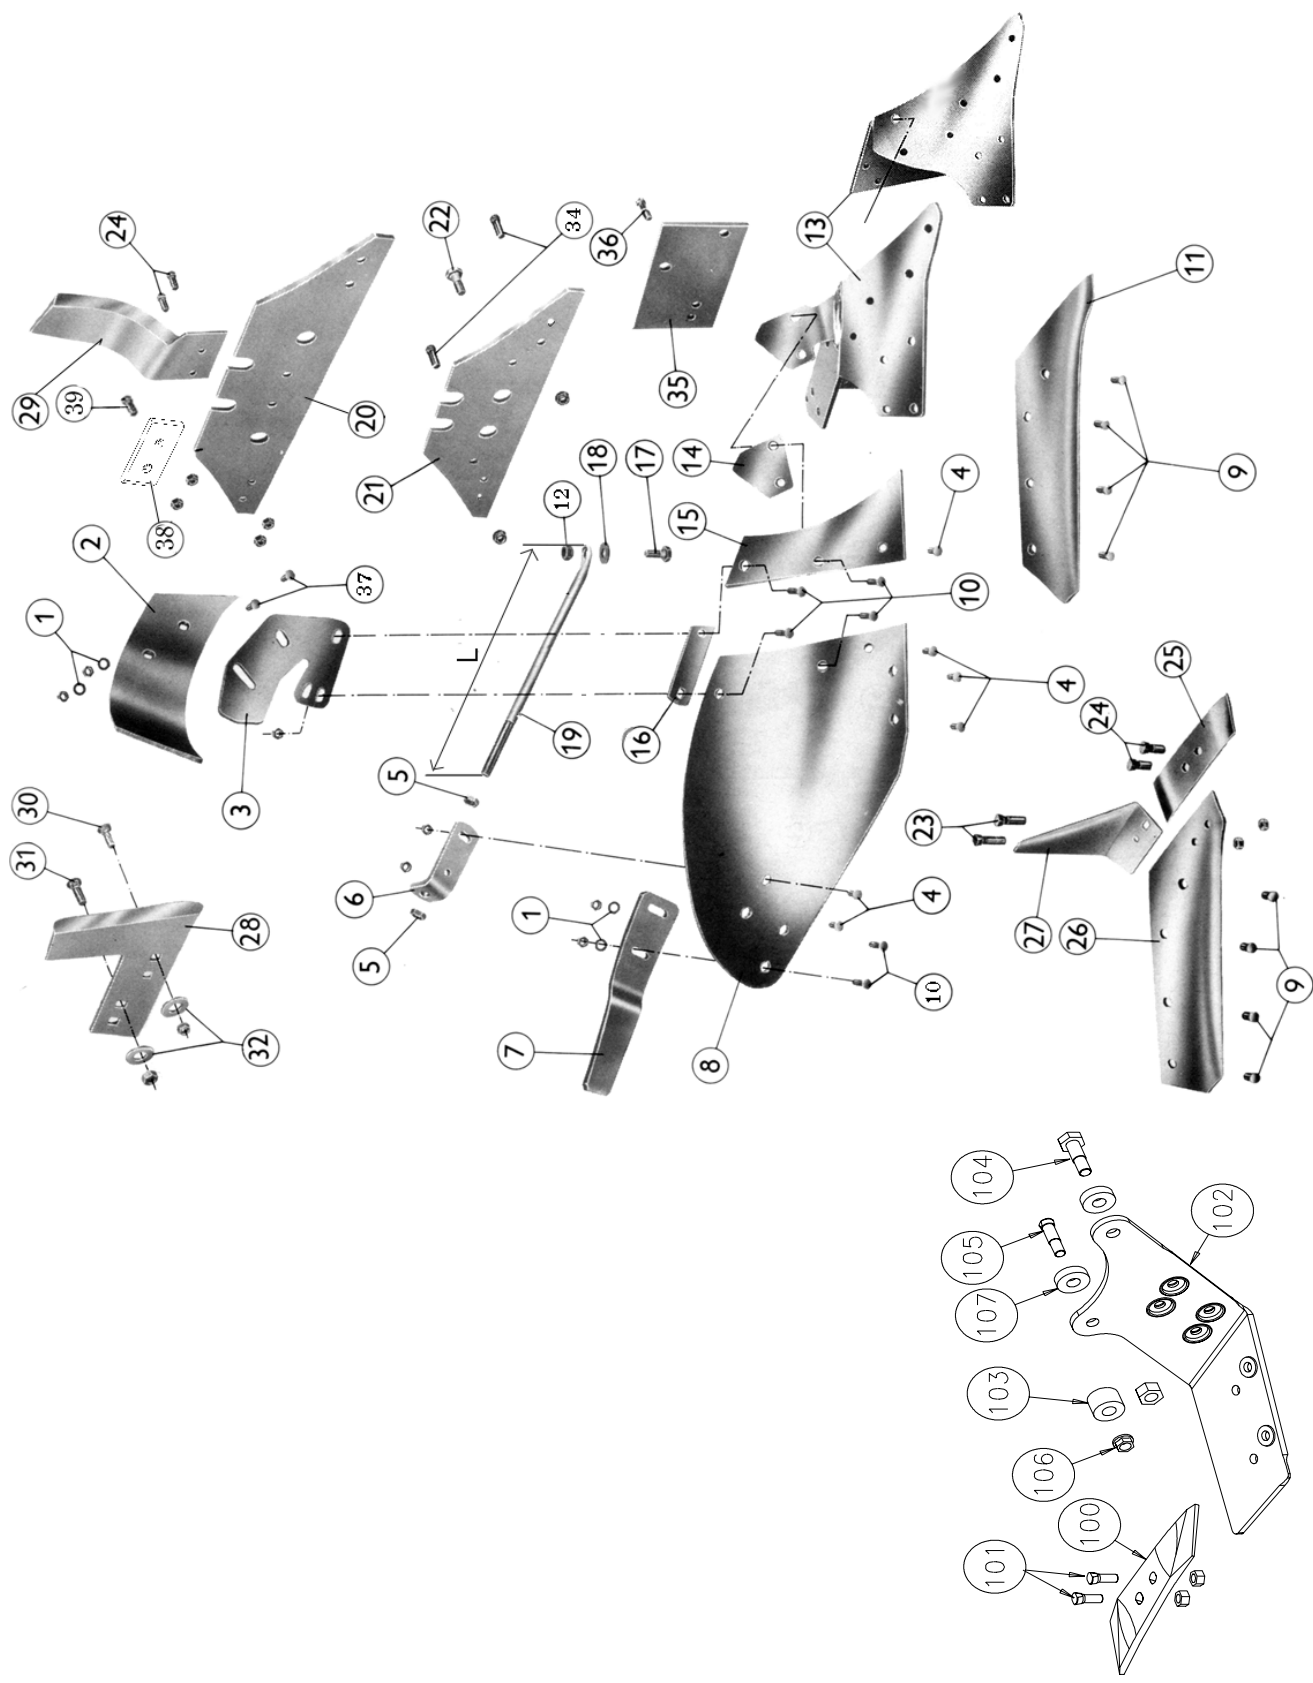


Pos. 100 - 107		Eco-share from 01.04.00
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)

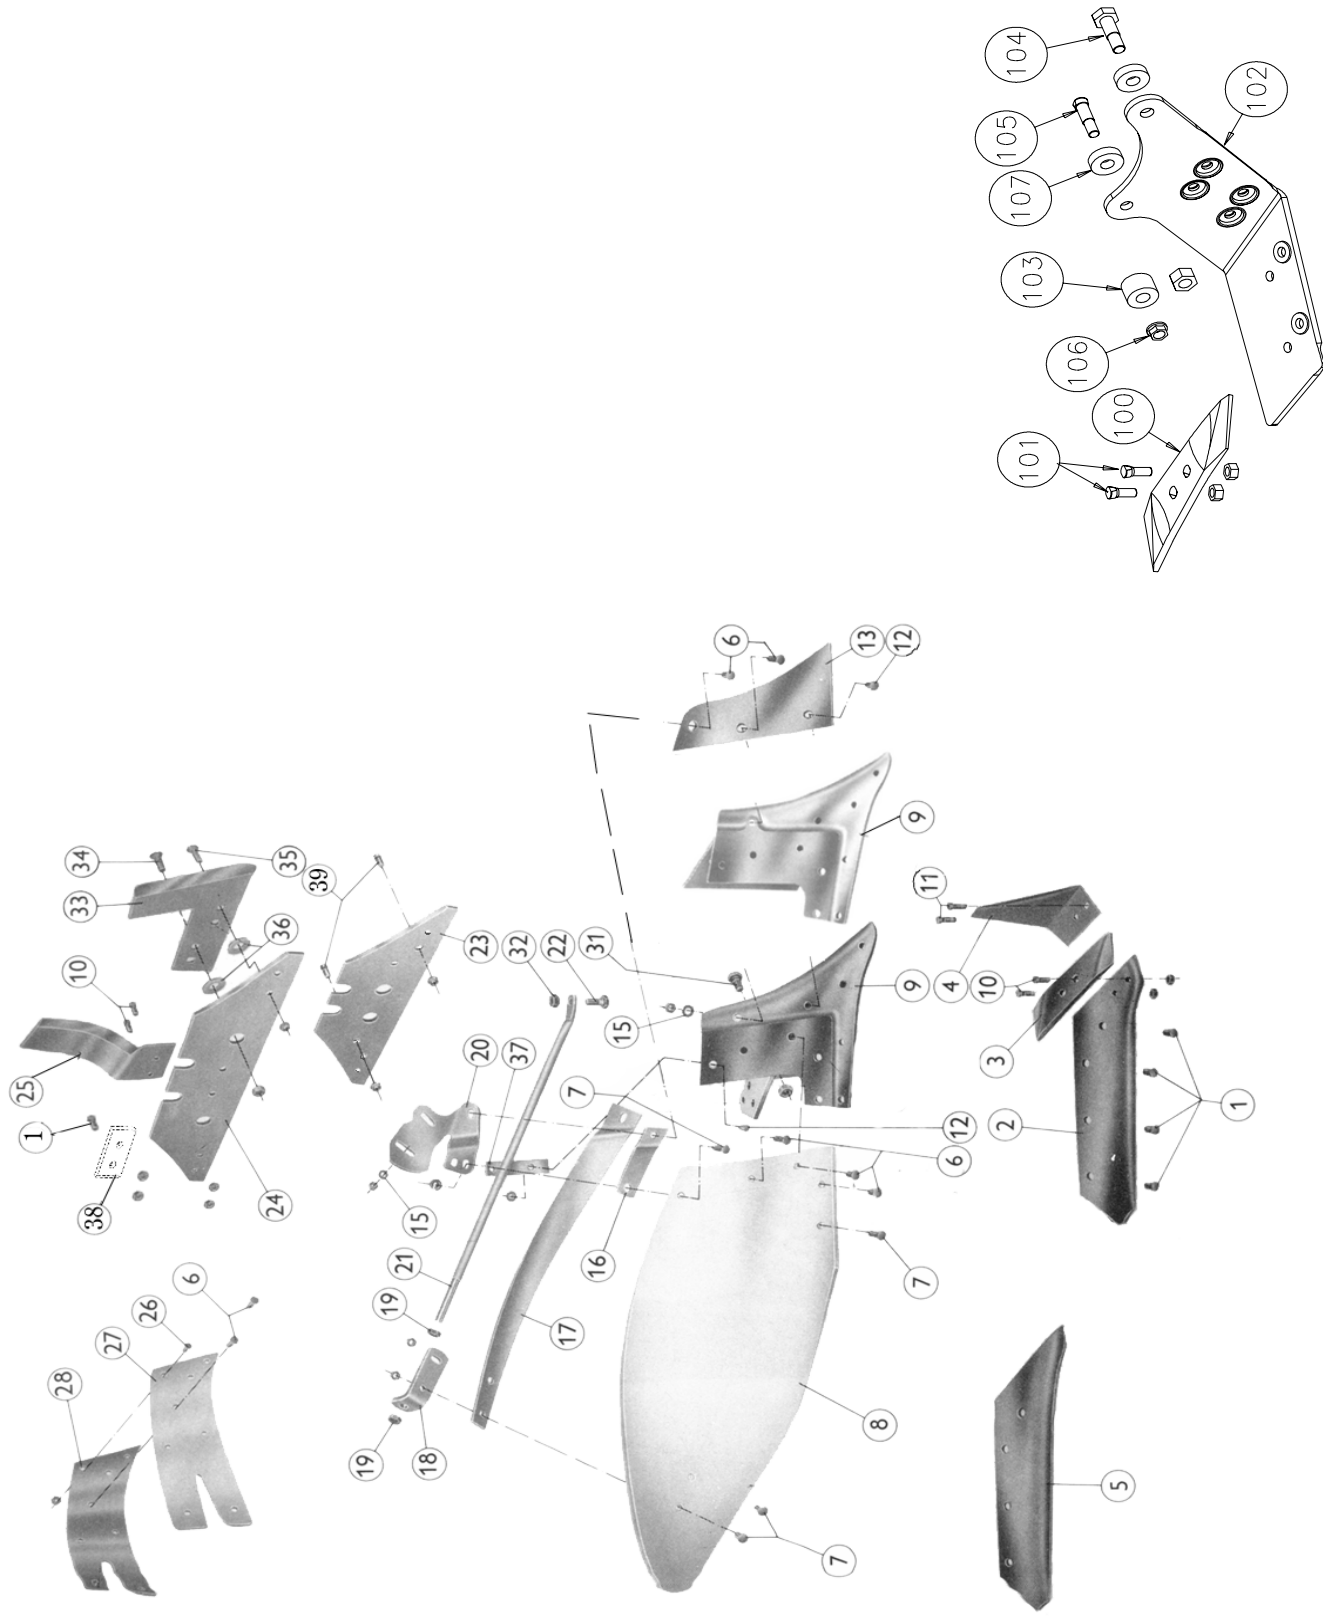


494 Body no 14 (Plastic mouldboard)




1	KK 01 33 32	Cone screw M14 x 34 mm w/ flange nut	21	KK 07 38 29	Stay (for E-saddle)	KK 01 01 56	Bushing (for ploughs w/ A-beam)
2	KK 07 30 54	Share 14" w/ reversible point, R	22	KK 07 38 26	Stay (for A-saddle)	KK 03 27 40	Hex screw M16 x 40 mm w/ nut (for ploughs w/ E-saddle) (Before 01.03.00)
	KK 07 30 55	Share 14" w/ reversible point, L	23	KK 03 27 35	Hex screw M16 x 35 mm w/ nut		
	KK 07 30 56	Share 16" w/ reversible point, R	24	KK 07 36 08	Landside, short	KK 03 27 50	Hex screw M16 x 50 mm w/ nut (for ploughs w/ E-saddle) (From 01.03.00)
	KK 07 30 57	Share 16" w/ reversible point, L	25	KK 07 36 09	Landside, long		
	KK 07 30 80	Share 18" w/ reversible point, R		KK 07 36 15	Furrow widener, R		
	KK 07 30 81	Share 18" w/ reversible point, L		KK 07 36 16	Furrow widener, L		
3	KK 05 30 90	Reversible point, R	26	KK 03 30 04	Oval screw M10 x 20 mm w/ nut	KK 03 27 65	Hex screw M16 x 65 mm w/ nut (for ploughs w/ share bolt beam)
	KK 06 30 90	Reversible point, L	27	KK 07 33 50	Trashboard plastic, R	KK 03 27 75	Hex screw M16 x 75 mm w/ nut (for ploughs w/ A-beam)
4	KK 07 30 91	Share knife, R		KK 07 33 51	Trashboard plastic, L		
	KK 07 30 92	Share knife, L	28	KK 07 33 52	Support, R	KK 01 33 46	Cone screw M14 x 45 mm w/ flange nut (for ploughs w/ E-saddle) (Before 01.03.00)
5	KK 07 30 62	Share 14", R		KK 07 33 53	Support, L		
	KK 07 30 63	Share 14", L	29	KK 05 33 87	Mouldboard extension, R	KK 01 33 61	Cone screw M14 x 60 mm w/ flange nut (for ploughs w/ E-saddle) (From 01.03.00)
	KK 07 30 64	Share 16", R		KK 06 33 88	Mouldboard extension, L		
	KK 07 30 65	Share 16", L	31	KK 03 27 30	Hex screw M16 x 13 mm w/ nut	KK 01 33 85	Cone screw M14 x 85 mm w/ flange nut (for ploughs w/ share bolt beam and A-beam)
6	KK 03 31 18	Oval screw M12 x 40 mm w/ nut	32	KK 06 20 25	Nut M16 mm		
7	KK 03 31 19	Oval screw M12 x 50 mm w/ nut	33	KK 07 30 88	Landside knife w/ nuts, R		
8	KK 07 32 78	Mouldboard plastic, R		KK 07 30 89	Landside knife w/ nuts, L	KK 01 60 15	Flange nut M14
	KK 07 32 79	Mouldboard plastic, L	34	KK 03 32 51	Screw M16 x 50 mm w/ nut (for E-saddle) (Before 01.02.00)	KK 01 29 29	Washer (for ploughs w/ E-saddle) (From 01.03.00)
9	KK 07 34 70	Saddle, R (for E-saddle)		KK 03 32 56	Screw M16 x 55 mm w/ nut (for E-saddle) (From 01.02.00)		
	KK 07 34 71	Saddle, L (for E-saddle)		KK 03 32 86	Screw M16 x 85 mm w/ nut (for A-saddle) (Before 01.02.00)		
	KK 07 34 64	Saddle, R (for A-saddle)		KK 03 32 95	Screw M16 x 95 mm w/ nut (for A-saddle) (From 01.02.00)		
	KK 07 34 65	Saddle, L (for A-saddle)		KK 03 31 74	Screw M14 x 45 mm w/ nut		
10	KK 01 32 28	Cone screw M12 x 34 mm w/ nut	35	KK 03 31 74	Screw M14 x 45 mm w/ nut		
11	KK 01 32 34	Cone screw M12 x 38 mm w/ nut	36	KK 01 29 22	Washer 17 x 40 x 4.58 mm		
12	KK 03 31 00	Oval screw M12 x 30 mm w/ nut	37	KK 07 33 54	Supporting piece		
13	KK 07 32 72	Shin piece, R	38	KK 07 36 14	Wearing plate		
15	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm	39	KK 01 33 33	Cone screw M14 x 34 mm		
16	KK 07 32 75	Clamp, R			Eco-share from 01.04.00		
	KK 07 32 76	Clamp, L			Reversible point, R		
17	KK 07 33 38	Support, R	100	KK 05 30 90	Reversible point, L		
	KK 07 33 39	Support, L		KK 06 30 90	Cone screw M12 x 34 mm w/ nut		
18	KK 07 38 00	Bracket for stay, R	101	KK 01 32 28	Eco-share, R		
	KK 07 38 01	Bracket for stay, L	102	KK 07 36 34	Eco-share, L		
19	KK 01 58 34	Nut M20 mm		KK 07 36 35	Bushing (for ploughs w/ share bolt beam)		
20	KK 07 33 28	Bracket for trashboard, R	103	KK 01 01 55			
	KK 07 33 29	Bracket for trashboard, L					

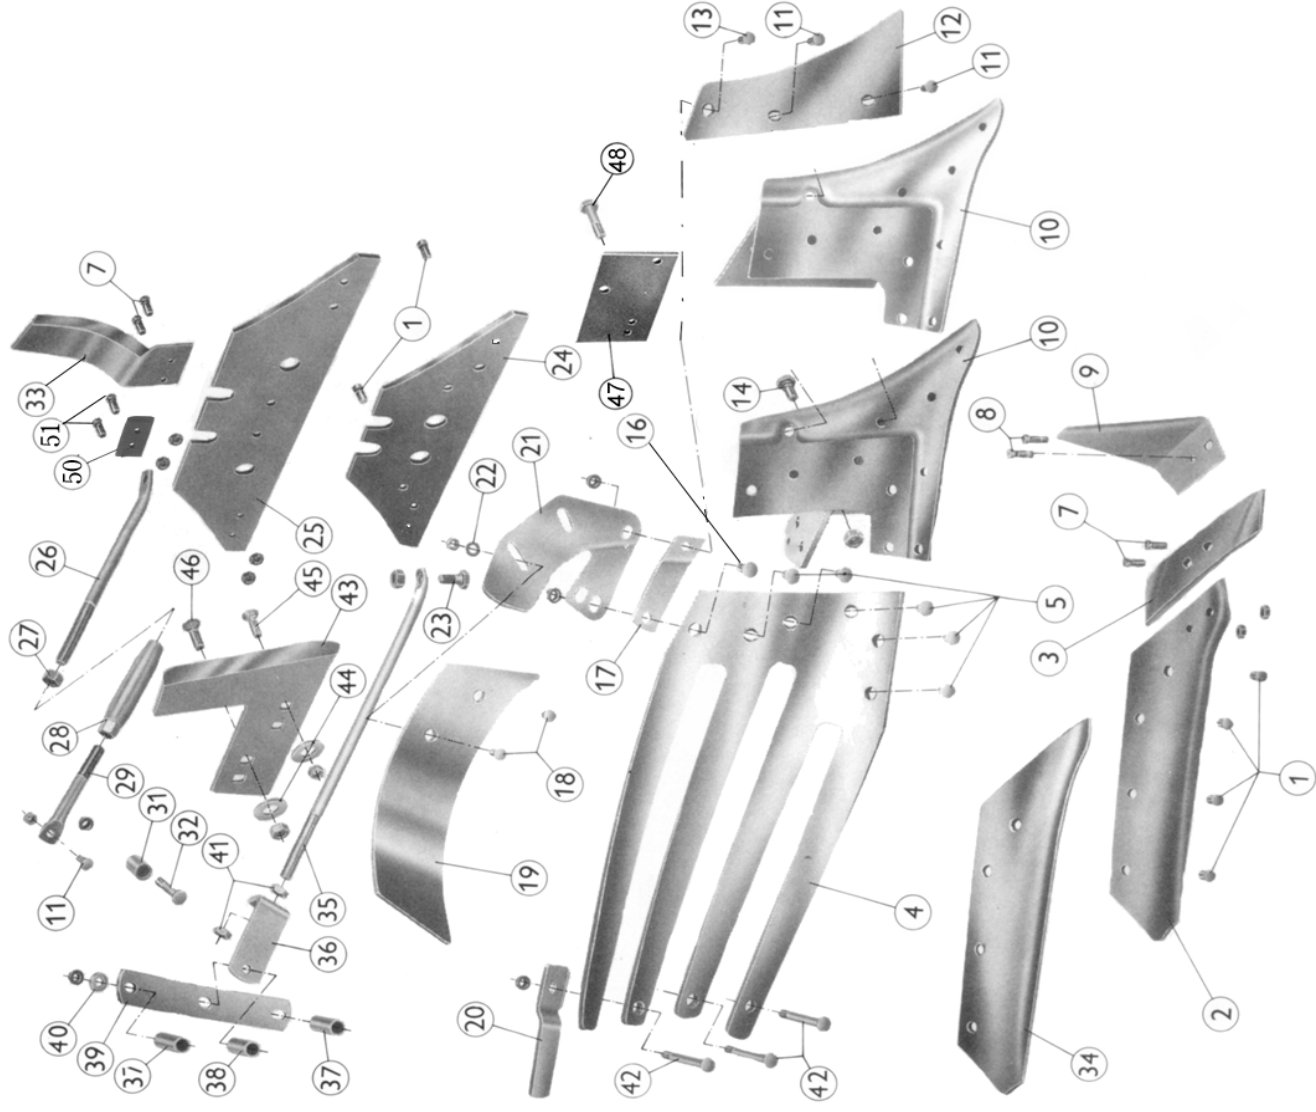

1	KK 01 33 32	Cone screw M14 x 34 mm w/nut	21	KK 07 33 03	Bracket, R	43	KK 07 30 88	Landside knife w/nut, R
2	KK 07 30 54	Share 14", R		KK 07 33 04	Bracket, L		KK 07 30 89	Landside knife w/nut, L
	KK 07 30 55	Share 14", L	22	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm	44	KK 01 29 22	Washer 17 x 40 x 4.58 mm
	KK 07 30 56	Share 16", R	23	KK 03 27 40	Hex screw M16 x 40 mm w/nut	45	KK 03 31 75	Screw M14 x 50 mm w/nut
	KK 07 30 57	Share 16", L	24	KK 07 36 08	Landside, short, R + L	46	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 80	Share 18", R	25	KK 07 36 09	Landside, long, R + L		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
	KK 07 30 81	Share 18", L	26	KK 07 38 22	Stay front (for E-saddle)	47	KK 06 36 07	Plate (For On-land ploughs only)
3	KK 05 30 90	Reversible point, R		KK 07 38 16	Stay front (for A-saddle)		KK 07 36 07	Plate cpl. (For On-land ploughs only)
	KK 06 30 90	Reversible point, L	27	KK 01 58 30	Nut M20 mm (Before 01.06.93)	48	KK 01 33 46	Screw M14 x 45 mm w/nut
4	KK 07 32 45	Mouldboard, R	28	KK 07 38 17	Stay (Before 01.06.93)	50	KK 07 36 14	Wearing plate
	KK 07 32 46	Mouldboard, L	29	KK 07 38 23	Stay, rear (for E-saddle) (Before 01.06.93)	51	KK 01 33 32	Cone screw M14 x 34 mm
5	KK 03 31 73	Oval screw M14 x 38 mm w/nut		KK 07 38 15	Stay, rear (for A-saddle) (Before 01.06.93)			
7	KK 01 32 28	Cone screw M12 x 34 mm w/nut		KK 07 38 20	Stay, R cpl. (for E-saddle) (Before 01.06.93)			
8	KK 01 32 34	Cone screw M12 x 38 mm w/nut			Stay, L cpl. (for E-saddle) (Before 01.06.93)			
9	KK 07 30 91	Share knife, R		KK 07 38 21	Stay, L cpl. (for E-saddle) (Before 01.06.93)			
	KK 07 30 92	Share knife, L			Stay, R cpl. (for A-saddle) (Before 01.06.93)			
10	KK 06 30 91	Share knife, R (for Sweden)		KK 07 38 10	Stay, R cpl. (for A-saddle) (Before 01.06.93)			
	KK 06 30 92	Share knife, L (for Sweden)			Stay, L cpl (for A-saddle) (Before 01.06.93)			
	KK 07 34 70	Saddle, R (for E-saddle)		KK 07 38 11	Spacer			
	KK 07 34 71	Saddle, L (for E-saddle)	31	KK 07 15 00	Oval screw M14 x 85 mm w/nut			
	KK 07 34 64	Saddle, R (for A-saddle)	32	KK 03 31 81	Furrow widener, R			
	KK 07 34 65	Saddle, L (for A-saddle)	33	KK 07 36 15	Furrow widener, L			
11	KK 03 31 00	Oval screw M12 x 30 mm w/nut		KK 07 30 16	Share 14", R			
12	KK 07 32 72	Shinpiece, R	34	KK 07 30 62	Share 14", L			
	KK 07 32 73	Shinpiece, L		KK 07 30 63	Share 16", R			
13	KK 03 31 08	Oval screw M12 x 40 mm w/nut		KK 07 30 64	Share 16", L			
14	KK 03 27 30	Hex screw M16 x 30 mm w/nut		KK 07 30 65	Share 16", L			
16	KK 03 31 75	Oval screw M14 x 50 mm w/nut		KK 07 38 05	Stay (for E-saddle) (From 01.06.93)			
17	KK 07 32 75	Connecting piece, R	35	KK 07 38 03	Stay (for A-saddle) (From 01.06.93)			
	KK 07 32 76	Connecting piece, L	36	KK 07 38 34	Bracket for stay, R+L			
18	KK 03 31 07	Oval screw M12 x 35 mm w/nut	37	KK 07 38 35	Spacing tube 27 x 20.5 x 80 mm			
19	KK 07 33 00	Trashboard, R	38	KK 07 38 36	Spacing tube 27 x 20.5 x 69 mm			
	KK 07 33 01	Trashboard, L	39	KK 07 38 12	Bracket for stay, R			
	KK 07 02 92	Trashboard, R cpl.		KK 07 38 13	Bracket for stay, L			
	KK 07 02 93	Trashboard, L cpl.	40	KK 01 29 21	Washer 14 x 30 x 7.5 mm			
	KK 07 02 94	Trashboard, R + L cpl.	41	KK 01 58 34	Nut M20 mm			
20	KK 07 33 32	Mouldboard extension, R (extra)	42	KK 03 31 85	Oval screw M14 x 130 mm w/flangenut			
	KK 07 33 33	Mouldboard extension,, L (extra)						

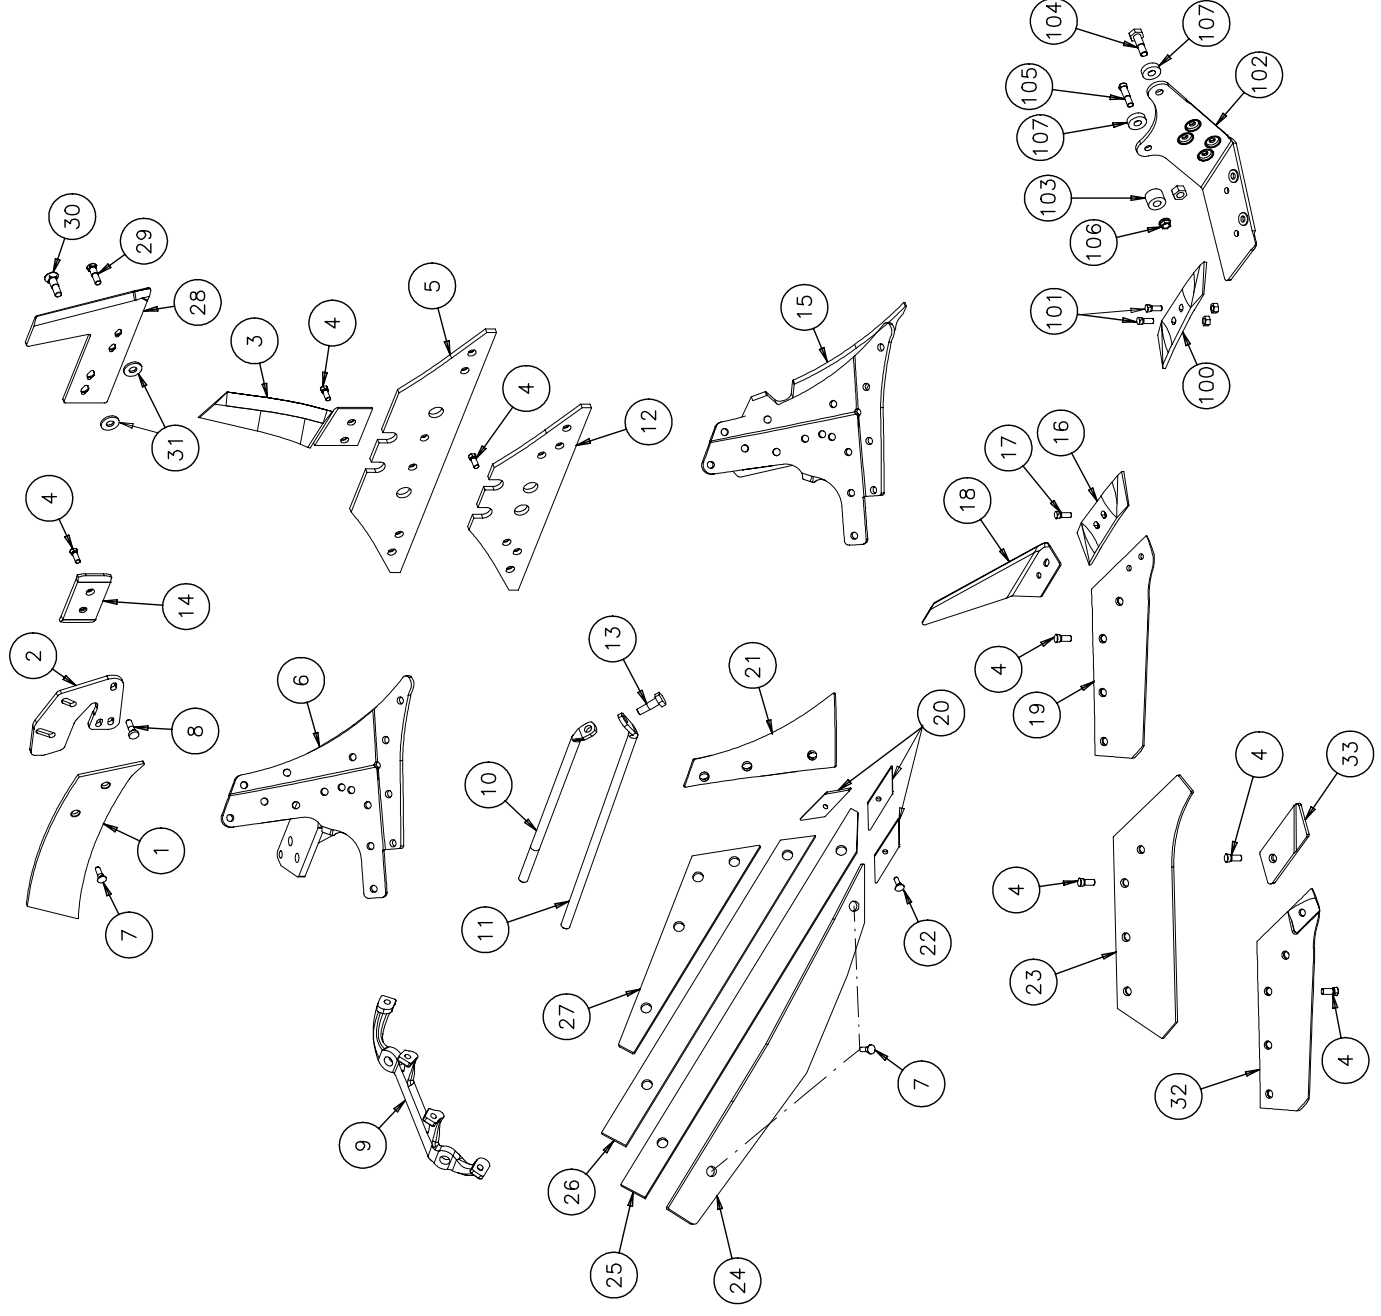


1	KK 07 33 00	Trashboard, R	17	KK 01 32 28	Cone screw M12 x 34 mm w/nut	KK 08 32 23	Slat no 3, L
2	KK 07 33 01	Trashboard, L	18	KK 07 30 91	Share knife, R	KK 08 32 14	Slat no 4, R
	KK 08 33 00	Bracket, R		KK 07 30 92	Share knife, L	KK 08 32 24	Slat no 4, L
3	KK 08 33 01	Bracket, L		KK 06 30 91	Share knife, R (for Sweeden)	KK 07 30 88	Landside knife, R w/nuts
	KK 07 36 15	Furrow widener, R		KK 06 30 92	Share knife, L (for Sweeden)	KK 07 30 89	Landside knife, L w/nuts
4	KK 07 36 16	Furrow widener, L	19	KK 07 30 02	Share 14", R (for body no. 29)	KK 03 31 75	Screw M14 x 50 mm w/nut
5	KK 01 33 32	Cone screw M14 x 34 mm w/nut		KK 07 30 03	Share 14", R (for body no. 29)	KK 03 32 51	Screw M16 x 50 mm w/nut
6	KK 07 36 09	Landside, long R + L		KK 07 30 54	Share 14", R (for body no. 30)		(for E-saddle) (Before 01.02.00)
	KK 08 34 17	Saddle R, E-saddle (for body no. 29)		KK 07 30 55	Share 14", L (for body no. 30)	KK 03 32 56	Screw M16 x 56 mm w/nut
	KK 08 34 18	Saddle L, E-saddle (for body no. 29)		KK 07 30 04	Share 16", R (for body no. 29)		(for E-saddle) (From 01.02.00)
	KK 08 34 08	Saddle R, E-saddle (for body no. 30)		KK 07 30 05	Share 16", L (for body no. 29)	KK 03 32 86	Screw M16 x 85 mm w/nut
	KK 08 34 09	Saddle L, E-saddle (for body no. 30)		KK 07 30 56	Share 16", R (for body no. 30)		(for A-saddle) (Before 01.02.00)
7	KK 03 31 16	Oval screw M12 x 35 mm w/nut		KK 07 30 57	Share 16", L (for body no. 30)	KK 03 32 95	Screw M16 x 95 mm w/nut
		(for body no. 29)		KK 07 30 06	Share 18", R (for body no. 29)		(for A-saddle) (From 01.02.00)
	KK 03 31 07	Oval screw M12 x 35 mm w/nut		KK 07 30 07	Share 18", L (for body no. 29)	KK 01 29 22	Washer 17 x 40 x 4.58 mm
		(for body no. 30)		KK 07 30 80	Share 18", R (for body no. 30)	KK 07 30 42	Flush fit share 14", R (for body no. 29)
8	KK 03 31 17	Oval screw M12 x 45 mm w/nut		KK 07 30 81	Share 18", L (for body no. 30)	KK 07 30 43	Flush fit share 14", L (for body no. 29)
		(for body no. 29)	20	KK 08 32 15	Connecting piece, plastic (for slat 1-2)	KK 07 30 44	Flush fit share 16", R (for body no. 29)
	KK 03 31 11	Oval screw M12 x 45 mm w/nut		KK 08 32 18	Connecting piece, plastic (for slat 2)	KK 07 30 45	Flush fit share 16", L (for body no. 29)
		(for body no. 30)			(for body no. 29)	KK 07 30 30	Flush fit point, R
9	KK 08 32 10	Slat support, R		KK 08 32 16	Connecting piece, plastic (for slat 2-3)	KK 07 30 31	Flush fit point, L
	KK 08 32 20	Slat support, L			(for body no. 30)	Pos. 100 - 107 Eco-share from 01.04.00	
10	KK 08 38 03	Stay		KK 08 32 17	Connecting piece, plastic (for slat 3-4)	KK 05 30 90	Reversible point, R
11	KK 08 38 05	Stay 1, saddle A (for body no. 29)	21	KK 07 32 30	Shinpiece, R	KK 06 30 90	Reversible point, L
	KK 08 38 06	Stay 2, saddle A (for body no. 29)		KK 07 32 31	Shinpiece, L	KK 01 32 28	Cone screw M12 x 34 mm w/nut
	KK 08 38 02	Stay, saddle A (for body no. 30)	22	KK 03 30 06	Oval screw M10 x 30 mm w/nut	KK 07 36 34	Eco-share, R
	KK 08 38 07	Stay 1, saddle E (for body no. 29)			(for body no. 29)	KK 07 36 35	Eco-share, L
	KK 08 38 08	Stay 2, saddle E (for body no. 29)		KK 03 30 16	Oval screw M10 x 30 mm w/nut	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 08 38 04	Stay, saddle E (for body no. 30)			(for body no. 30)		
12	KK 07 36 08	Landside, short R + L	23	KK 07 30 62	Share 14", R (for body no. 30)	KK 01 01 56	Bushing (for ploughs w/A-beam)
13	KK 03 27 50	Hex screw M16 x 50 mm w/nut		KK 07 30 63	Share 14", L (for body no. 30)	KK 03 27 40	Hex screw M16 x 40 mm w/nut
14	KK 07 36 14	Wearing plate		KK 07 30 64	Share 16", R (for body no. 30)		(for ploughs w/E-saddle)
15	KK 08 34 15	Saddle R, A-saddle (for body no. 29)		KK 07 30 65	Share 16", L (for body no. 30)		(Before 01.03.00)
	KK 08 34 16	Saddle L, A-saddle (for body no. 29)	24	KK 08 32 11	Slat no 1, R	KK 03 27 50	Hex screw M16 x 50 mm w/nut
	KK 08 34 06	Saddle R, A-saddle (for body no. 30)		KK 08 32 21	Slat no 1, L		(for ploughs w/E-saddle)
	KK 08 34 07	Saddle L, A-saddle (for body no. 30)	25	KK 08 32 12	Slat no 2, R		(From 01.03.00)
16	KK 05 30 90	Reversible point, R		KK 08 32 22	Slat no 2, L	KK 03 27 65	Hex screw M16 x 65 mm w/nut
	KK 06 30 90	Reversible point, L	26	KK 08 32 13	Slat no 3, R	KK 03 27 75	Hex screw M16 x 75 mm w/nut
							(for ploughs w/A-beam)

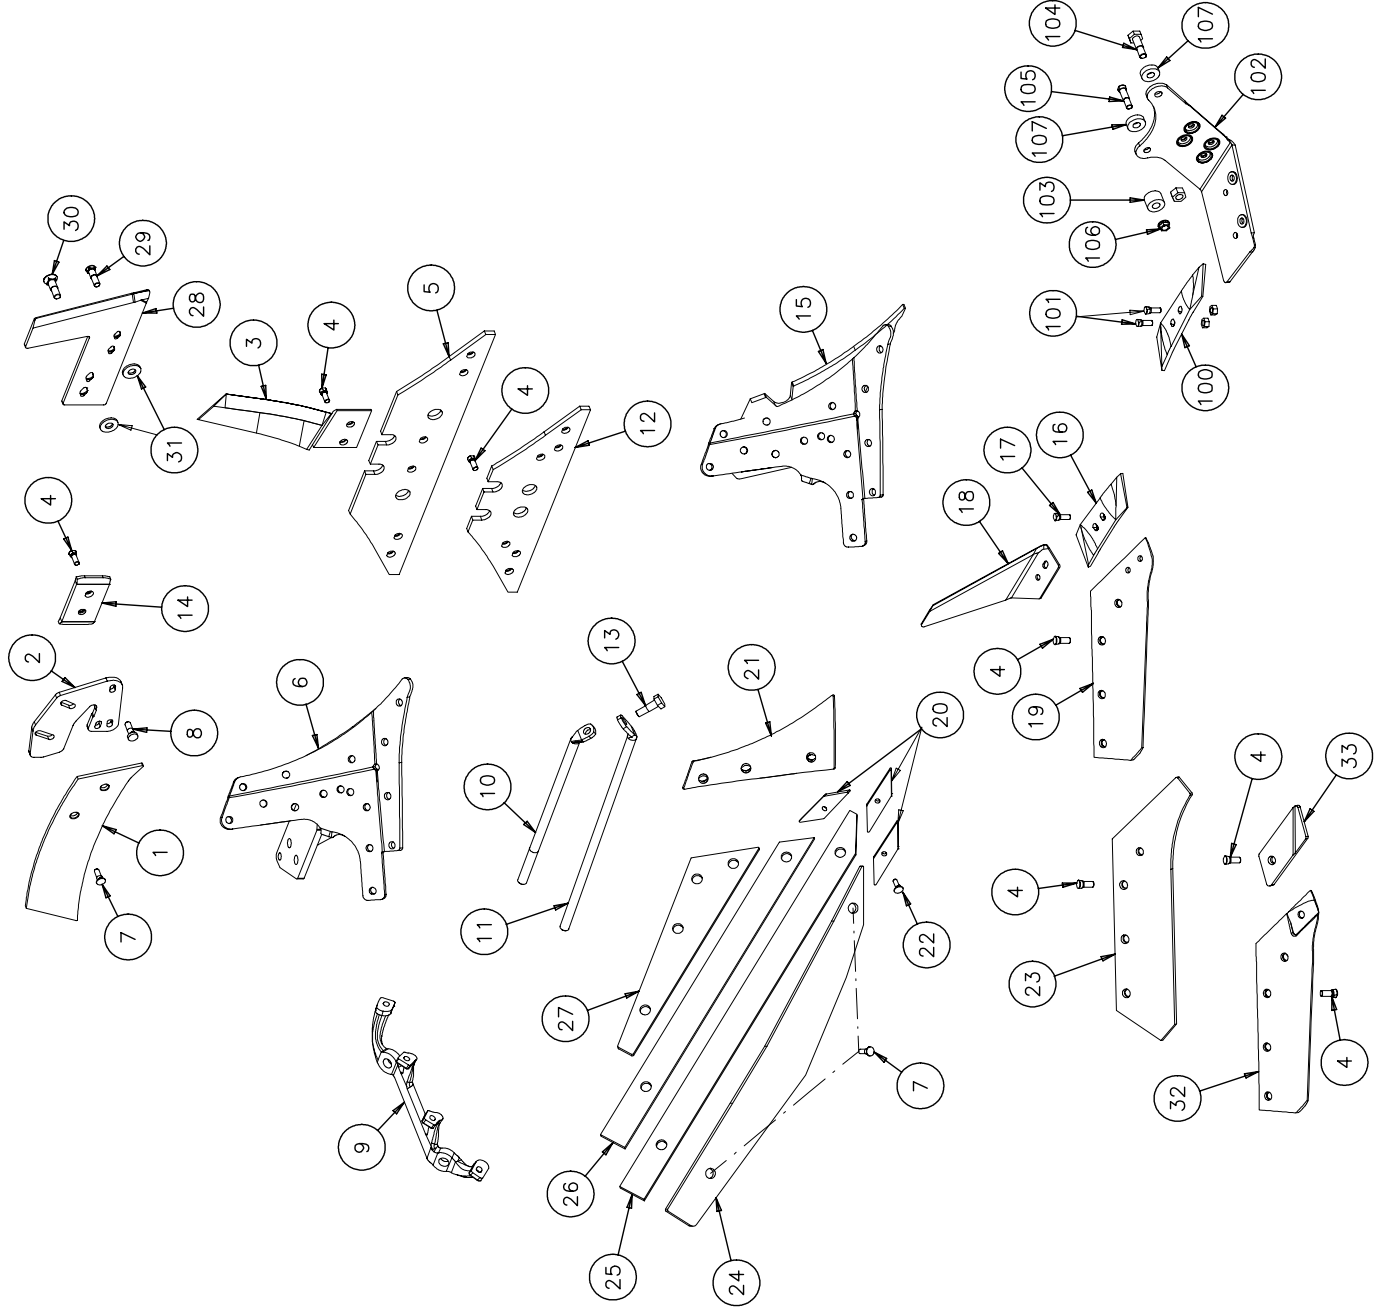

1089 Bodies no. 29 and no. 30

105	KK 01 33 46	Cone screw M14 x 45 mm w/ flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/ flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/ flange nut (for ploughs w/ share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)

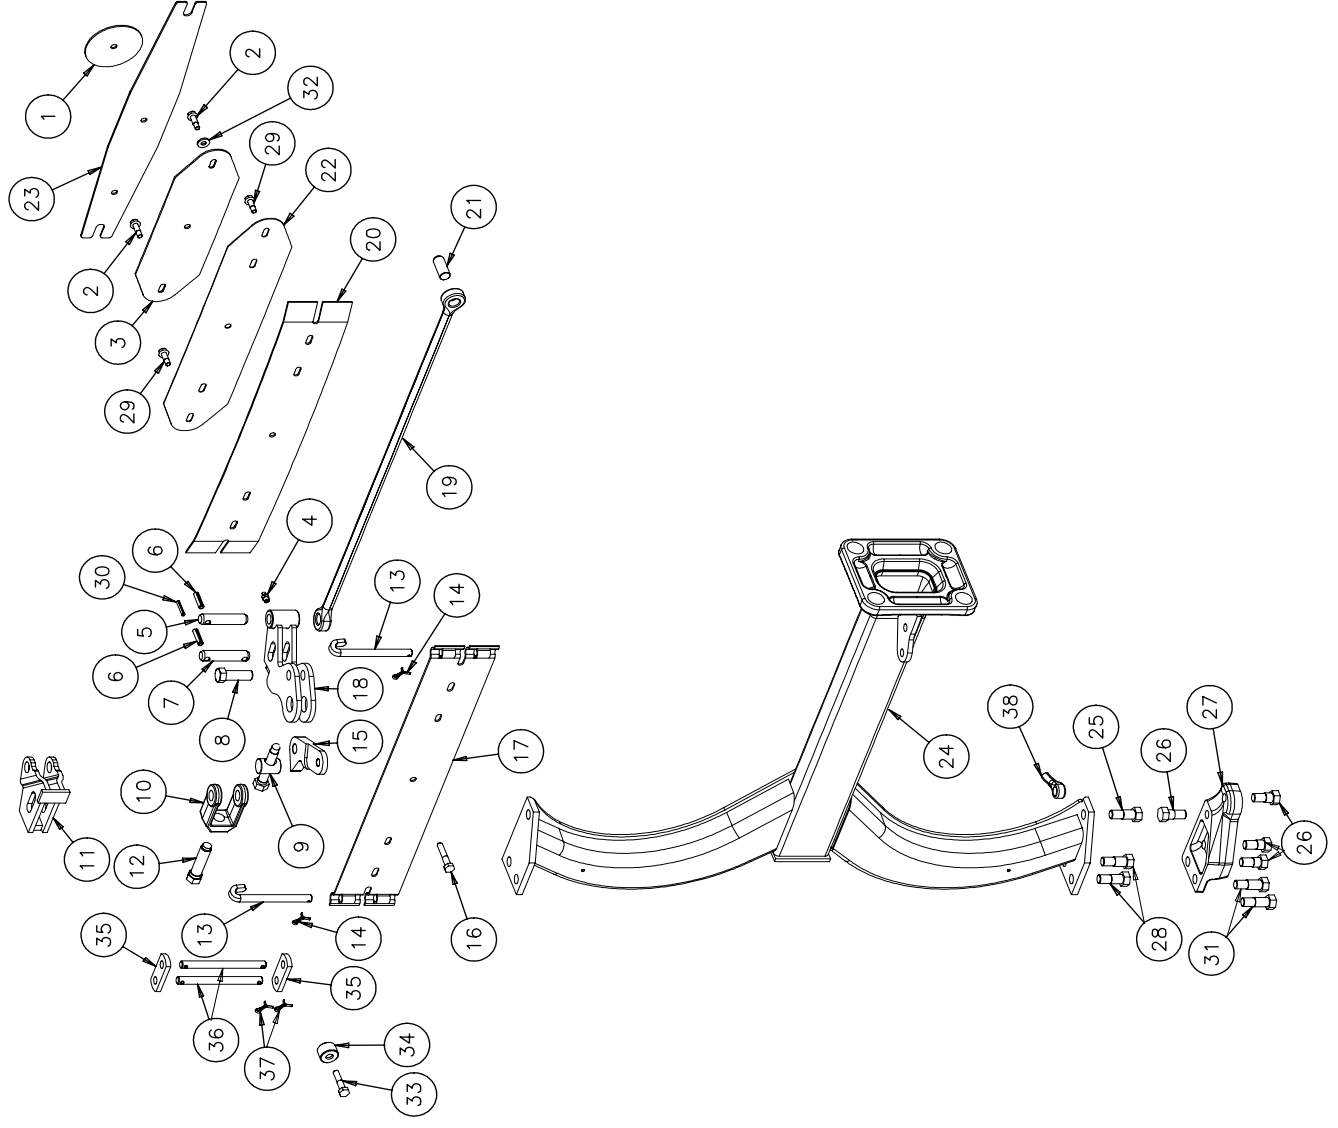



458 Auto Reset Beam





1	KK 05 70 67	Blade no 4			
2	KK 03 50 20	Hex screw w/ flange M10 x 34 mm w/ nut			
3	KK 05 70 66	Blade no 3			
4	KK 02 99 20	Grease nipple M8 x 1			
5	KK 06 70 59	Pin			
6	KK 01 10 37	Roll pin D10 x 40 mm			
7	KK 06 70 57	Pin			
8	KK 03 28 60	Hex screw M20 x 60 mm w/ nut			
9	KK 06 70 51	Adjustment screw w/ threaded piece			
10	KK 06 70 40	Holder			
11	KK 06 70 68	Bracket			
12	KK 06 70 39	Adjustment screw M24 x 90 mm			
13	KK 05 70 89	Pin			
14	KK 02 97 27	Pin	37	KK 02 97 27	Pin (for extra additional leaf spring cpl.)
15	KK 06 70 80	Spring arm			
16	KK 03 26 65	Hex screw M12 x 65 mm w/ nut			
17	KK 05 70 63	Main blade			
18	KK 06 70 60	Regulator			
19	KK 06 70 70	Tie rod			
20	KK 05 70 64	Blade no 1			
21	KK 06 70 31	Pin			
22	KK 05 70 65	Blade no 2			
23	KK 05 70 68	Blade no 5			
24	KK 06 12 80	Beam			
25	KK 03 52 09	Hex screw M20 x 50 mm w/ threaded piece			
26	KK 03 28 40	Hex screw M20 x 40 mm w/ nut			
27	KK 06 01 08	Spacer cpl. w/ hex screws R			
	KK 06 01 09	Spacer cpl. w/ hex screws L			
28	KK 03 51 65	Hex screw M20 x 50 mm w/ flange nut			
29	KK 03 50 21	Hex screw w/ flange M10 x 30.5 mm w/ nut			
30	KK 01 10 42	Roll pin D6 x 40 mm (to be mounted into roll pin 011037)			
31	KK 03 28 55	Hex screw M20 x 55 mm			
32	KK 01 29 14	Washer			
33	KK 03 26 55	Hex screw M12 x 55 mm w/ nut (for extra additional leaf spring cpl.)			
34	KK 06 70 77	Bushing (for extra additional leaf spring cpl.)			
35	KK 06 70 75	Linkage (for extra additional leaf spring cpl.)			
36	KK 06 70 76	Bolt D15.7 (for extra additional leaf spring cpl.)			

Not ill. KK 05 07 06 Leaf spring cpl. (1 x ill. no. 17, 22 and 3 + 2 x ill. no. 2, 35 and 1)
 KK 06 07 03 Leaf spring HD cpl. (1 x part no. 05 07 06 + 2 x ill. no. 23)

For LS, RL, LM, RM and RG ploughs

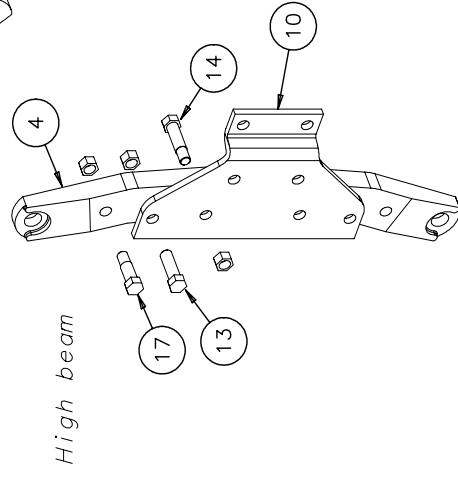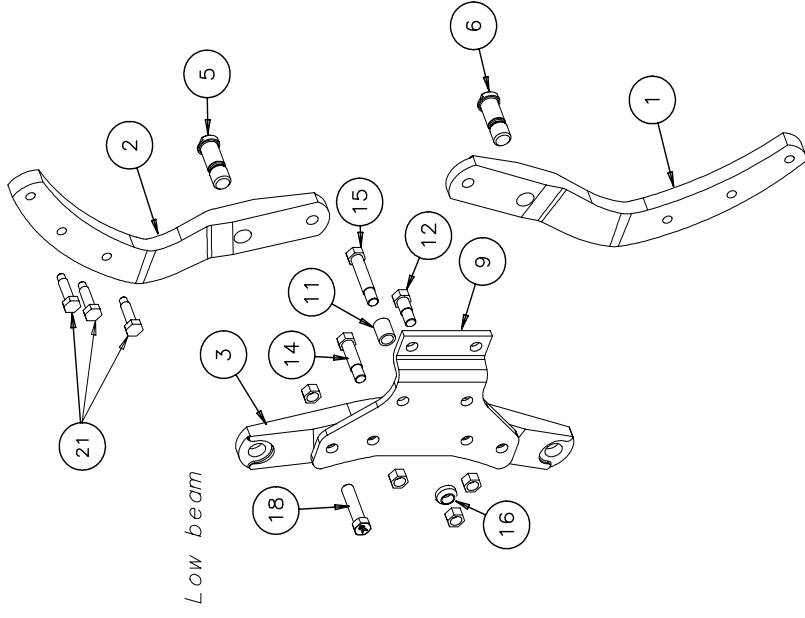


For LD, LO, RS, RX, LB and RB ploughs

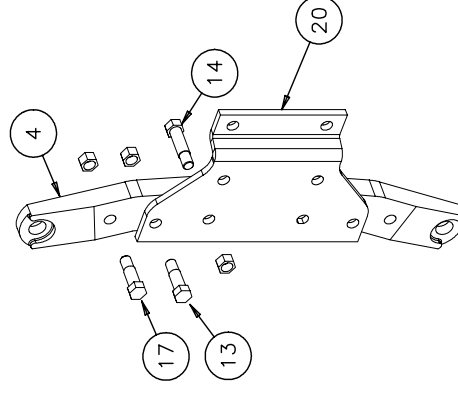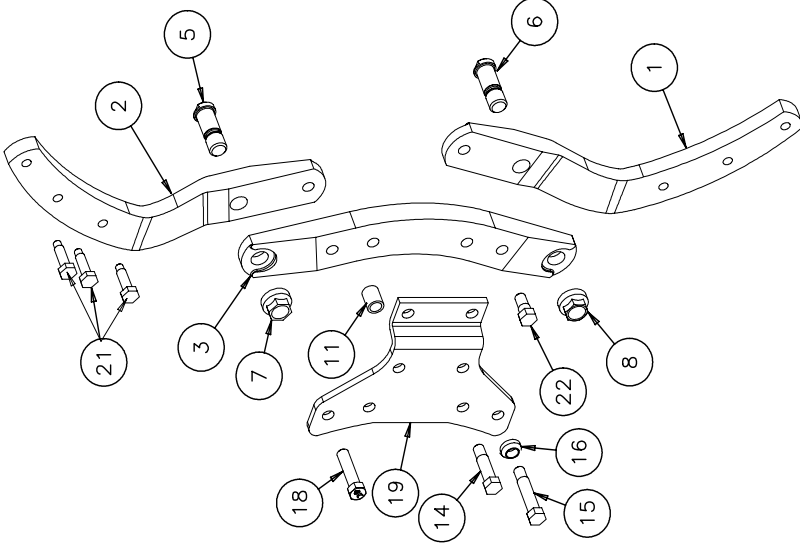

1009 Beam (Shear bolt)


1	KK 07 12 08	Beam, R (Before 15.08.01)	
	KK 07 12 72	Beam, R (From 15.08.01)	
2	KK 07 12 09	Beam, L (Before 15.08.01)	
	KK 07 12 73	Beam, L (From 15.08.01)	
3	KK 07 12 28	Support, H = 700 mm (Before 15.08.01)	
	KK 07 12 71	Support, H = 700 mm (From 15.08.01)	
4	KK 07 12 07	Support, H = 800 mm (Before 15.08.01)	
	KK 07 12 70	Support, H = 800 mm (From 15.08.01)	
5	KK 07 70 24	Main bolt M30 x 72 mm, L (Before 15.08.01)	
	KK 07 12 75	Main bolt M30 x 84 mm, L (From 15.08.01)	
6	KK 07 70 23	Main bolt M30 x 72 mm, R (Before 15.08.01)	
	KK 07 12 74	Main bolt M30 x 84 mm, R (From 15.08.01)	
7	KK 01 60 22	Nut M30, R	
8	KK 01 60 45	Nut M30, L	
9	KK 07 49 10	Plate for support, H = 700 mm (for LS, RL, LM, RM and RG ploughs only)	
10	KK 07 49 11	Plate for support, H = 800 mm (for LS, RL, LM, RM and RG ploughs only)	
11	KK 06 15 15	Bushing D28 x D20.5 x 35.2 mm	
12	KK 03 28 40	Hex screw M20 x 40 mm w/nut	
	KK 03 28 50	Hex screw M20 x 50 mm w/nut (for disc coultter, for front piece and rear beam)	
	KK 03 28 60	Hex screw M20 x 60 mm w/nut (for front piece w/disc coultter)	
13	KK 03 28 65	Hex screw M20 x 65 mm w/nut	
14	KK 03 52 15	Hex screw M20 x 80 mm w/ flange nut qual. 12.9	
	KK 03 52 16	Hex screw M20 x 90 mm w/ flange nut qual. 12.9 (for RL plough front section, rear leg only)	
15	KK 03 28 07	Hex screw M20 x 100 mm w/nut	
16	KK 06 20 20	Washer	
17	KK 03 50 60	Shear bolt M20 x 62 mm w/nut (for support H = 800 mm)	
18	KK 03 50 72	Shear bolt M20 x 81 mm w/nut (for support H = 700 mm)	
19	KK 07 15 08	Plate for support H = 700 mm (for LD, LO, RS, RX, LB and RB ploughs only)	
20	KK 07 15 29	Plate for support H = 800 mm (for LD, LO, RS, RX, LB and RB ploughs only)	
21	KK 03 27 62	Hex screw M16 x 60 w/nut qual. 12.9	
22	KK 03 28 40	Hex screw M20 x 40 mm w/nut	
Not ill.	KK 07 12 11	Beam, H = 700 mm cpl. (ill. no. 1, 2, 3 and 5 - 8) (Before 15.08.01)	
	KK 07 12 80	Beam, H = 700 mm cpl. (ill. no. 1, 2, 3 and 5 - 8) (From 15.08.01)	
	KK 07 12 12	Beam, H = 800 mm cpl. (ill. no. 1, 2, 4 and 5 - 8) (Before 15.08.01)	
	KK 07 12 81	Beam, H = 800 mm cpl. (ill. no. 1, 2, 4 and 5 - 8) (From 15.08.01)	

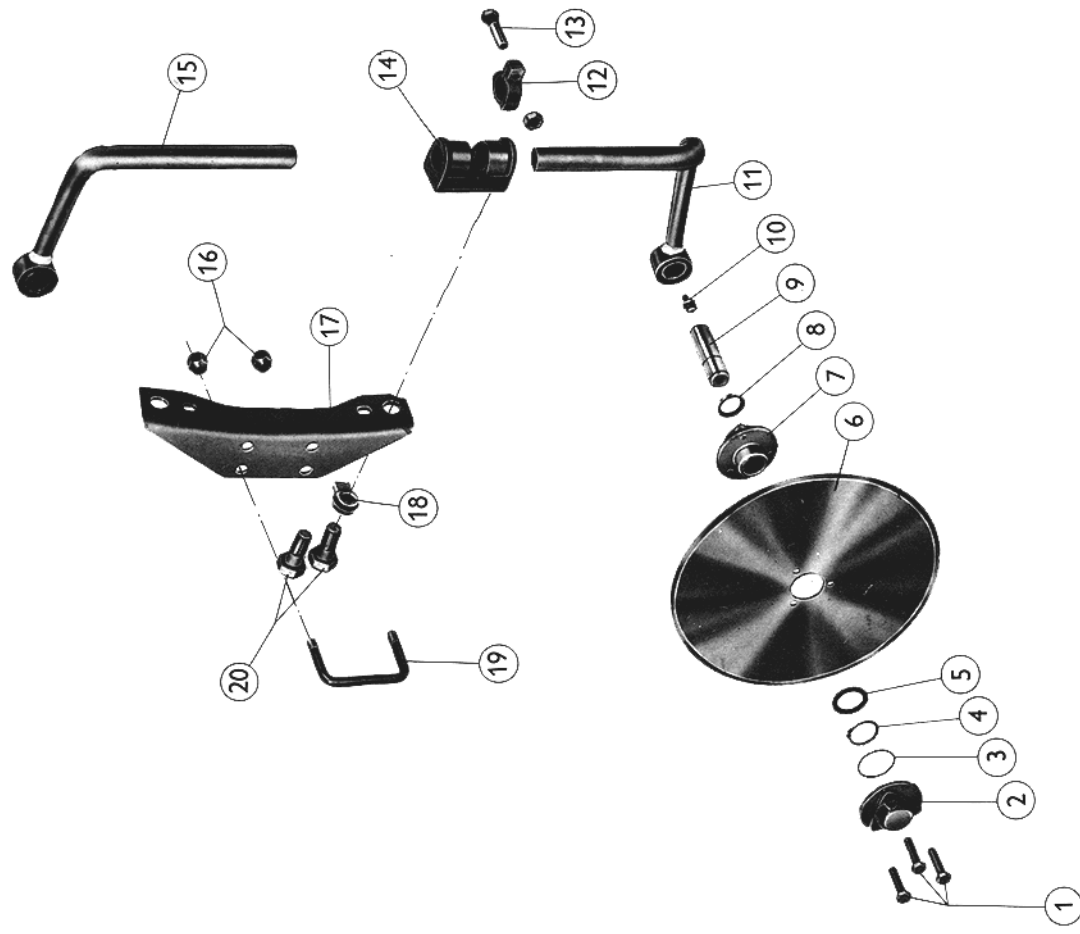

187 Disc coulters for Auto Reset beam (Before 01.01.99)




1	KK 03 13 40	Hex screw M8 x 40 mm
2	KK 05 61 56	Cap
3	KK 01 07 75	O-ring D54.5 x 3 mm
4	KK 01 12 66	Circlip
5	KK 01 12 92	Washer D30 x 45 x 2.5 mm
6	KK 05 61 12	Disc 18"
	KK 05 61 14	Disc 20"
	KK 05 61 15	Disc 18" Notched
	KK 05 61 16	Disc 20" Notched
7	KK 06 61 02	Hub w/needles
	KK 06 06 24	Hub cpl (ill 1, 2, 3, 4 and 6 - 9)
8	KK 01 07 72	Seal ring
9	KK 06 61 08	Axle D30
10	KK 02 99 20	Grease nipple M8 x 1 mm
11	KK 06 61 40	Disc coulters arm 18" R
	KK 06 61 43	Disc coulters arm 20" R
12	KK 06 61 90	Clip
13	KK 03 50 31	Hex screw M12 x 45 mm w/nut
14	KK 06 61 85	Bracket
15	KK 06 61 42	Disc coulters arm 18" L
	KK 06 61 45	Disc coulters arm 20" L
16	KK 01 60 31	Cone nut M16
17	KK 06 61 89	Bracket 18"
	KK 06 61 82	Bracket 20"
18	KK 06 61 78	Eccentric
19	KK 06 61 75	U - bolt
20	KK 03 17 30	Hex screw M20 x 30 mm
	KK 03 17 40	Hex screw M20 x 40 mm (for eccentric nut)

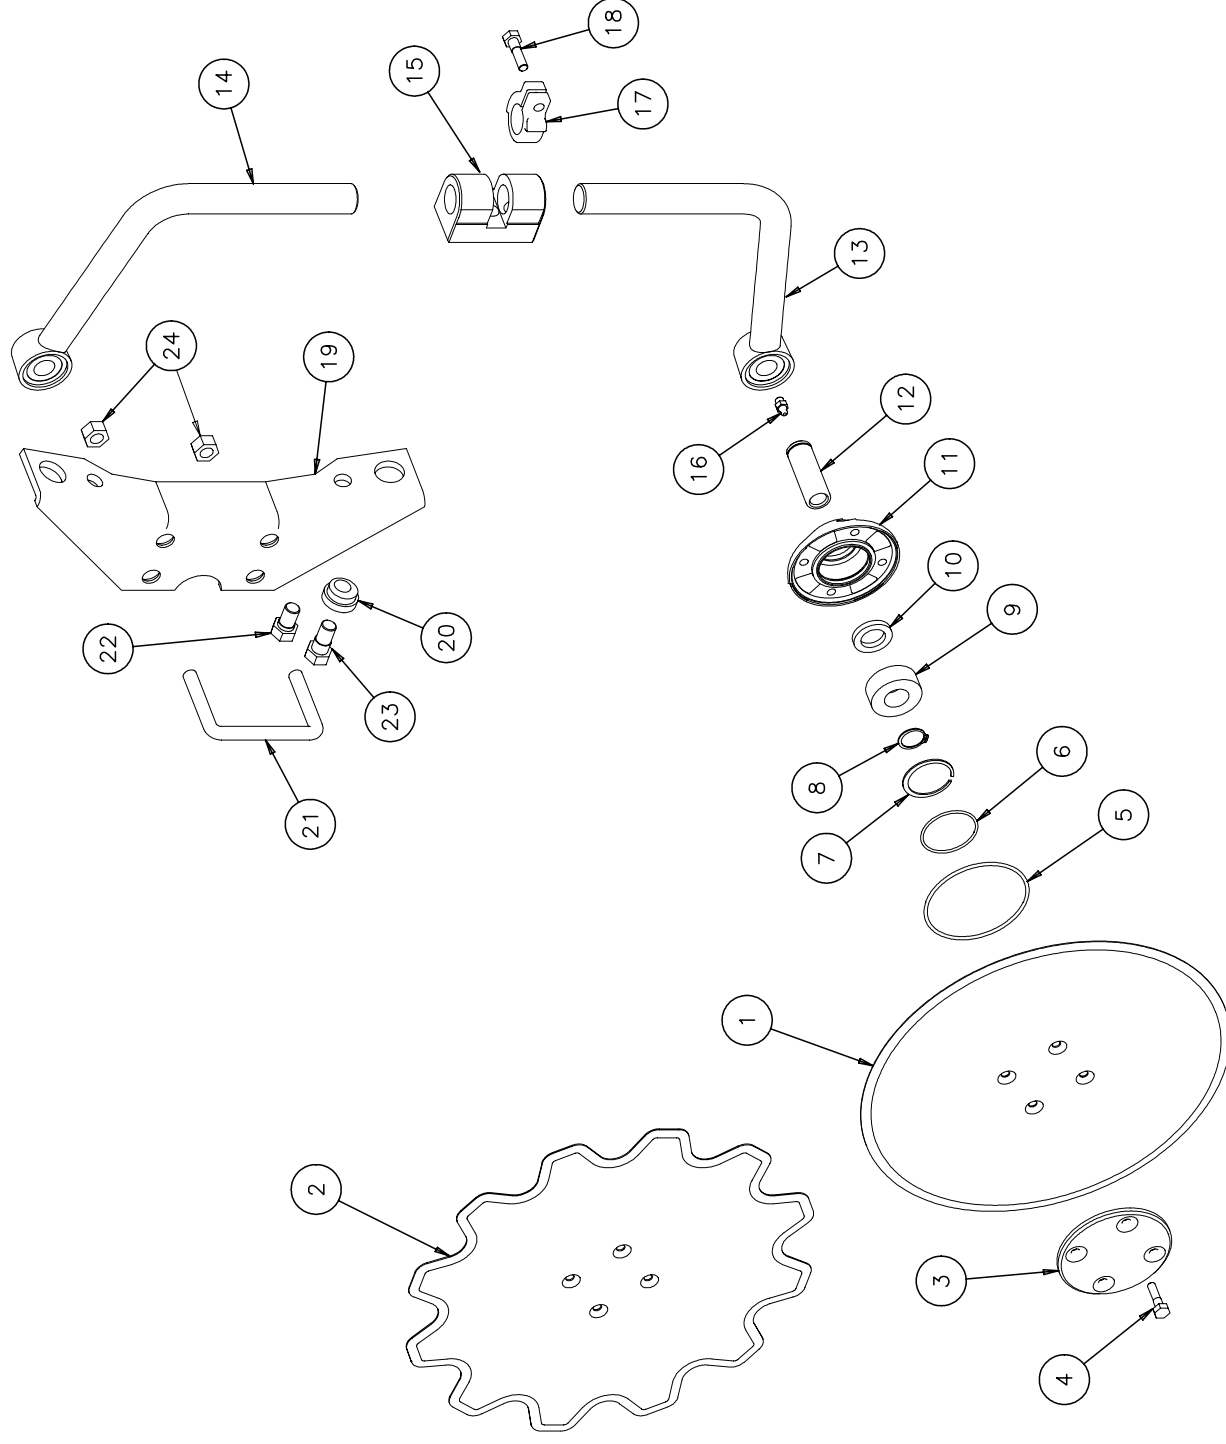


1073 Disc coultter 18" and 20", E-saddle (From 01.01.99)




1	KK 07 64 06	Disc coultter 18"
2	KK 07 64 07	Disc coultter 20"
3	KK 07 64 09	Disc coultter, notched 18"
4	KK 07 64 10	Disc coultter, notched 20"
5	KK 07 64 99	Plate
6	KK 03 25 40	Screw M10 x 40 mm w/nut
7	KK 01 17 50	O-ring 124,5 x 4 mm
8	KK 01 18 66	O-ring 67 x 3 mm
9	KK 01 12 59	Circlip I 62 x 2 mm
10	KK 01 12 66	Circlip A 30 x 1,5 mm
11	KK 01 05 72	Bearing
12	KK 01 05 32	Gasket ring
13	KK 08 61 00	Bearing housing
14	KK 08 61 01	Axle
15	KK 08 60 80	Disc coultter arm w/bearing 18", R
16	KK 08 60 81	Disc coultter arm w/bearing 18", L
17	KK 08 60 82	Disc coultter arm w/bearing 20", R
18	KK 08 60 83	Disc coultter arm w/bearing 20", L
19	KK 08 60 84	Disc coultter arm w/bearing 20", lowered R
20	KK 08 60 85	Disc coultter arm w/bearing 20", lowered L
21	KK 08 61 10	Arm 18", R
22	KK 08 61 12	Arm 20", R
23	KK 08 61 14	Arm 20", lowered R
24	KK 08 61 11	Arm 18", L
25	KK 08 61 13	Arm 20", L
26	KK 08 61 15	Arm 20", lowered L
27	KK 06 61 70	Bracket
28	KK 02 99 20	Grease nipple
29	KK 06 61 90	Clip
30	KK 03 50 31	Hex screw M12 x 45 mm w/nut
31	KK 06 61 89	Bracket 18"
32	KK 06 61 82	Bracket 20"
33	KK 06 61 78	Eccentric
34	KK 06 61 75	U-bolt
35	KK 03 28 30	Hex screw M20 x 30 mm w/nut
36	KK 03 28 40	Hex screw M20 x 40 mm w/nut
37	KK 01 60 31	Cone nut M16

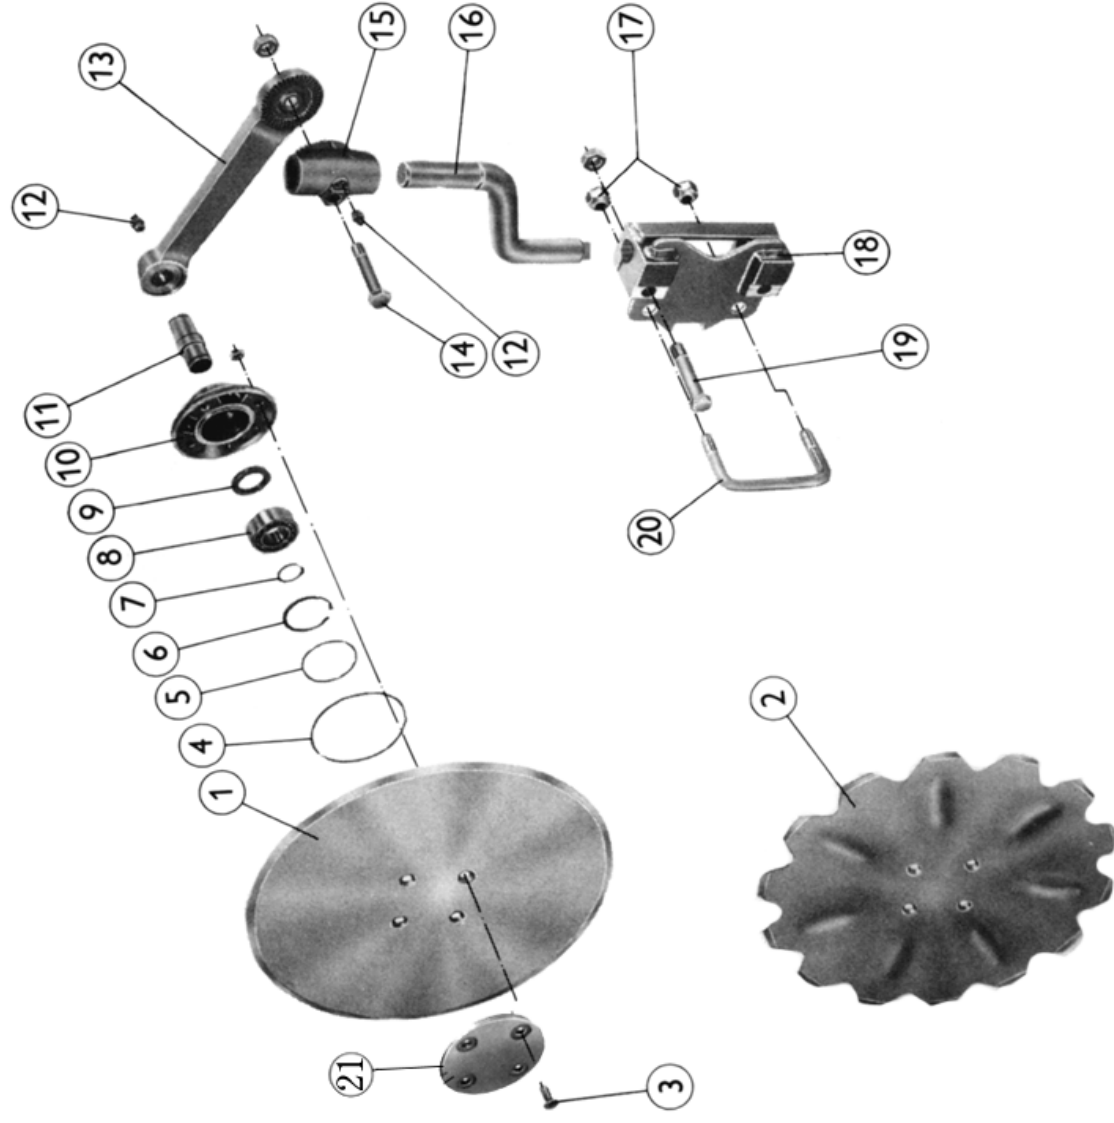

1	KK 07 64 06	Disc couler 18"
	KK 07 64 07	Disc couler 20"
2	KK 07 64 09	Disc couler; notched 18"
	KK 07 64 10	Disc couler; notched 20"
3	KK 03 10 30	Screw M10 x 30 mm w/nut
4	KK 01 17 50	O-ring 124,5 x 3,0 mm
5	KK 01 18 66	O-ring 67,0 x 3,0 mm
6	KK 01 12 59	Circlip I 62 x 2 mm
7	KK 01 12 66	Circlip A 30 x 1,5 mm
8	KK 01 05 72	Bearing
9	KK 01 08 18	Gasket ring 35/52 x 7 mm (Before 01.01.99)
	KK 01 05 32	Gasket ring (From 01.01.99)
10	KK 07 60 75	Bearing housing (Before 01.01.99)
	KK 07 60 97	Bearing, mounted (Before 01.01.99)
	KK 08 61 00	Bearing (From 01.01.99)
11	KK 07 60 76	Axle (Before 01.01.99)
	KK 08 61 01	Axle (From 01.01.99)
12	KK 02 99 20	Grease nipple M8 x 1
13	KK 07 65 75	Arm
	KK 07 60 82	Arm w/bearing, mounted
14	KK 03 27 02	Hex screw M16 x 110 mm w/nut
15	KK 07 64 00	Support
16	KK 07 60 63	Axle -92
17	KK 01 60 31	Cone nut M16
18	KK 07 60 60	Bracket
19	KK 03 51 75	Hex screw m20 x 100 mm w/locknut
20	KK 06 61 75	Clevis M16, 120 x 90 mm
21	KK 07 64 99	Plate (From 01.01.99)
Not ill.	KK 07 62 10	Disc couler 92, 18" R & L, without fix
	KK 07 62 11	Disc couler 92, 20" R & L, without fix
	KK 07 62 12	Disc couler 92, 18" R & L, notched, without fix
	KK 07 62 13	Disc couler 92, 20" R & L, notched, without fix

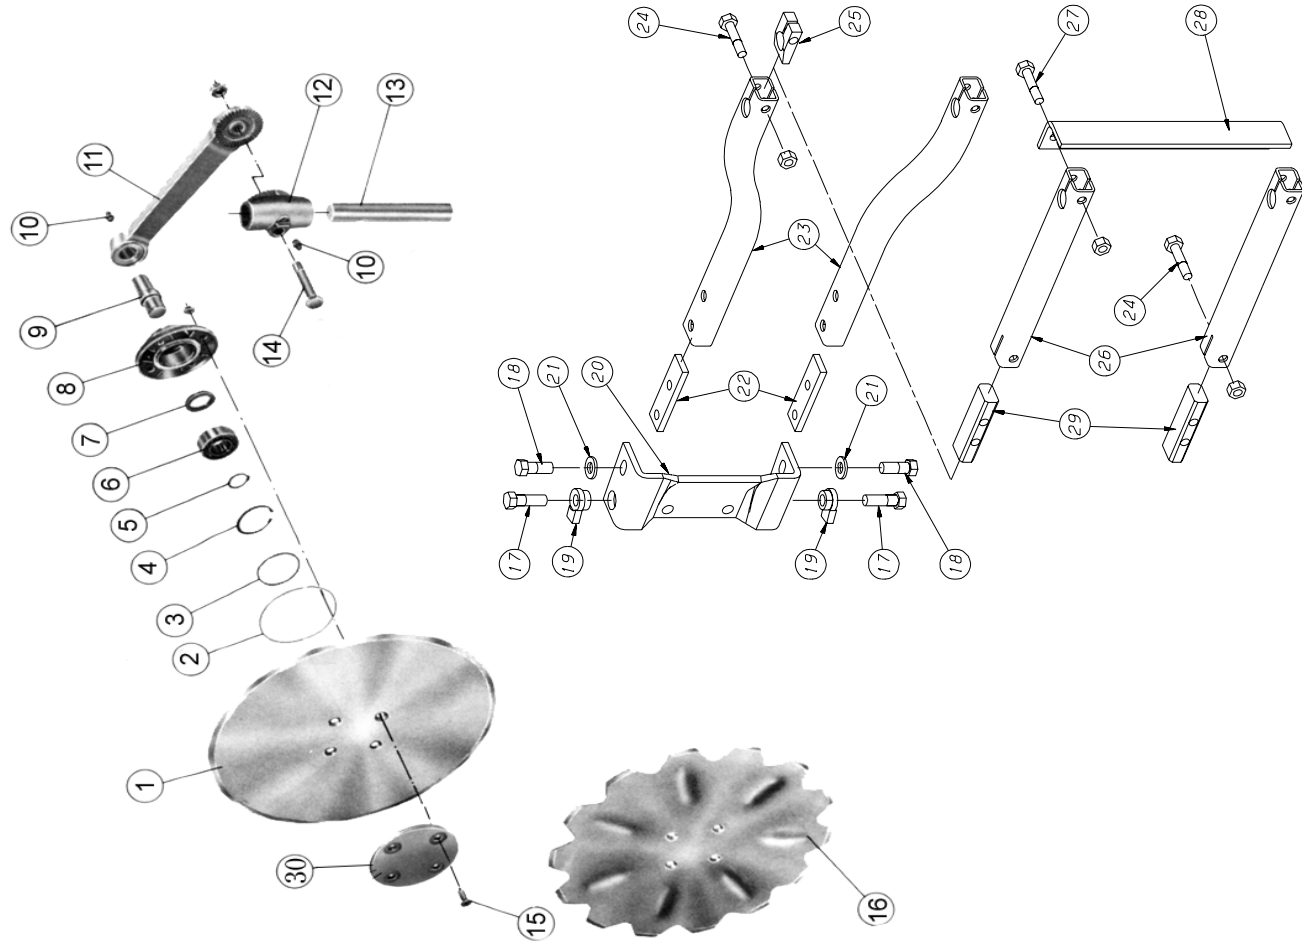


1	KK 07 64 06	Disc coultter 18"
	KK 07 64 07	Disc coultter 20"
2	KK 01 17 50	O-ring
3	KK 01 18 66	O-ring
4	KK 01 12 59	Circlip
5	KK 01 12 66	Circlip
6	KK 01 05 72	Ball bearing
7	KK 01 08 18	Rubber ring (Before 01.01.99)
	KK 01 05 32	Gasket ring (From 01.01.99)
8	KK 08 60 90	Bearing housing cpl. (ill. no. 2-3-4-5-6-7-8-10-16) (Before 01.01.99)
	KK 08 60 89	Bearing housing cpl. (ill. no. 2-3-4-5-6-7-8-16) (From 01.01.99)
9	KK 07 60 76	Axle (Before 01.01.99)
	KK 08 61 01	Axle (From 01.01.99)
	KK 08 60 86	Disc coultter arm w/bearing (From 01.01.99)
	KK 08 60 87	Disc coultter bearing cpl. (ill. no. 4-6-7-8) (From 01.01.99)
10	KK 02 99 20	Grease nipple
11	KK 07 65 75	Arm
12	KK 07 64 00	Support
13	KK 07 65 27	Axle
14	KK 03 27 02	Hex screw M16 x 110 mm w/nut
15	KK 03 10 30	Hex screw M10 x 30 mm
16	KK 07 64 09	Disc coultter 18" notched
	KK 07 64 10	Disc coultter 20" notched
17	KK 03 28 50	Hex screw M20 x 50 mm
18	KK 03 28 40	Hex screw M20 x 40 mm
19	KK 06 61 78	Eccentric for bracket
20	KK 07 49 31	Bracket
21	KK 01 29 60	Washer 20.5 x 40 x 3.4 mm
22	KK 07 49 36	Plate w/threads
23	KK 07 49 30	Tube
24	KK 03 27 75	Hex screw M16 x 75 mm w/nut
25	KK 07 65 15	Supporting piece for tube
26	KK 07 49 39	Extended tube
27	KK 03 27 85	Hex screw M16 x 85 mm w/nut
28	KK 07 49 38	Support
29	KK 07 49 37	Support
30	KK 07 64 99	Plate

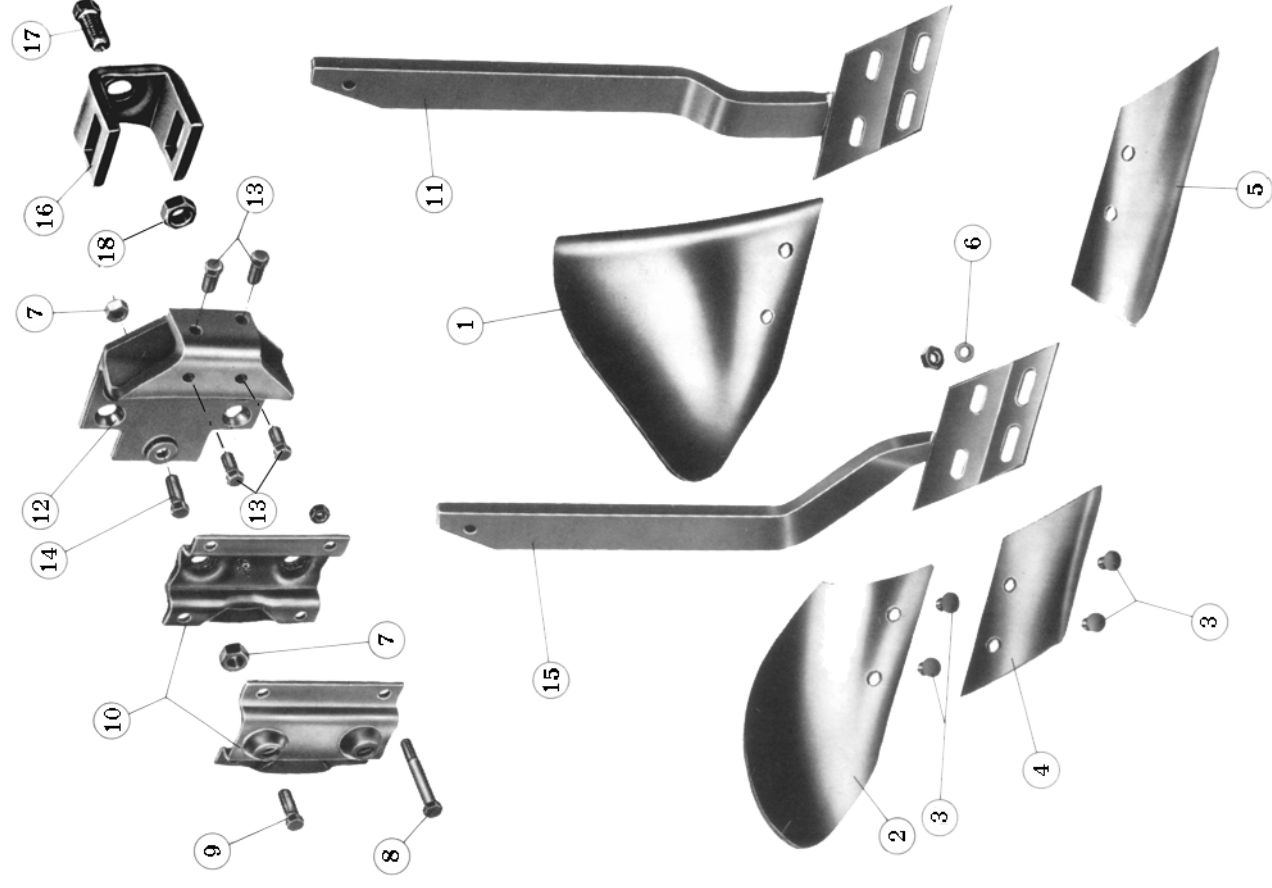


1	KK 07 68 12	Mouldboard maize R				
	KK 07 68 13	Mouldboard maize L				
2	KK 06 68 80	Mouldboard R				
	KK 07 69 62	Mouldboard R, plastic				
	KK 06 68 81	Mouldboard L				
	KK 07 69 63	Mouldboard L, plastic				
3	KK 03 30 06	Oval screw M10 x 30 mm w/nut				
	KK 03 30 07	Oval screw M10 x 35 mm w/nut				
4	KK 05 68 73	Share, short R				
	KK 06 68 73	Share, short L				
5	KK 06 68 68	Share, long R				
	KK 06 68 69	Share, long L				
6	KK 01 29 06	Washer 10.5 x 25 x 3.4				
7	KK 01 58 25	Nut M16				
for all turnable ploughs with Auto Reset beams:						
8	KK 03 27 95	Hex screw M16 x 95 mm w/nut				
9	KK 03 42 28	Setscrew M16 x 32 mm				
10	KK 06 06 57	Bracket				
11	KK 06 68 11	Arm R, H = 700 mm				
	KK 07 68 78	Arm R, H = 750 mm (From 01.12.00)				
	KK 06 68 12	Arm L, H = 700 mm				
	KK 07 68 59	Arm L, H = 750 mm (From 01.12.00)				
for all turnable ploughs with Shear Bolt beams:						
12	KK 07 06 39	Bracket (for LB, RB, RS, RX)				
	KK 07 68 72	Bracket (for LM, LS, RG, RL, RM, VD)				
13	KK 03 42 25	Setscrew M16 x 25 mm				
14	KK 03 42 50	Setscrew M16 x 50 mm				
15	KK 07 68 17	Arm R, H = 700 mm				
	KK 07 68 18	Arm L, H = 700 mm				
	KK 07 68 25	Arm R, H = 800 mm				
	KK 07 68 26	Arm L, H = 800 mm				
	KK 07 68 33	Arm R, H = 700 mm (for VD plough only) (Before 15.03.98)				
	KK 07 68 34	Arm L, H = 700 mm (for VD plough only) (Before 15.03.98)				

for beams on non-turnable ploughs:


16	KK 07 06 53	Fixing bracket (for beam 071240 and 071241)
17	KK 03 44 46	Setscrew M24 x 53 mm
18	KK 01 58 41	Nut M24

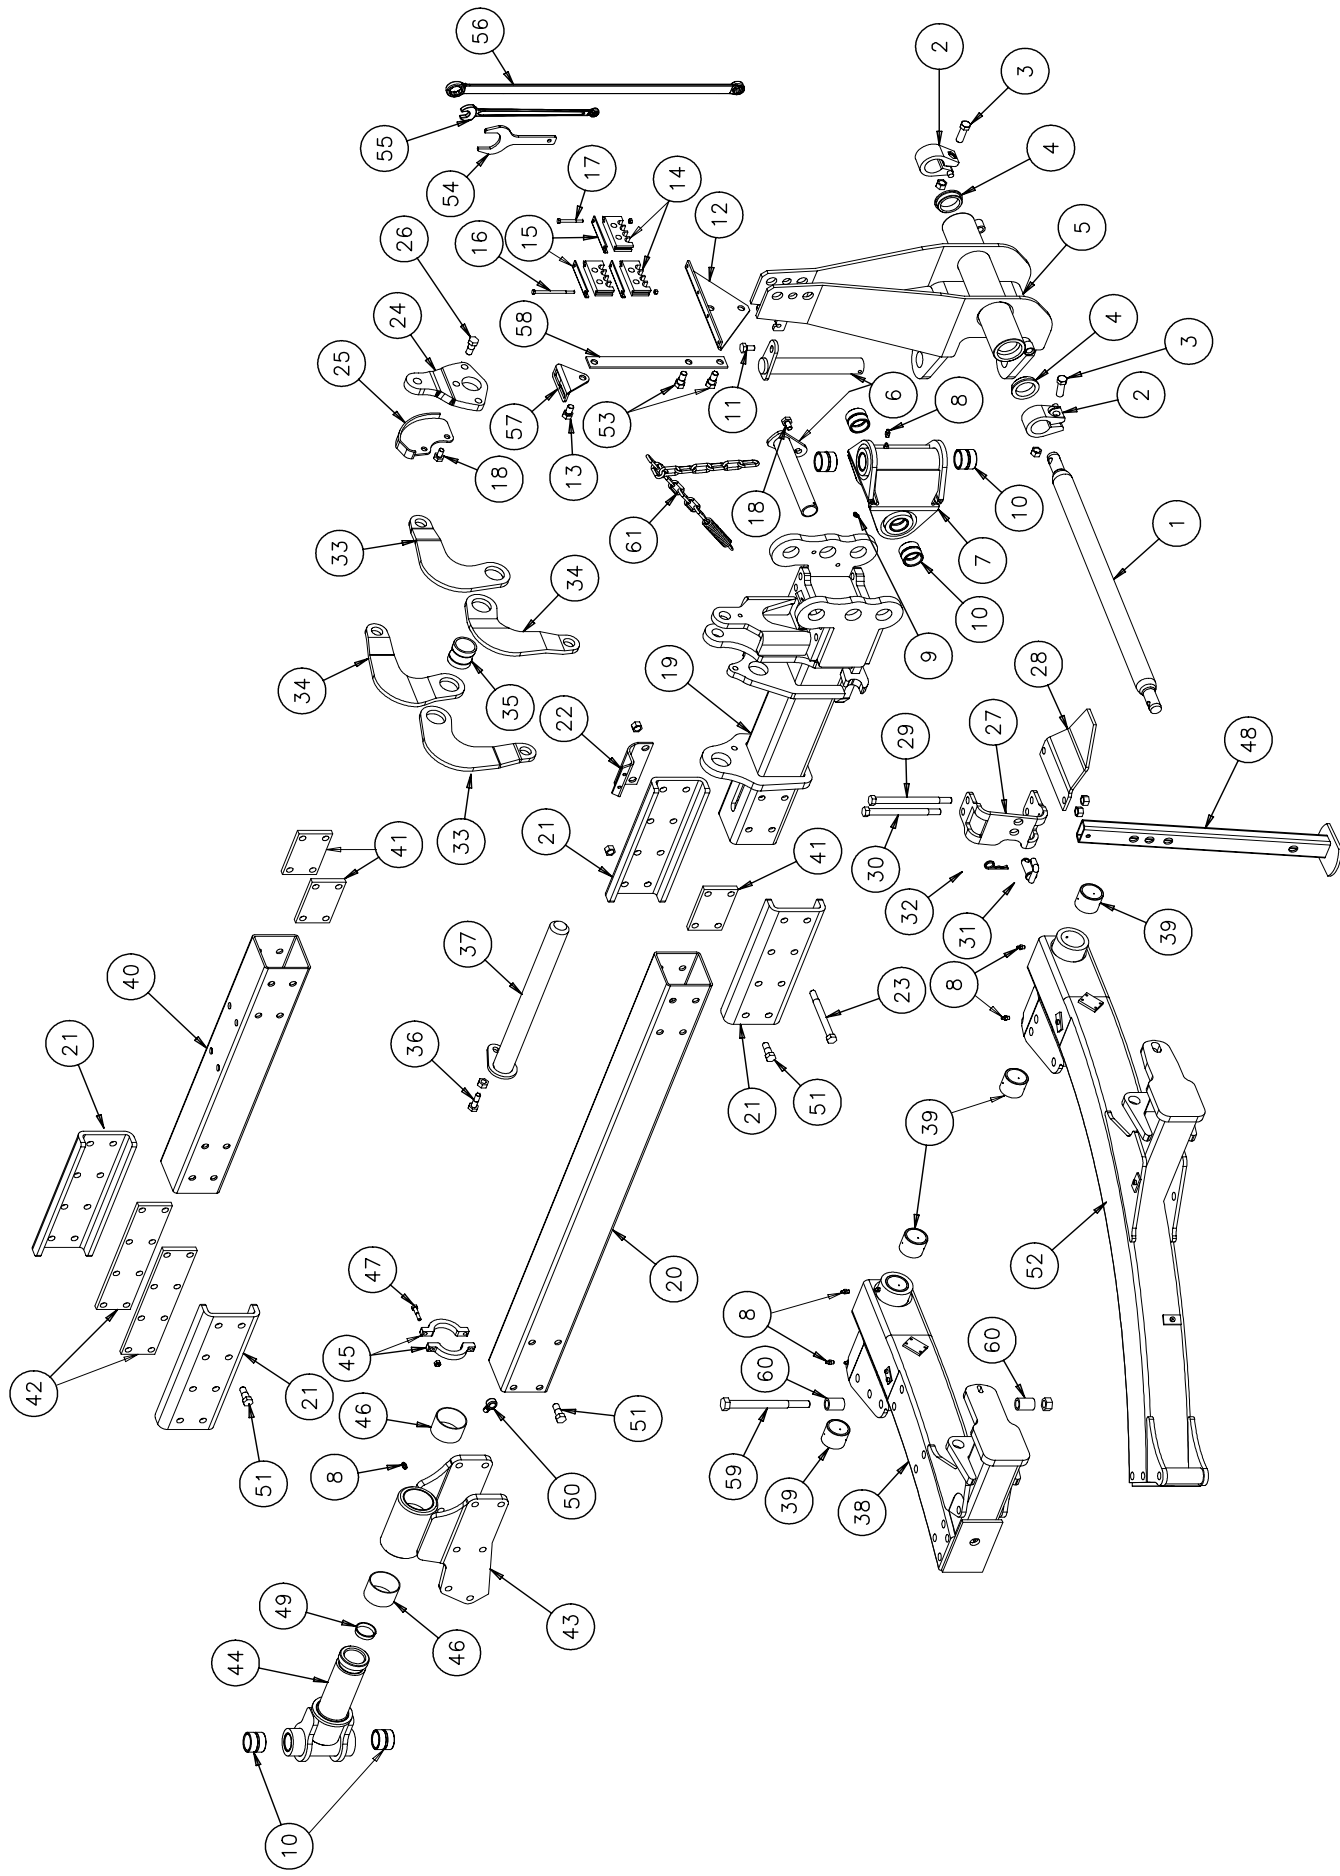


1	KK 06 43 21	Cross shaft cat. III, 965 mm	32	KK 02 97 70	Pin
2	KK 06 43 60	Collar	33	KK 07 72 81	Arm bended
3	KK 03 28 60	Hex screw M20 x 60 mm w/nut	34	KK 07 72 80	Arm streight
4	KK 06 43 17	Bushing	35	KK 07 85 50	Spacer for arm
5	KK 08 11 50	Headstock	36	KK 03 27 50	Hex screw M16 x 50 mm w/ntu
6	KK 07 88 98	Axle	37	KK 07 71 37	Axle
7	KK 07 97 65	Link w/bushings	38	KK 07 72 08	Lift arm w/bushings cpl.
8	KK 02 99 20	Grease nipple	39	KK 01 16 91	Bushing
9	KK 02 99 27	Grease nipple w/45° angle	40	KK 08 12 15	Extension tube
10	KK 01 16 82	Bushing	41	KK 08 12 14	Threaded plate, 4 holes
11	KK 03 27 30	Hex screw M16 x 30 mm	42	KK 08 12 16	Threaded plate, 8 holes
12	KK 06 25 05	Bracket for fixing	43	KK 07 72 09	Tube for link w/slide bearings
13	KK 03 52 35	Hex screw M20 x 30 mm w/flange nut	44	KK 08 12 04	Link w/bushings
14	KK 01 21 85	Fixing for two hoses	45	KK 07 91 53	Locking for axle
15	KK 06 25 06	Piece for fixing	46	KK 01 16 68	Slide bearing
16	KK 03 24 03	Hex screw M8 x 130 mm w/nut	47	KK 03 51 09	Hex screw M10 x 50 mm w/lock nut
17	KK 03 24 75	Hex screw M8 x 75 mm w/nut	48	KK 07 72 86	Machine stand
18	KK 03 27 25	Hex screw M16 x 27 mm	49	KK 01 09 67	Cover for link
19	KK 07 71 91	Fixing device (Before 01.10.00)	50	KK 06 12 91	Threaded piece
20	KK 08 21 70	Fixing device (From 01.10.00, serial no. PM179 and RM131)	51	KK 03 28 45	Hex screw M20 x 45 mm
	KK 08 12 17	Tube 6 furrow	52	KK 07 70 31	Lift arm 6 furrow w/bushing cpl. (in furrow/onland)
	KK 08 18 86	Tube 6 furrow, L = 1150 (From 01.02.01)		KK 07 72 07	Lift arm 7 furrow w/bushing cpl. (in furrow/onland)
	KK 08 12 18	Tube 7 furrow		KK 07 70 39	Lift arm 8 furrow w/bushing cpl. (in furrow/onland)
	KK 08 18 87	Tube 7 furrow, L = 1150 (From 01.02.01)	53	KK 03 52 36	Hex screw M20 x 40 mm w/flange nut
	KK 08 12 19	Tube 8 furrow	54	KK 01 06 55	Spanner NV 70
	KK 08 18 88	Tube 8 furrow, L = 1150 (From 01.02.01)	55	KK 01 06 06	Spanner NV 19 - 27
	KK 08 21 39	Tube 9 furrow (From 15.09.00)	56	KK 01 06 50	Spanner NV 27 - 36
21	KK 07 85 64	Plate	57	KK 06 25 00	Holder for spanner
22	KK 08 10 98	Plate for hose holder	58	KK 06 24 58	Fixing for holder
23	KK 03 28 20	Hex screw M20 x 200 mm	59	KK 03 29 26	Hex screw M24 x 265 mm w/nut
24	KK 07 72 66	Fixing for cylinder (optional equipment)	60	KK 07 17 34	Bushing
25	KK 07 72 67	Support (optional equipment)	61	KK 08 21 77	Chain w/spring (From 01.10.00, serial no. PM179 and RM131)
26	KK 03 28 45	Hex screw M20 x 45 mm			
27	KK 07 72 30	Fixing for machine stand			
28	KK 08 10 44	Support for headstock (Before 01.10.00) (Replaced by pos. 61)			
29	KK 03 28 43	Hex screw M20 x 250 mm w/nut			
30	KK 03 28 37	Hex screw M20 x 235 mm w/nut			
31	KK 07 72 31	Bolt for locking			

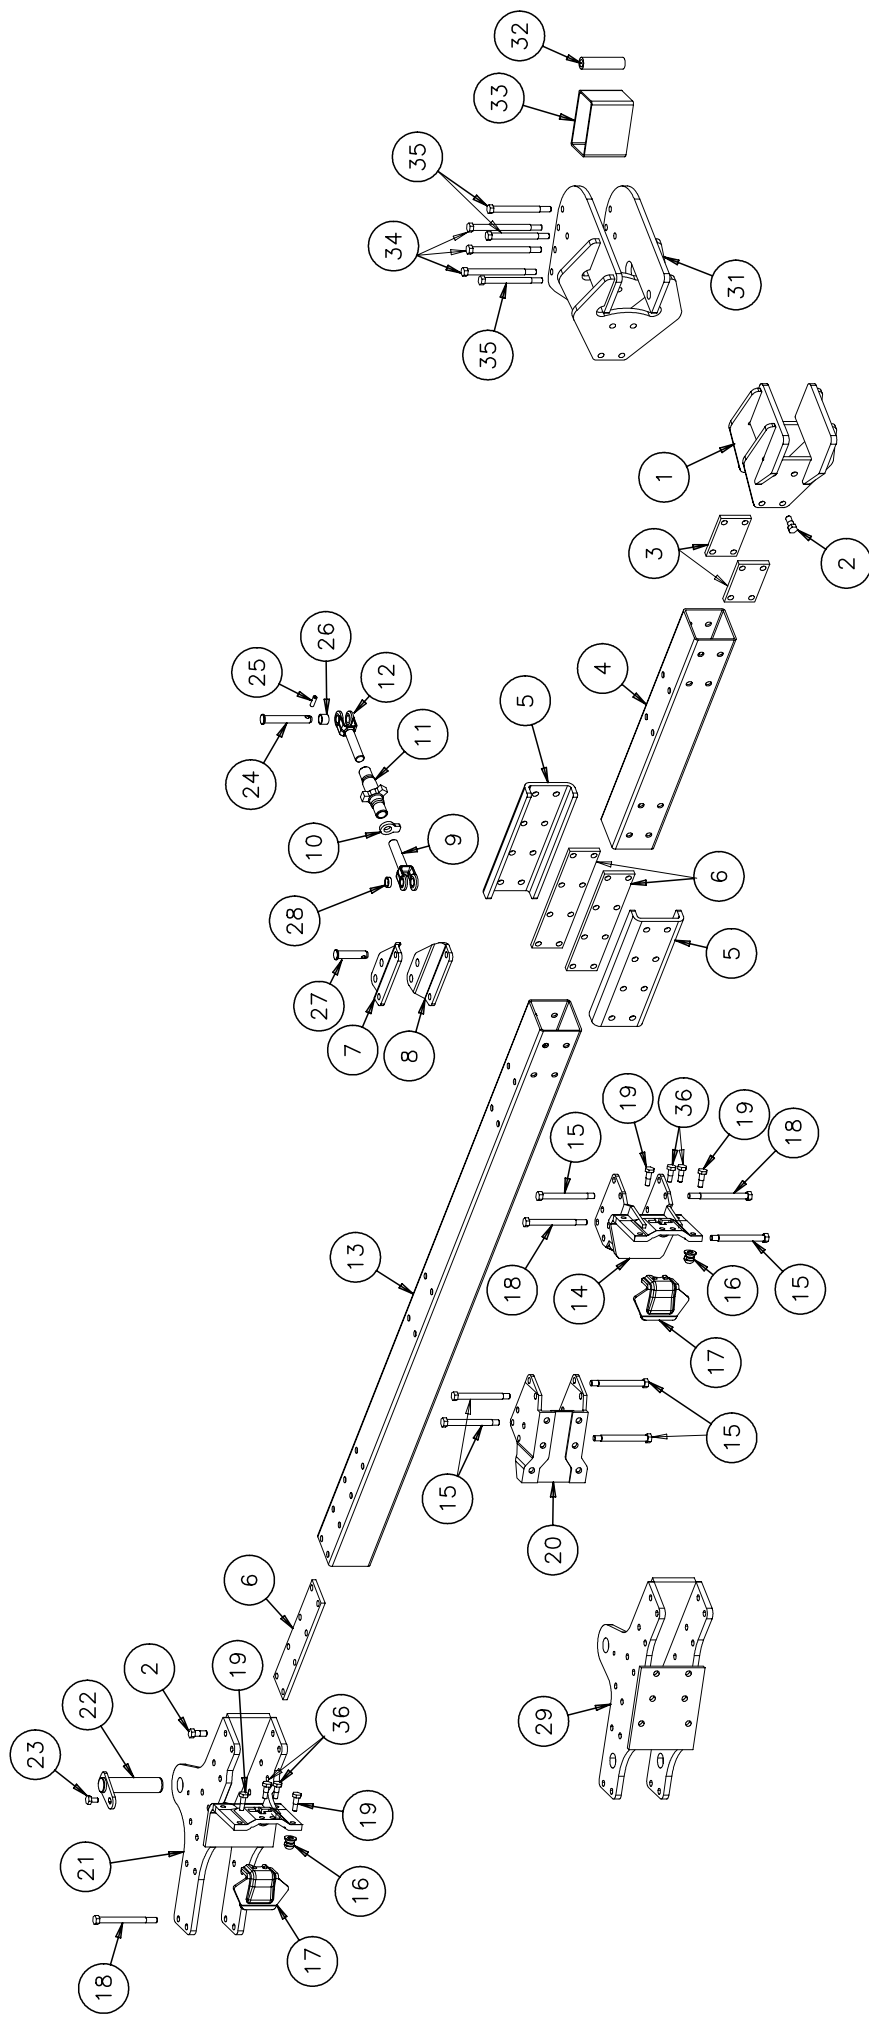


Kverneland Klepp AS
Page 37

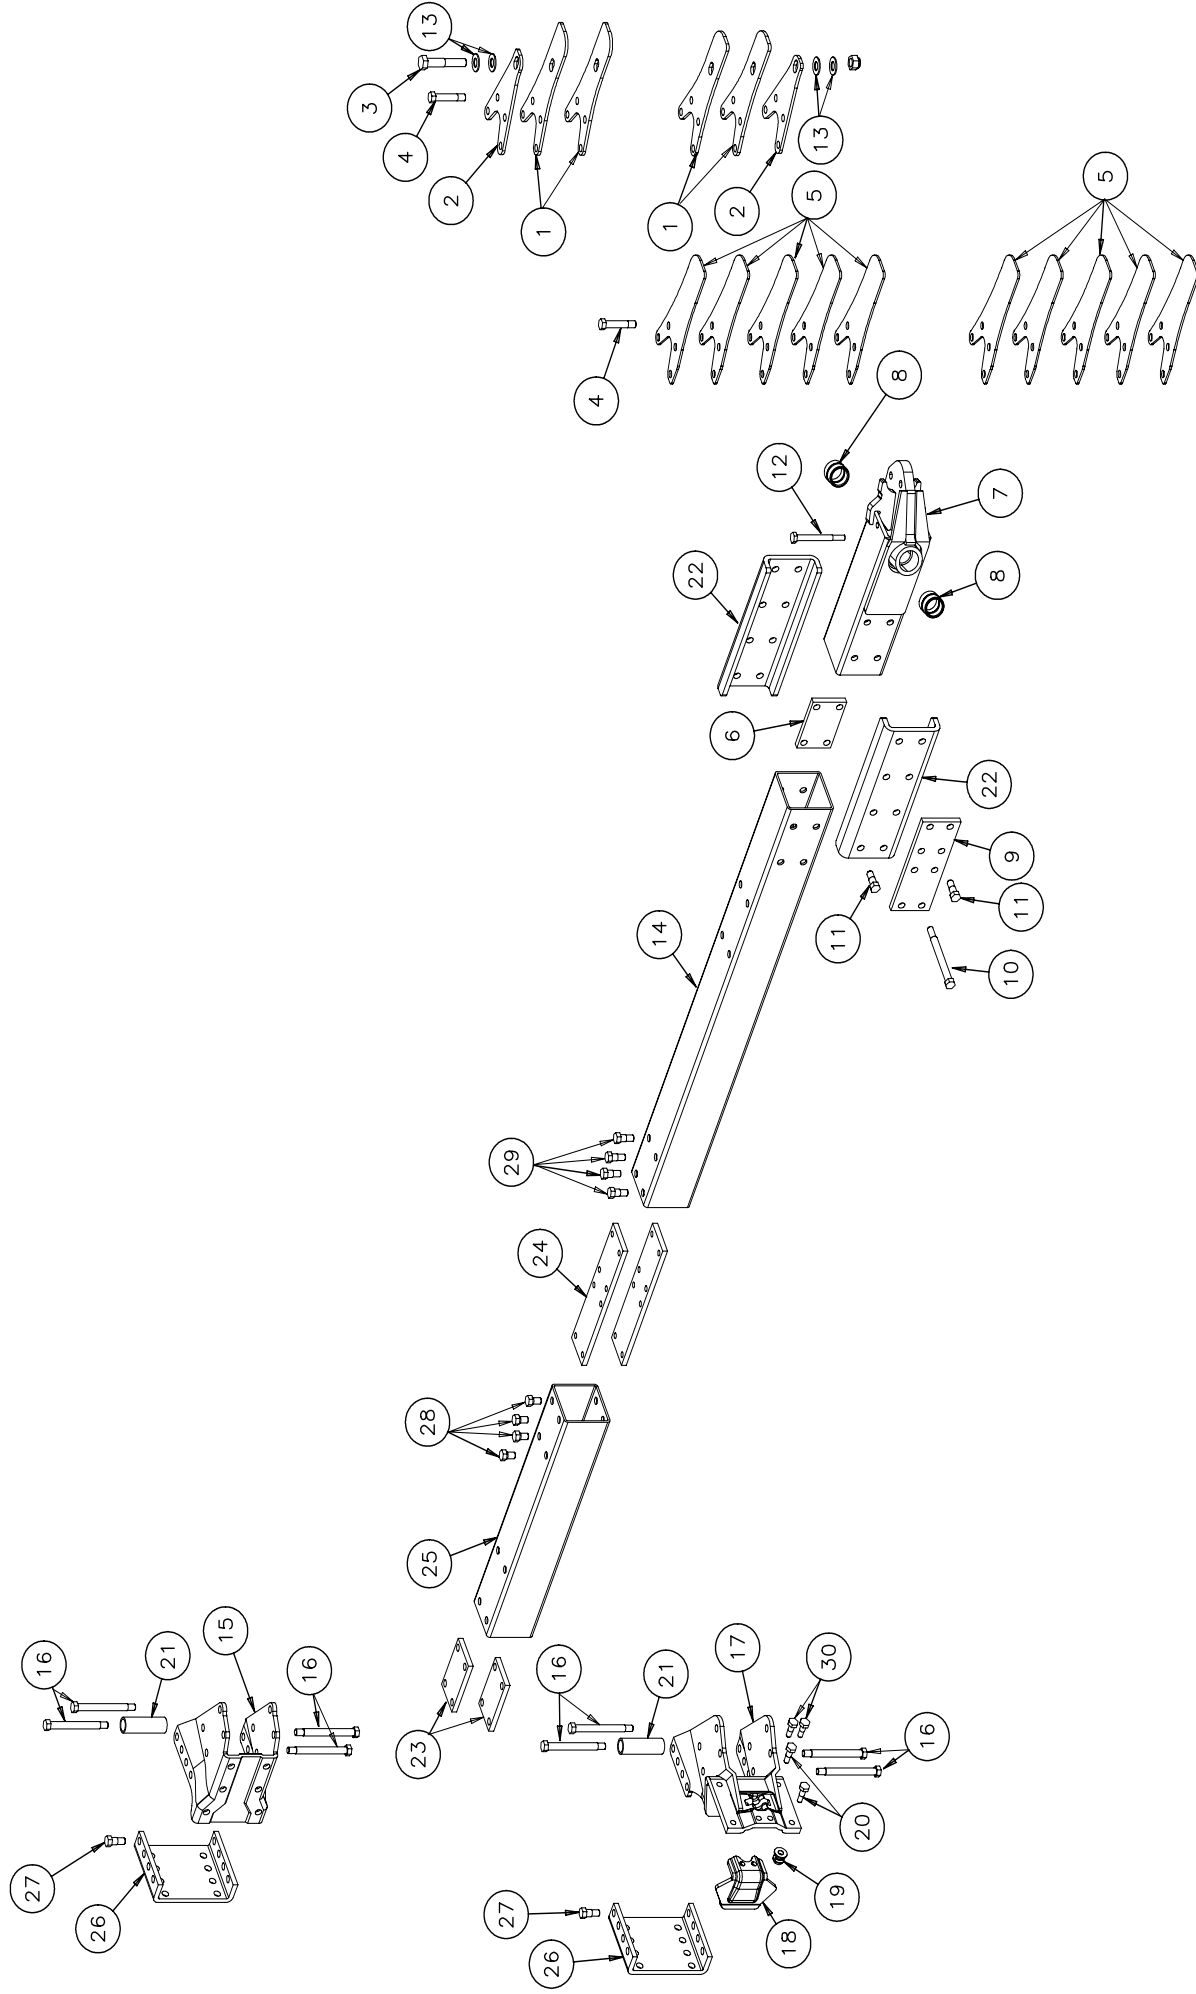

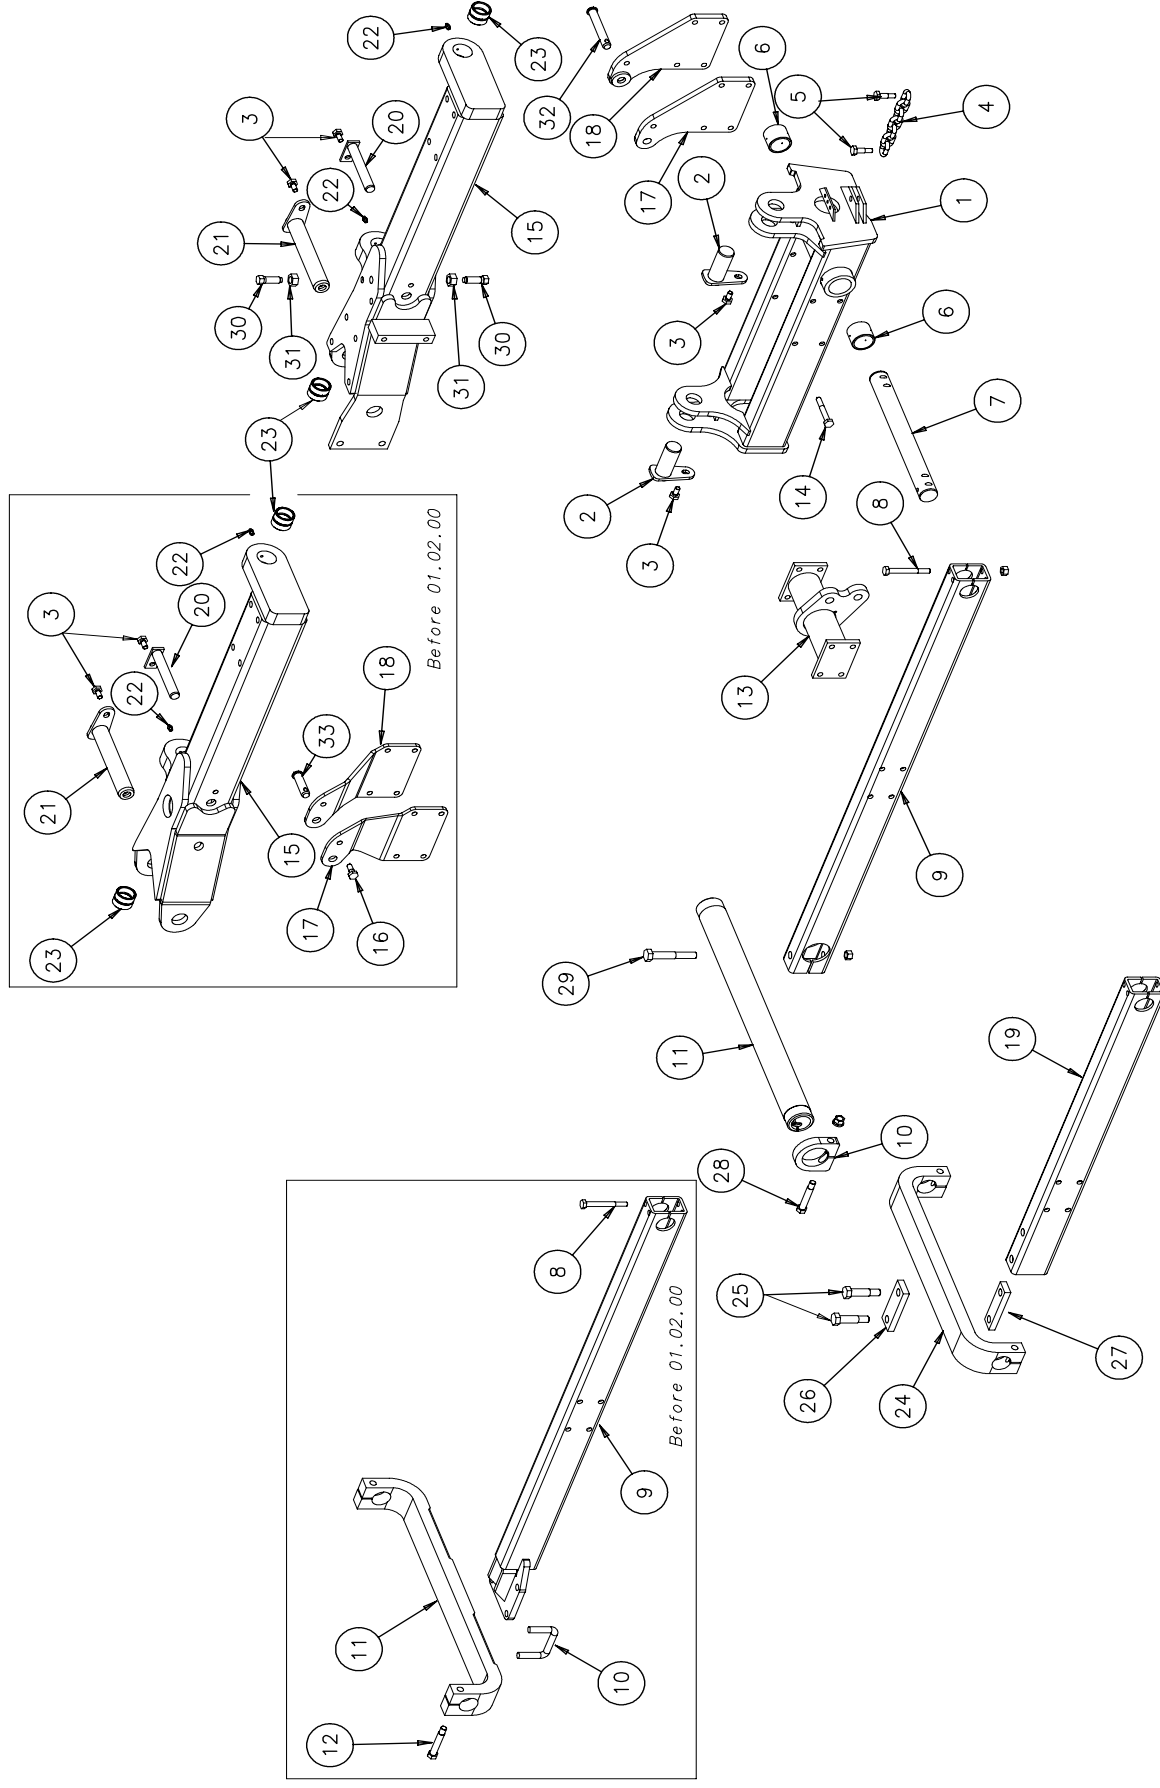


1	KK 08 12 29	Truck w/bearings			
2	KK 07 21 46	Axle			
3	KK 03 27 30	Hex screw M16 x 30 mm			
4	KK 07 71 72	Chain			
5	KK 03 51 43	Hex screw M16 x 55 mm w/lock nut			
6	KK 01 16 91	Bushing			
7	KK 07 72 72	Axle			
8	KK 03 27 16	Hex screw M16 x 140 mm w/nut			
9	KK 08 12 71	Arm for wheel (for PM) (Before 01.02.00)			
	KK 08 11 82	Arm for wheel (for PM) (From 01.02.00)			
10	KK 19 54 15	U-bolt M20 x 100 x 80 mm w/flange nut (Before 01.02.00)			
	KK 08 11 94	Clamp (From 01.02.00)			
11	KK 08 12 70	Wheel suspension for PM (Before 01.02.00)			
	KK 08 11 98	Wheel suspension for PM, L = 1020 (From 01.02.00)			
12	KK 03 51 79	Hex screw M20 x 120 mm w/flange nut			
13	KK 08 12 74	Fixing for cylinder			
14	KK 03 27 02	Hex screw M16 x 110 mm			
15	KK 08 12 09	Middle frame section w/bushing (Before 01.02.00)			
	KK 08 11 09	Middle frame section w/bushing (From 01.02.00)			
16	KK 03 27 40	Hex screw M16 x 40 mm			
17	KK 08 12 48	Cylinder plate R (Before 01.02.00) (as spare part KK 08 12 98 + KK 08 12 99)			
	KK 08 12 98	Cylinder plate R (From 01.02.00)			
18	KK 08 12 49	Cylinder plate L (Before 01.02.00) (as spare part KK 08 12 98 + KK 08 12 99)			
	KK 08 12 99	Cylinder plate L (From 01.02.00)			
19	KK 08 12 83	Arm for wheel (for RM)			
20	KK 07 78 82	Axle D30 x 202 mm			
21	KK 08 12 58	Axle D50 x 300 mm			
22	KK 02 99 20	Grease nipple			
23	KK 01 16 82	Bushing			
24	KK 08 12 78	Wheel suspension (for RM)			
25	KK 03 29 00	Hex screw M24 x 100 mm			
26	KK 08 12 84	Plate			
27	KK 08 12 85	Threaded piece			
28	KK 03 51 79	Hex screw M20 x 120 mm w/flange nut (From 01.02.00)			

29	KK 03 29 08	Hex screw M24 x 150 mm w/nut (From 01.02.00)
30	KK 06 70 39	Foot screw M24 x 90 mm (From 01.02.00)
31	KK 06 18 99	Cone nut M24 (From 01.02.00)
32	KK 01 03 23	Bolt w/head D25.3 x 150 mm (From 01.02.00)
33	KK 01 03 28	Bolt w/head D25.3 x 78 mm (Before 01.02.00)

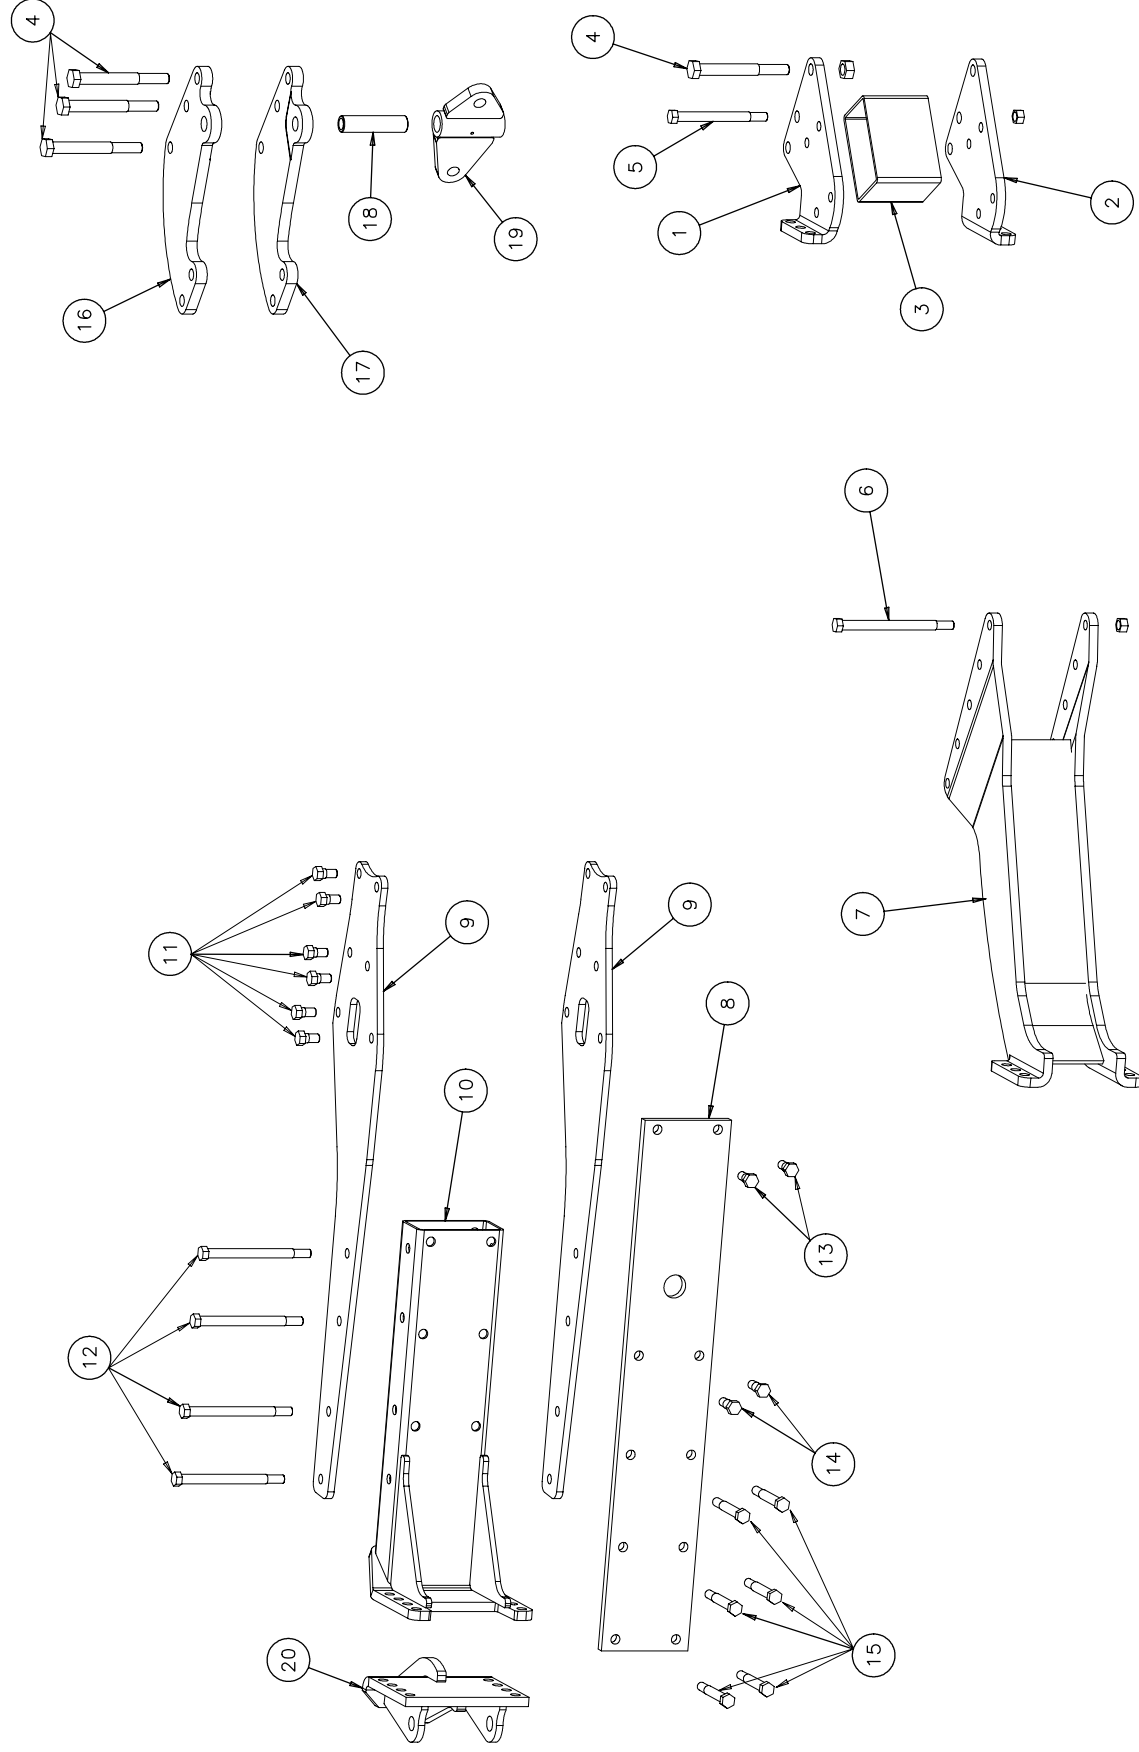


1016 Fixing device for PL/RL and PM/RM

1	KK 07 70 90	Clamping plate, upper
2	KK 07 70 91	Clamping plate, lower
3	KK 07 70 92	Distance tube
4	KK 03 29 31	Hex screw M24 x 230 mm w/nut
5	KK 03 28 21	Hex screw M20 x 210 mm w/nut
6	KK 03 28 26	Hex screw M20 x 260 mm w/nut (for PL/RL)
7	KK 07 72 90	Fixing for packomat rear section (for PL/RL)
8	KK 08 11 38	Plate (for PM/RM)
9	KK 08 11 59	Plate (for PM/RM)
10	KK 08 11 55	Fixing for packomat rear section (for PM/RM)
11	KK 03 28 35	Hex screw M20 x 35 mm w/nut (for PM/RM)
12	KK 03 28 36	Hex screw M20 x 240 mm w/nut (for PM/RM)
13	KK 03 28 45	Hex screw M20 x 45 mm w/nut (for PM/RM)
14	KK 03 28 55	Hex screw M20 x 55 mm w/nut (for PM/RM)
15	KK 03 28 15	Hex screw M20 x 140 mm w/nut (for PM/RM)
16	KK 08 21 81	Clamping plate, upper (for S-arm, from 01.02.01)
17	KK 08 21 82	Clamping plate, lower (for S-arm, from 01.02.01)
18	KK 08 21 83	Bushing (for S-arm, from 01.02.01)
19	KK 08 21 84	Cylinder bracket (for S-arm, from 01.02.01)
20	KK 08 21 90	Fixing bracket (for S-arm, from 01.02.01)

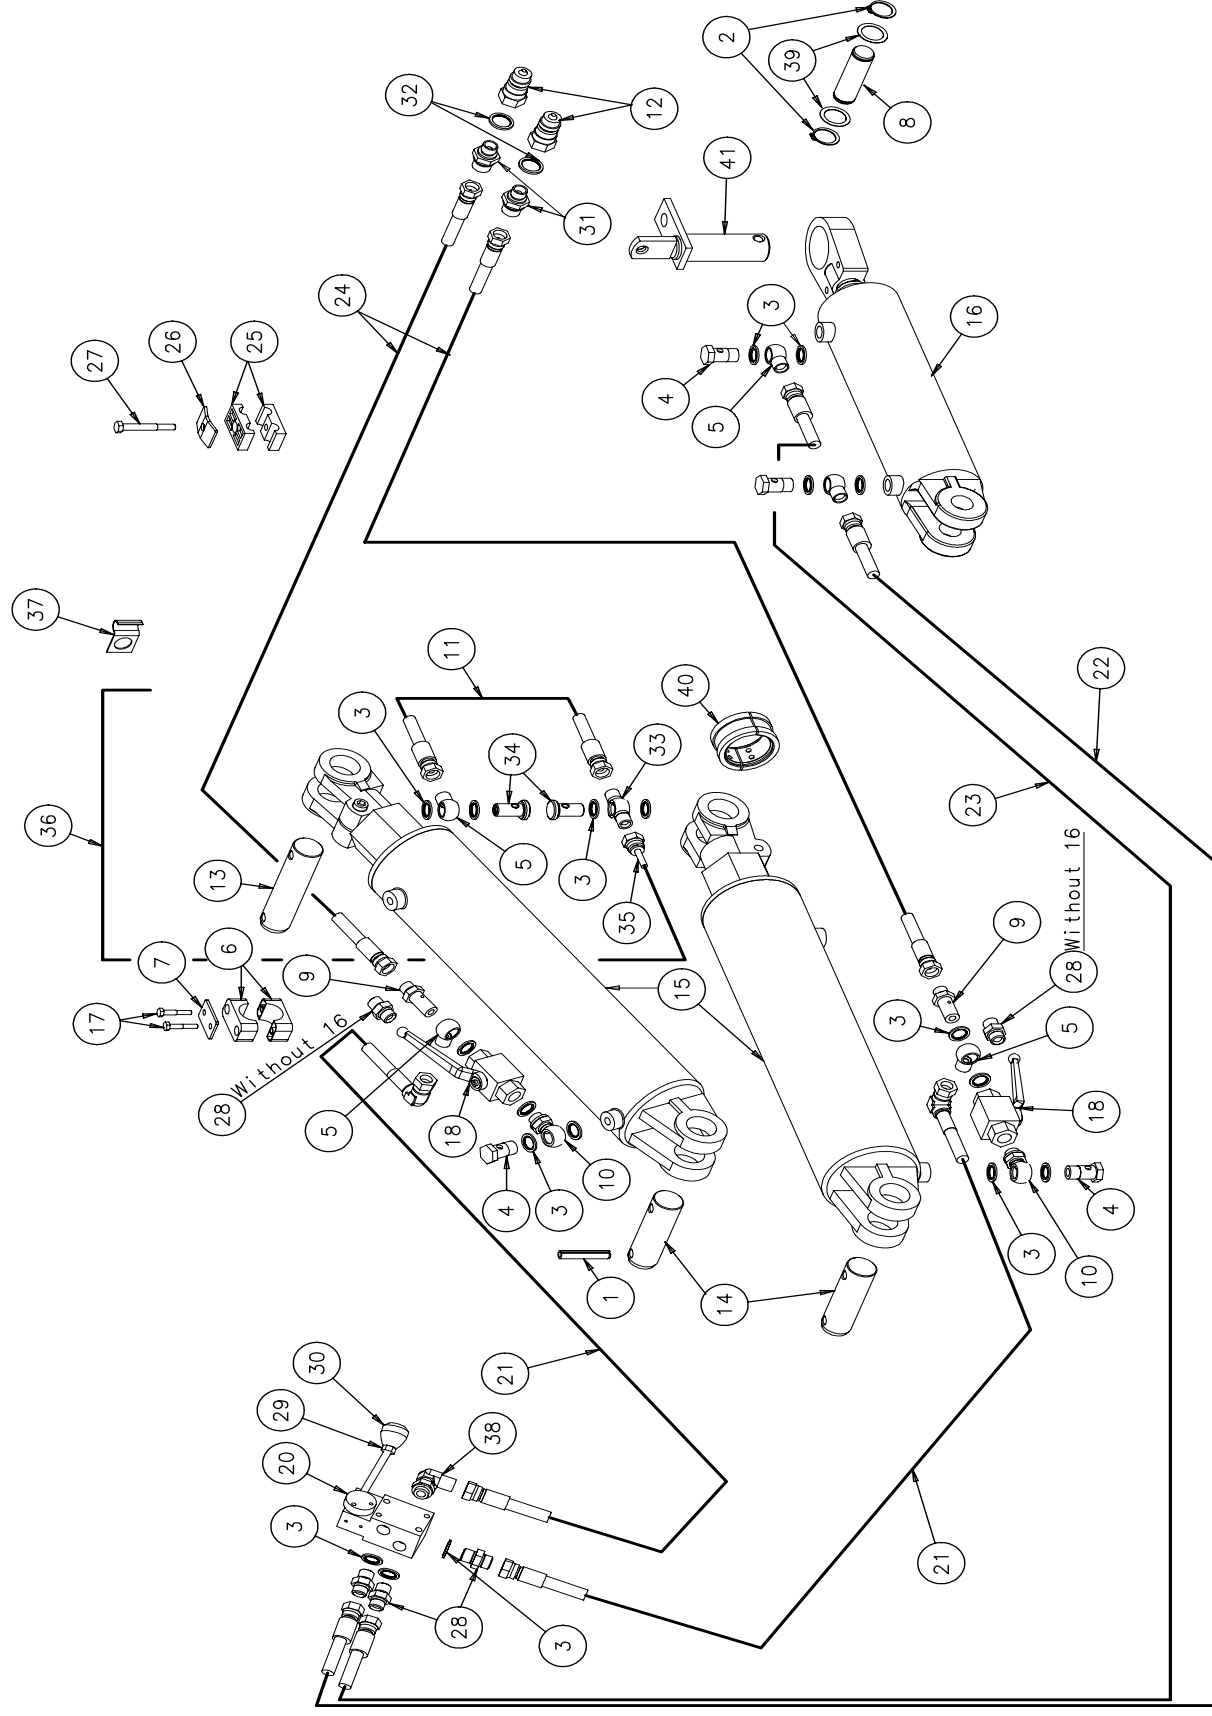


1	KK 01 10 59	Roll pin D10 x 60 mm			
2	KK 01 12 77	Circlip (Before 01.10.00)			
3	KK 01 15 85	Gasket ring		32	KK 01 15 65
4	KK 01 20 59	Banjo bolt 3/8" x 31 mm		33	KK 01 25 70
5	KK 01 20 62	Banjo 3/8" - 3/8"		34	KK 01 25 51
6	KK 01 20 68	Clamp for hoses		35	KK 01 35 18
7	KK 01 20 69	Plate for clamp		36	KK 01 35 22
8	KK 07 72 64	Bolt (Before 01.10.00)		37	KK 01 27 00
9	KK 01 23 07	Banjo 3/8" x 31 mm w/extra outlet		38	KK 01 27 30
10	KK 01 25 48	Banjo 3/8" w/adjustable end		39	KK 01 29 80
11	KK 01 26 55	Hose 3/8", L= 350 mm		40	KK 35 22 46
12	KK 01 21 14	Quick coupling		41	KK 08 21 71
13	KK 07 85 83	Axle			
14	KK 07 85 84	Axle			
15	KK 35 27 79	Cylinder D100 x 400 mm w/adjustable nut (for PL/RL) (Before 15.05.99) (see plate no. 1025)			
	KK 35 38 13	Cylinder D100 x 400 mm (for PL/RL) (From 15.05.99) (see plate no. 1084)			
	KK 35 38 34	Cylinder D100 x 400 mm (for PL/RL) (From 01.10.00, serial no. PL229 and RL138) (see plate no. 1145)			
	KK 35 27 87	Cylinder D75 x 400 mm w/adjustable nut (for PM/RM) (see plate no. 1025)			
16	KK 35 37 06	Cylinder D75 x 200 mm (optional equipment for PM/RM) (Before 01.10.00) (see plate no. 890)			
	KK 35 27 77	Support cylinder D80 x 240 mm (From 01.10.00, serial no. PL229, RL138, PM179 and RM131) (see plate no. 1104)			
17	KK 03 23 35	Hex screw M6 x 35 mm			
18	KK 01 27 23	Tap 3/8" w/handle			
20	KK 01 23 39	Valve (optional equipment for PM/RM)			
21	KK 01 15 41	Hose 3/8", L= 700 (optional equipment for PM/RM)			
22	KK 01 27 73	Hose 3/8", L= 1300 (optional equipment for PM/RM)			
23	KK 01 27 78	Hose 3/8", L= 1000 (optional equipment for PM/RM)			
24	KK 01 27 96	Hose 3/8", L= 5000			
25	KK 01 25 22	Clamp for hoses			
26	KK 01 23 24	Plate for clamp			
27	KK 03 24 65	Hex screw M8 x 65 mm			
28	KK 01 22 61	Threaded coupling			
29	KK 01 58 11	Nut M8			
30	KK 07 76 82	Steering for valve			
31	KK 01 20 60	Threaded coupling 3/8" - 1/2"			

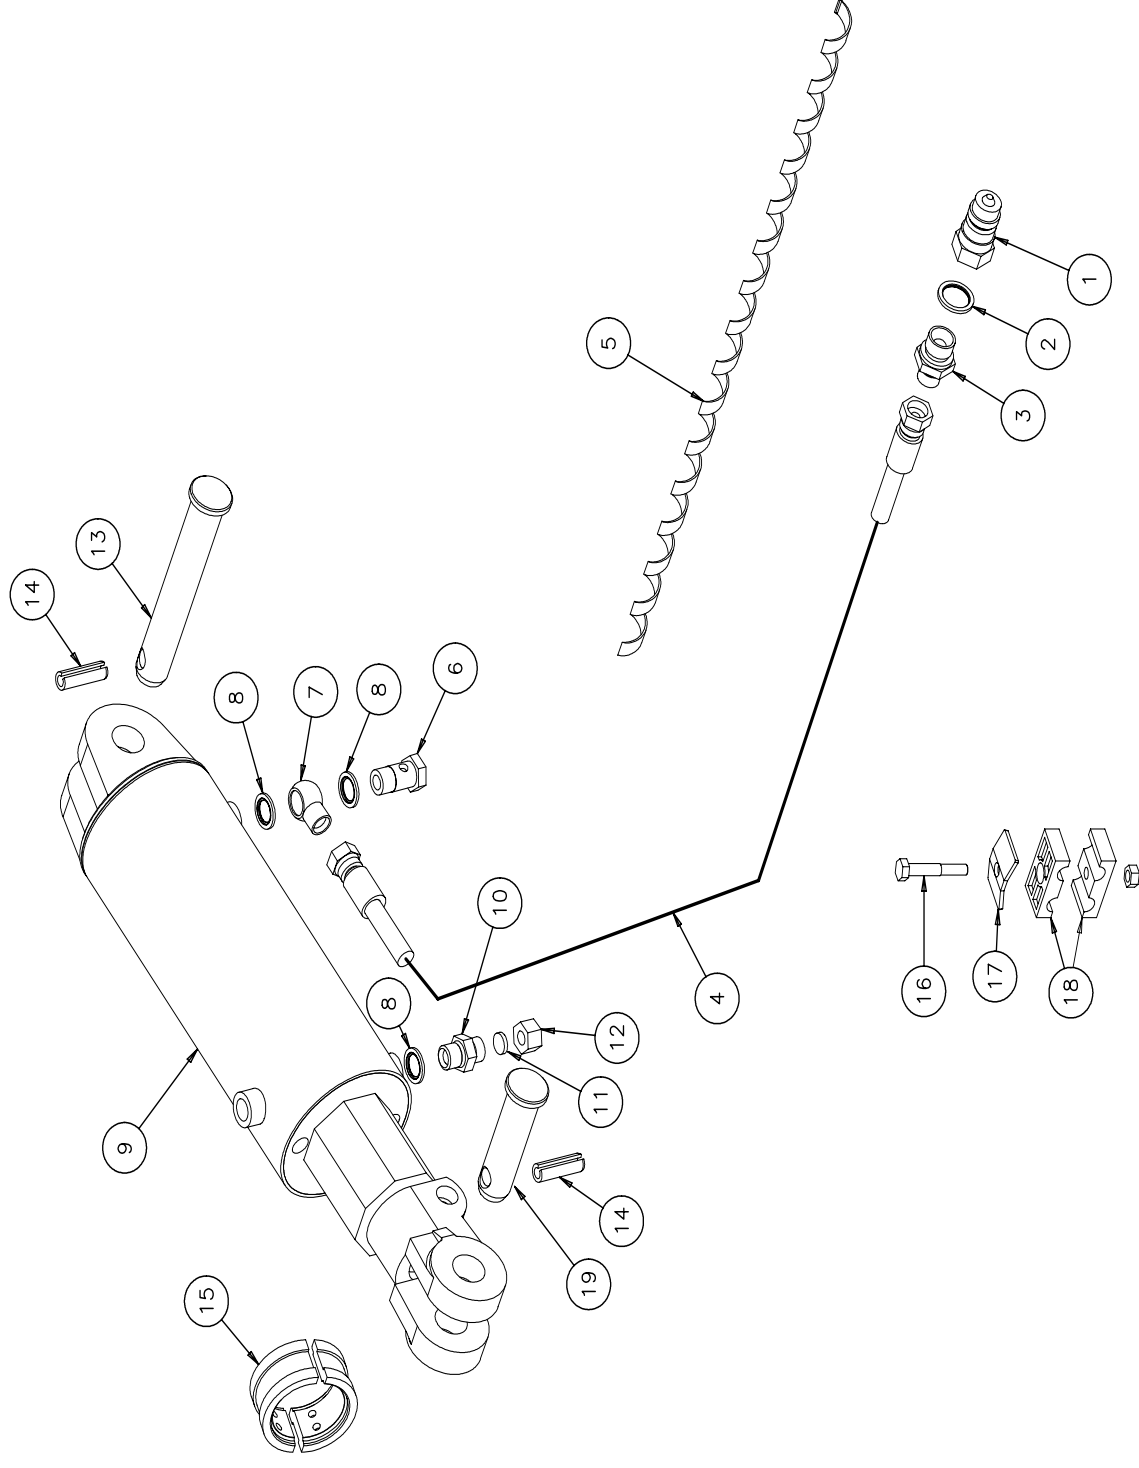

1043 Hydraulic wheel lifting for PM/RM




1	KK 01 21 14	Quick coupling
2	KK 01 15 65	Gasket ring 1/2"
3	KK 01 20 60	Threaded coupling 3/8" - 1/2"
4	KK 01 27 79	Hose 3/8" x 7000 mm, 6 furrow
	KK 01 27 80	Hose 3/8" x 8000 mm, 7 furrow
	KK 01 27 81	Hose 3/8" x 9000 mm, 8 furrow
5	KK 01 21 16	Hose wrapper
6	KK 01 20 59	Banjo bolt 3/8"
7	KK 01 20 62	Banjo 3/8"
8	KK 01 15 85	Gasket ring 3/8"
9	KK 35 33 70	Hydraulic cylinder D100 x 215 mm w/stop (see plate no. 1026) (Before 01.06.00)
	KK 35 38 37	Hydraulic cylinder D100 x 200 mm w/stop and bellow (see plate no. 1129) (From 01.06.00)
10	KK 01 22 61	Threaded coupling 3/8" - 3/8"
11	KK 01 09 61	Filter
12	KK 01 09 60	Filter cap
13	KK 01 03 28	Bolt w/head D25.3 x 78 mm (Before 01.02.00)
	KK 01 03 23	Bolt w/head D25.3 x 150 mm (From 01.02.00)
14	KK 01 10 20	Roll pin D12 x 40 mm
15	KK 35 22 48	Clip
16	KK 03 24 50	Hex screw M8 x 50 mm w/nut
17	KK 01 23 24	Plate for clamp
18	KK 01 25 22	Plastic clamp for hose
19	KK 01 03 28	Bolt w/head D25.3 x 78 mm

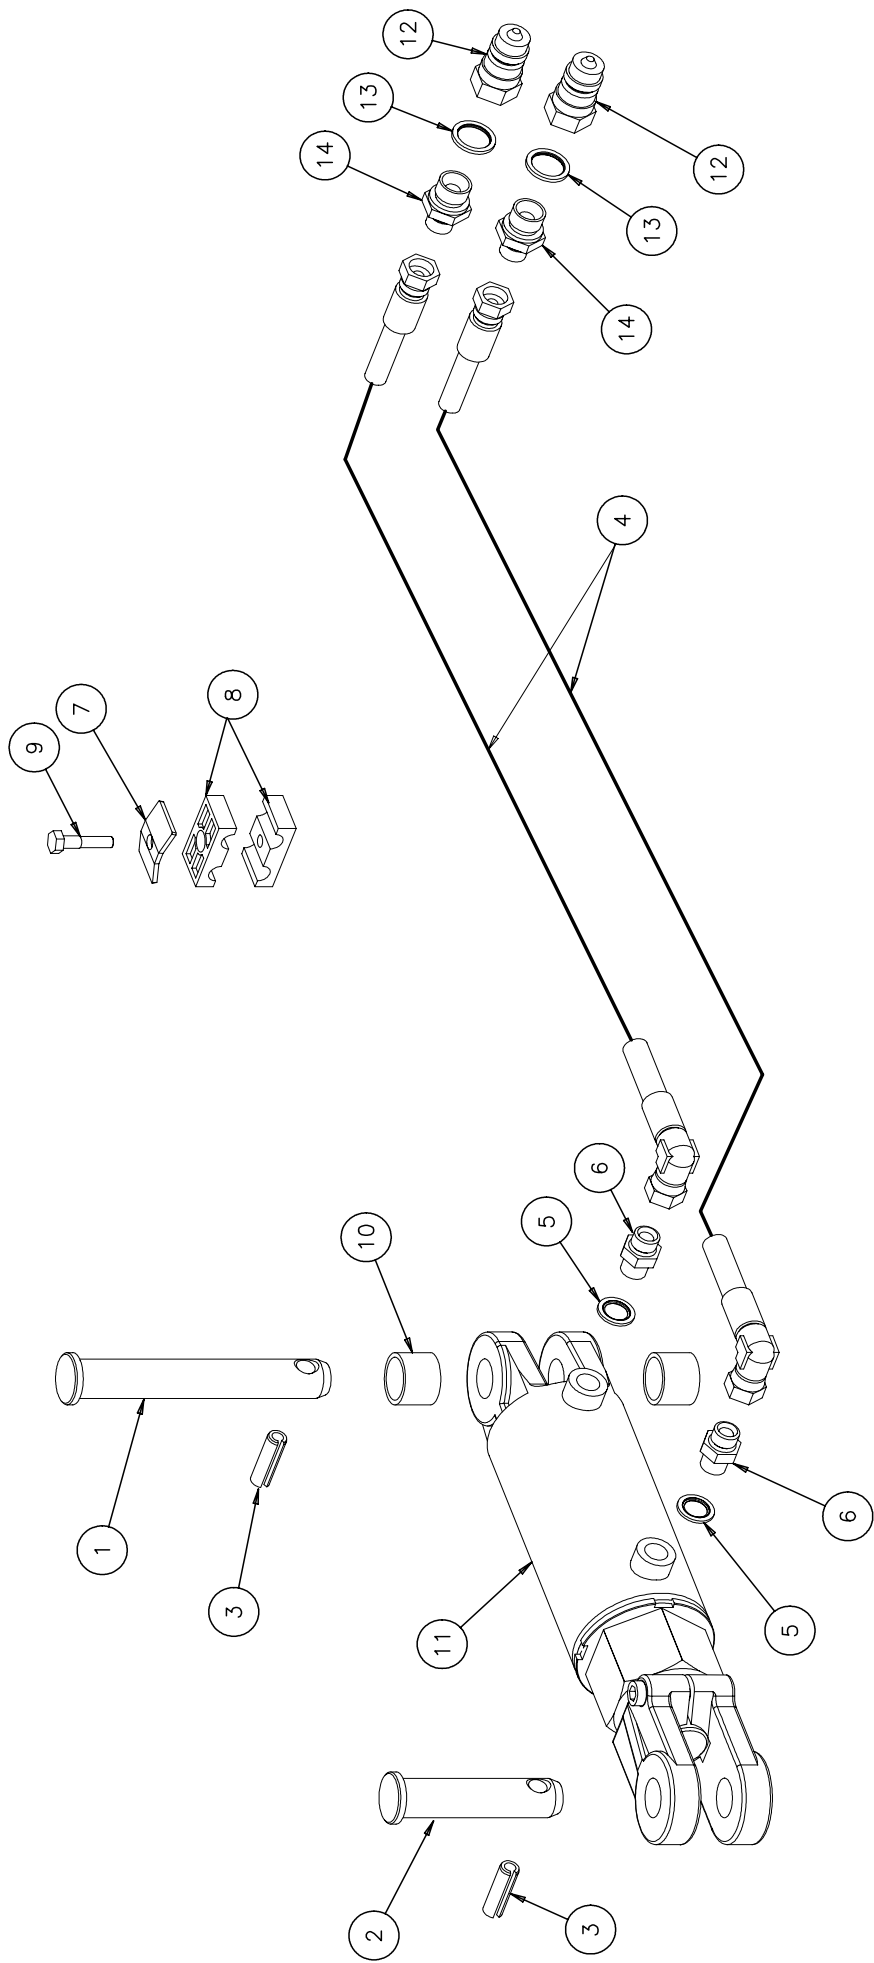

1028 Hydraulic front furrow width adjustment (PL/RL from 01.1.1.99, PL/RL and PM/RM before 01.08.00)




1	KK 01 03 35	Bolt 25.3 x 155 mm
2	KK 01 03 19	Bolt 25.3 x 120 mm
3	KK 01 10 20	Roll pin D12 x 40 mm
4	KK 01 15 23	Hose 3/8" x 4500 mm
5	KK 01 15 85	Gasket ring 3/8"
6	KK 01 22 61	Threaded coupling 3/8" - 3/8"
7	KK 01 23 24	Plate
8	KK 01 25 22	Fix for hose
9	KK 03 24 45	Hex screw M8 x 45 mm w/nut
10	KK 12 41 57	Bushing
11	KK 35 24 96	Hydraulic cylinder D75 x 130 mm (Before 01.09.99.) (see plate no. 445)
	KK 35 37 10	Hydraulic cylinder D75 x 130 mm (From 01.09.99) (see plate no. 1092)
12	KK 01 21 14	Quick coupling
13	KK 01 15 65	Gasket ring
14	KK 01 20 60	Threaded coupling 3/8" - 1/2"

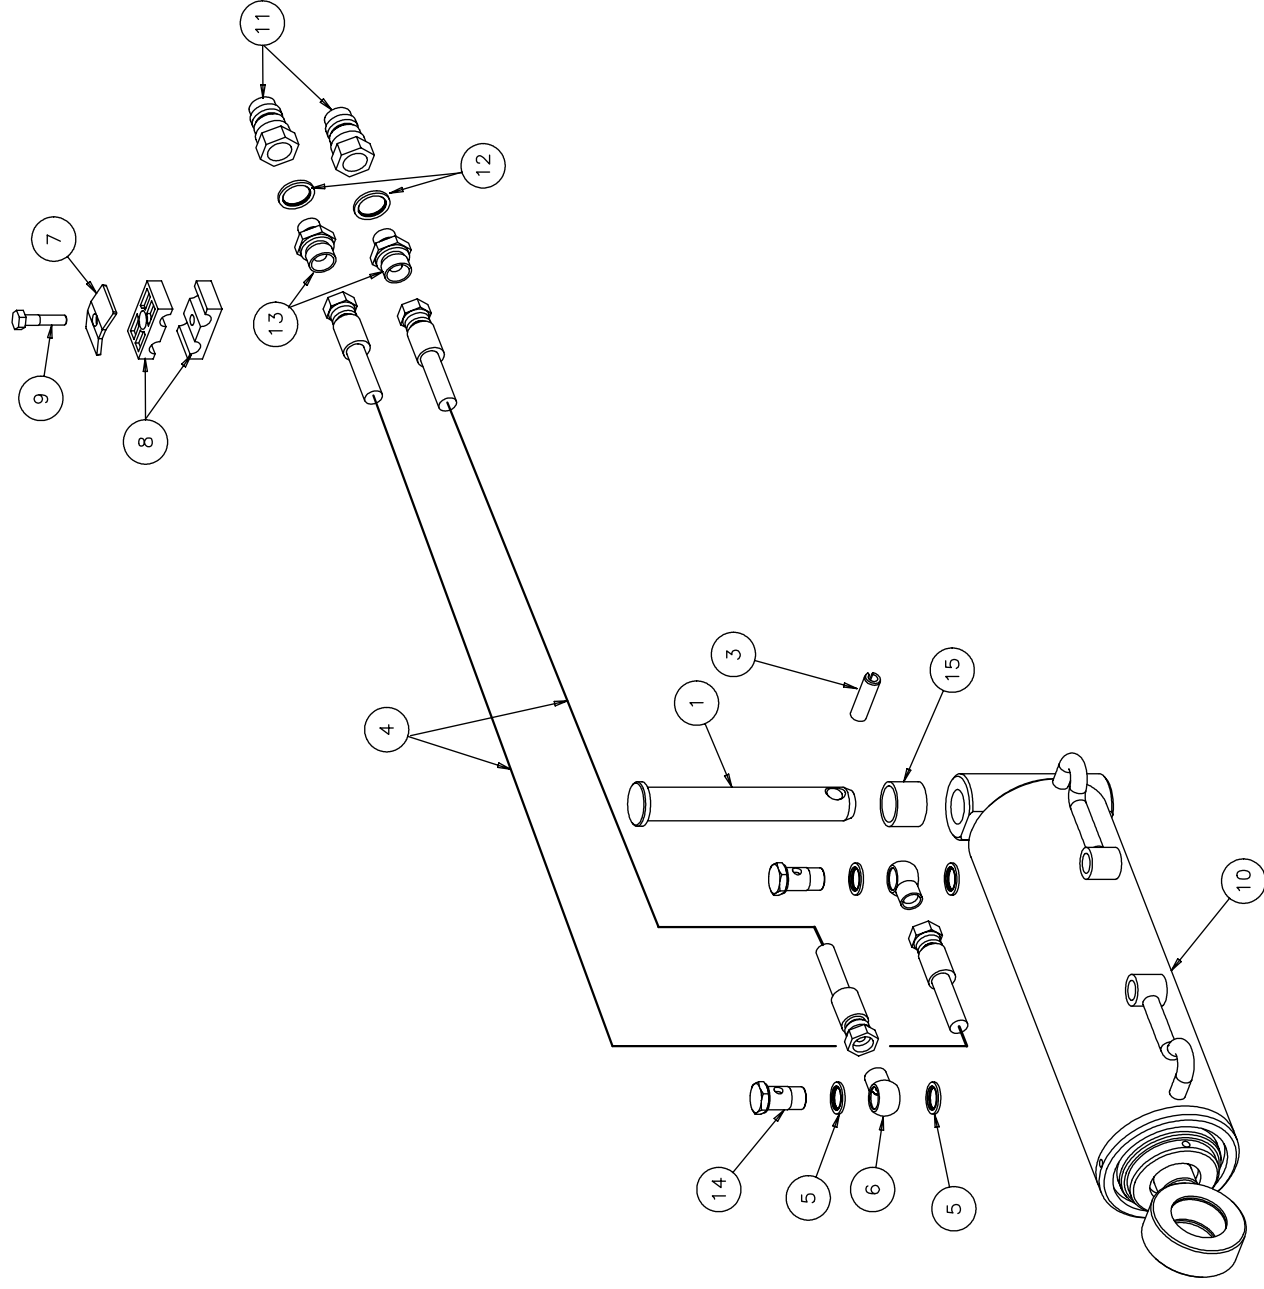




1	KK 01 03 29	Bolt 25.3 x 93 mm	
2	KK 01 03 35	Bolt 25.3 x 155 mm (Before 01.08.00)	
3	KK 01 10 20	Roll pin D12 x 40 mm	
4	KK 01 15 23	Hose 3/8" x 4500 mm	
5	KK 01 15 85	Gasket ring 3/8"	
6	KK 01 20 62	Banjo coupling 3/8" - 3/8"	
7	KK 01 23 24	Plate	
8	KK 01 25 22	Fix for hose	
9	KK 03 24 45	Hex screw M8 x 45 mm w/nut	
10	KK 35 35 34	Telescopic cylinder D95 x 445 mm (see plate no. 1027) (Before 01.08.00)	
	KK 35 36 34	Telescopic cylinder D95 x 457 mm (see plate no. 1169) (From 01.08.00)	
11	KK 01 21 14	Fast coupling plug	
12	KK 01 15 65	Gasket ring	
13	KK 01 20 60	Threaded coupling 3/8" - 1/2"	
14	KK 01 20 59	Banjo bolt 3/8" x 31	
15	KK 12 41 57	Bushing (From 01.08.00)	

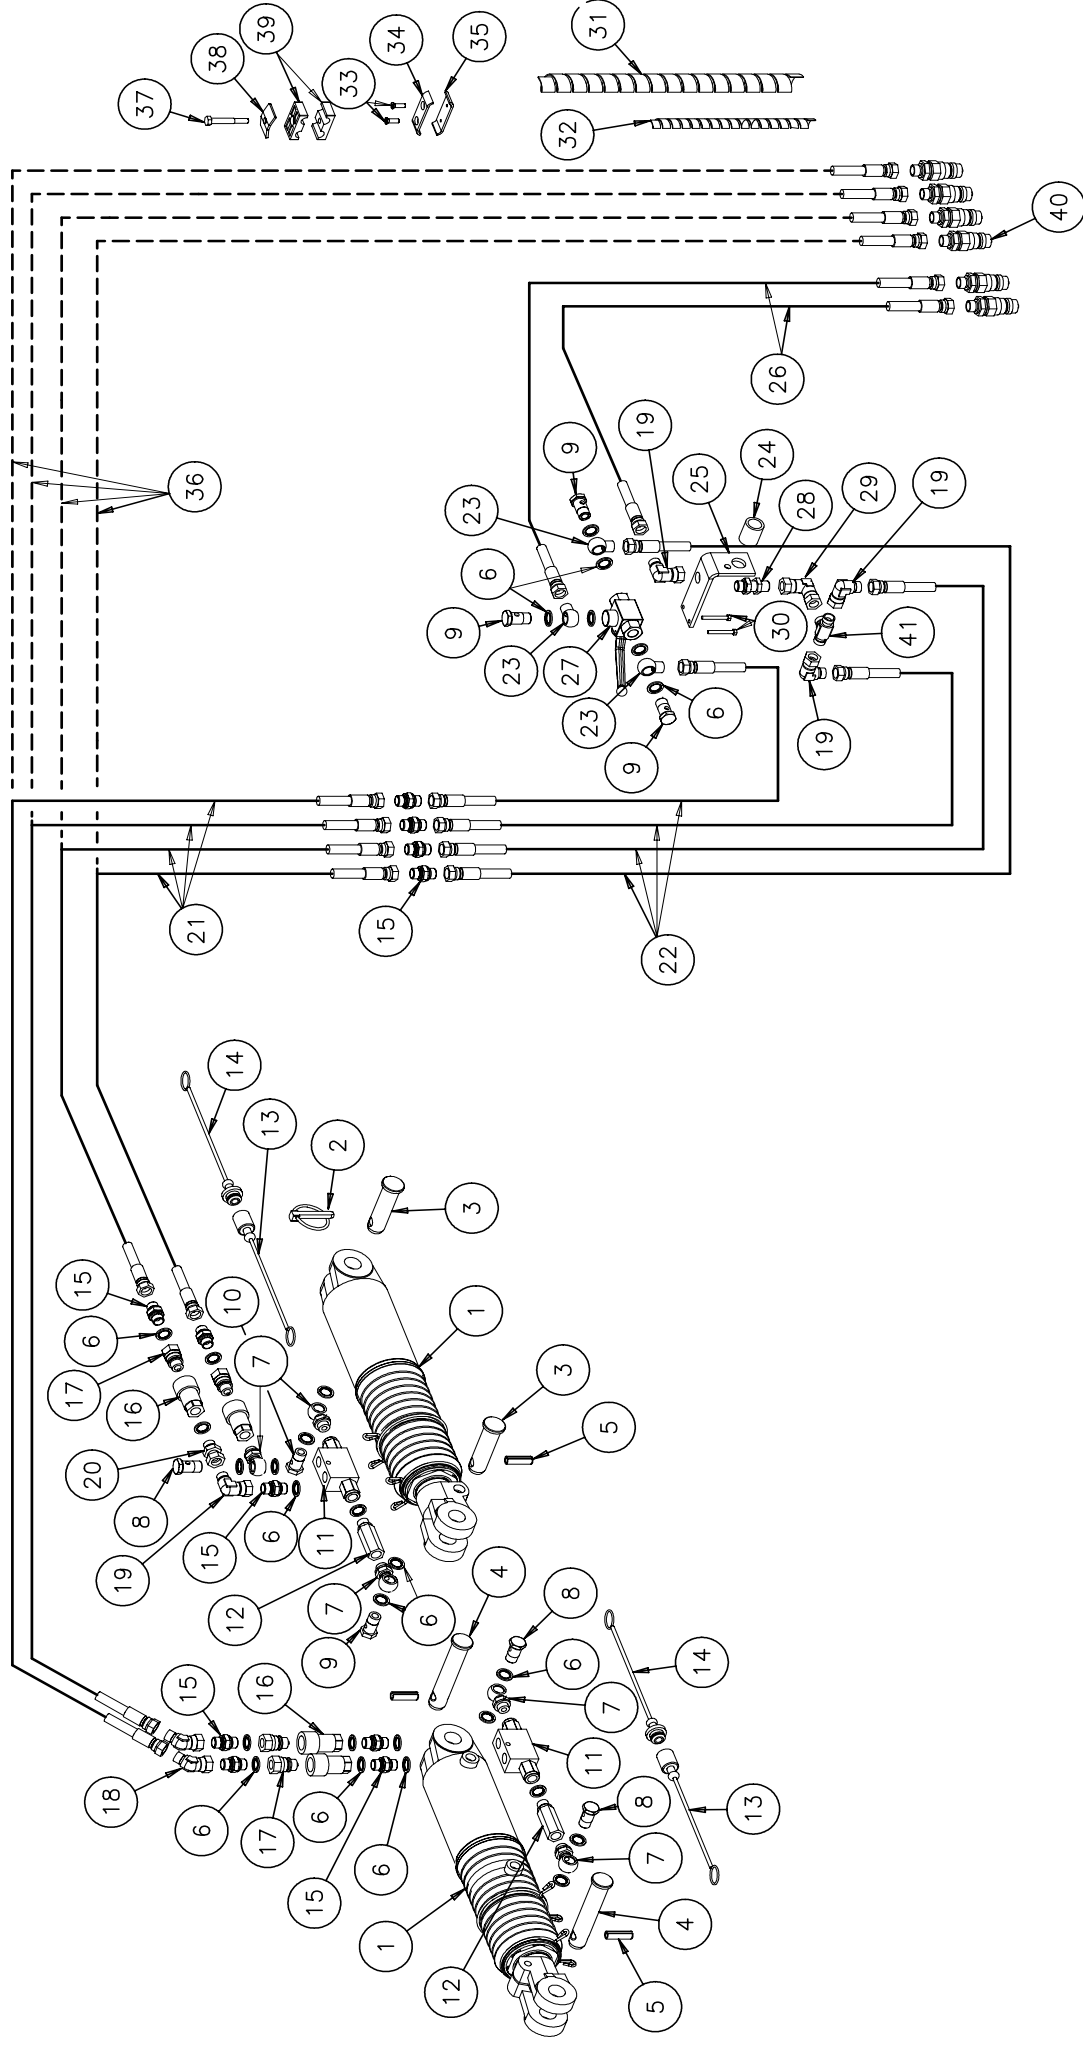


1170 Hydraulic layout for S-arm, PM/RM and PL/RL


1	KK 35 38 04	Hydraulic cylinder D80 x 200 mm w/stop and bellow cpl. (see plate no. 1062)			
2	KK 01 07 00	Ring pin D12		KK 03 24 60	Hex screw M8 x 60 mm w/nut
3	KK 01 03 28	Bolt w/head D25.3 x 78 mm		KK 03 24 75	Hex screw M8 x 75 mm w/nut
4	KK 01 03 19	Bolt w/head D25.3 x 120 mm		KK 03 24 80	Hex screw M8 x 80 mm w/nut
5	KK 01 10 20	Pin D12 x 40 mm	38	KK 01 23 24	Plate
6	KK 01 15 85	Gasket ring 3/8"	39	KK 01 23 23	Plastic part
7	KK 01 25 48	Banjo 3/8" w/adjustable end	40	KK 01 21 58	Quick coupling 1/2" - 3/8"
8	KK 01 20 59	Banjo bolt 3/8" x 31	41	KK 01 21 20	T-coupling 3/8"
9	KK 01 20 82	Banjo bolt 3/8" x 31 w/1.4 choke	Not ill.	KK 01 25 09	Strip, green
10	KK 01 20 83	Banjo bolt 3/8" x 31 w/1.7 choke		KK 01 27 34	Strip, blue
11	KK 01 25 08	Lock valve 3/8", double		KK 01 27 35	Strip, red
12	KK 01 25 77	Threaded piece 3/8" - 3/8"		KK 01 35 29	Strip, yellow
13	KK 01 35 89	Dust cap, blue			
14	KK 01 35 90	Dust plug, blue			
15	KK 01 22 61	Threaded coupling 3/8" - 3/8"			
16	KK 01 27 06	Quick coupling 3/8", female			
17	KK 01 27 05	Quick coupling 3/8", male			
18	KK 01 25 26	Threaded coupling 3/8" - 3/8", 45° angle			
19	KK 01 20 56	Angle 3/8"			
20	KK 01 23 19	Swivel 3/8" - 3/8"			
21	KK 01 27 93	Hose 1/4", L = 4500 mm (only when using manual valve)			
22	KK 01 23 74	Hose 1/4", L = 750 mm (only when using manual valve, OL-version)			
23	KK 01 20 62	Banjo 3/8", H = 17 (only when using manual valve)			
24	KK 06 15 15	Bushing (only when using manual valve)			
25	KK 08 20 88	Bracket angle (only when using manual valve)			
26	KK 01 27 84	Hose 1/4", L = 2000 mm (only when using manual valve)			
27	KK 01 25 31	Ball valve 3/8" (only when using manual valve)			
28	KK 01 27 07	Bulkhead pipe 3/8" (only when using manual valve)			
29	KK 01 21 24	Angle 3/8" swivel - 3/8" swivel (only when using manual valve)			
30	KK 03 33 08	Hex screw M5 x 45 mm w/nut (only when using manual valve)			
31	KK 01 35 01	Hose band D32 x 400 mm			
32	KK 01 15 96	Hose band D12.5 x 250 mm			
33	KK 03 33 21	Countersunk screw M6 x 20 mm w/nut			
34	KK 01 35 44	Clamp 1/4", D7 mm			
35	KK 01 35 45	Clamp 1/4", D6 mm			
36	KK 01 26 62	Hose 1/4", L = 6500 mm (only when hoses go directly to tractor)			
	KK 01 26 54	Hose 1/4", L = 7500 mm (only when hoses go directly to tractor, OL-version)			
37	KK 03 24 45	Hex screw M8 x 45 mm w/nut			

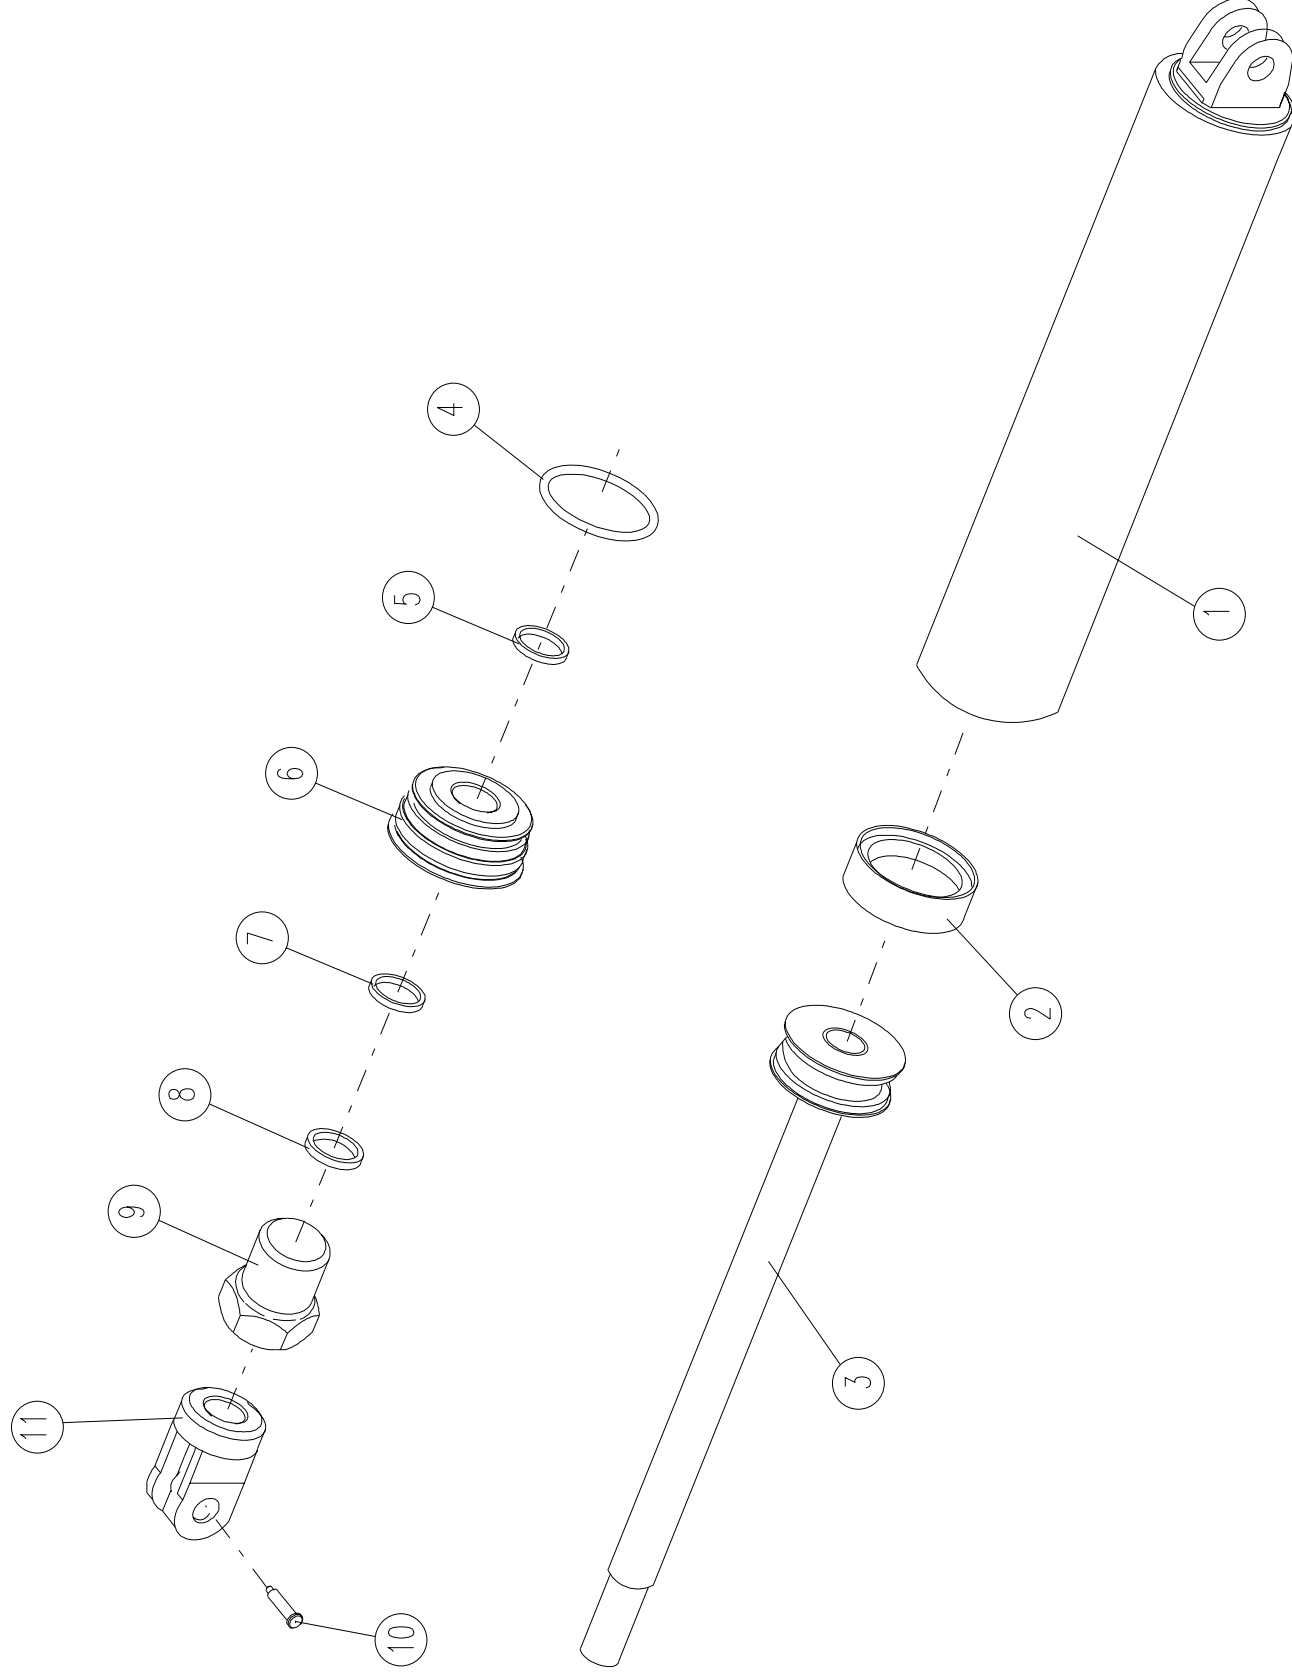

1	KK 35 36 16	Cylinder tube (for D75 mm)
	KK 35 27 97	Cylinder tube (for D100 mm)
2	KK 01 30 53	Piston packing (for D75 mm)
	KK 01 19 08	Piston packing (for D100 mm)
3	KK 35 36 17	Piston rod w/piston (for D75 mm)
	KK 35 27 86	Piston rod w/piston (for D100 mm)
4	KK 01 30 52	O-ring (for D75 mm)
	KK 01 18 06	O-ring (for D100 mm)
5	KK 01 20 32	Packing for rod
6	KK 35 36 18	End cap w/packings (for D75 mm)
	KK 35 34 58	End cap w/packings (for D100 mm)
7	KK 01 20 39	Scraper
8	KK 01 17 83	O-ring
9	KK 35 27 96	Stop
10	KK 03 20 40	Screw M10 x 40 mm
11	KK 35 33 98	Clevis
Not ill.	KK 01 30 51	Packings cpl. (for D75 mm)
	KK 01 20 15	Packings cpl. (for D100 mm)
	KK 35 27 87	Cylinder D75 x 400 mm w/stop cpl.
	KK 35 27 79	Cylinder D100 x 400 mm w/stop cpl. (Before 15.05.99)

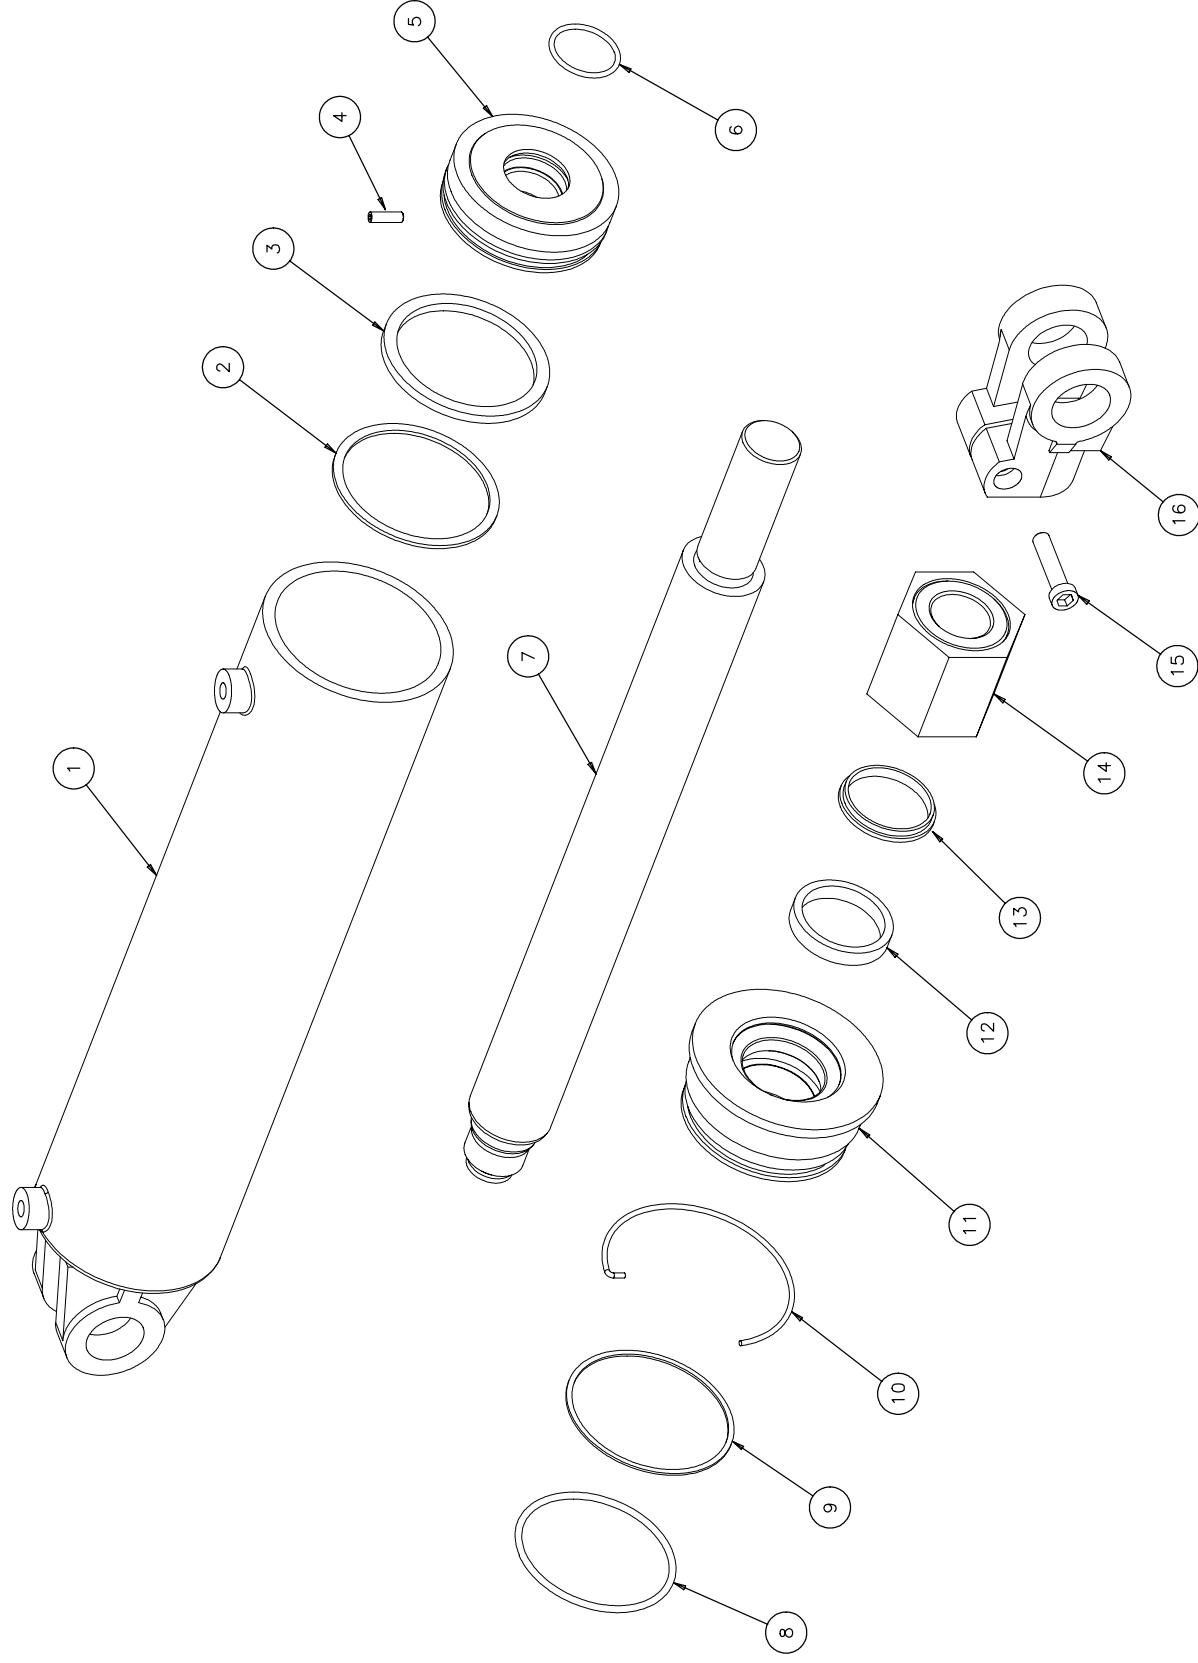


1	KK 35 37 98	Cylinder tube
2	KK 01 65 31	Sliding ring
3	KK 01 65 32	Packing
4	KK 03 20 06	Screw M6 x 20 mm
5	KK 35 37 83	Piston
6	KK 01 65 10	O-ring D40
7	KK 35 37 99	Piston rod
8	KK 01 17 19	O-ring D93
9	KK 01 17 24	Support
10	KK 35 37 95	Lock ring
11	KK 35 37 39	Rod cap
12	KK 01 17 25	Seal for piston rod
13	KK 01 17 27	Scraper
14	KK 35 37 85	Stopping nut
15	KK 03 20 16	Screw M10 x 45 mm
16	KK 35 37 73	Clevis
Not ill.	KK 01 36 05	Packings cpl.
	KK 35 38 13	Hydraulic cylinder D100 x 400 mm w/stop cpl.

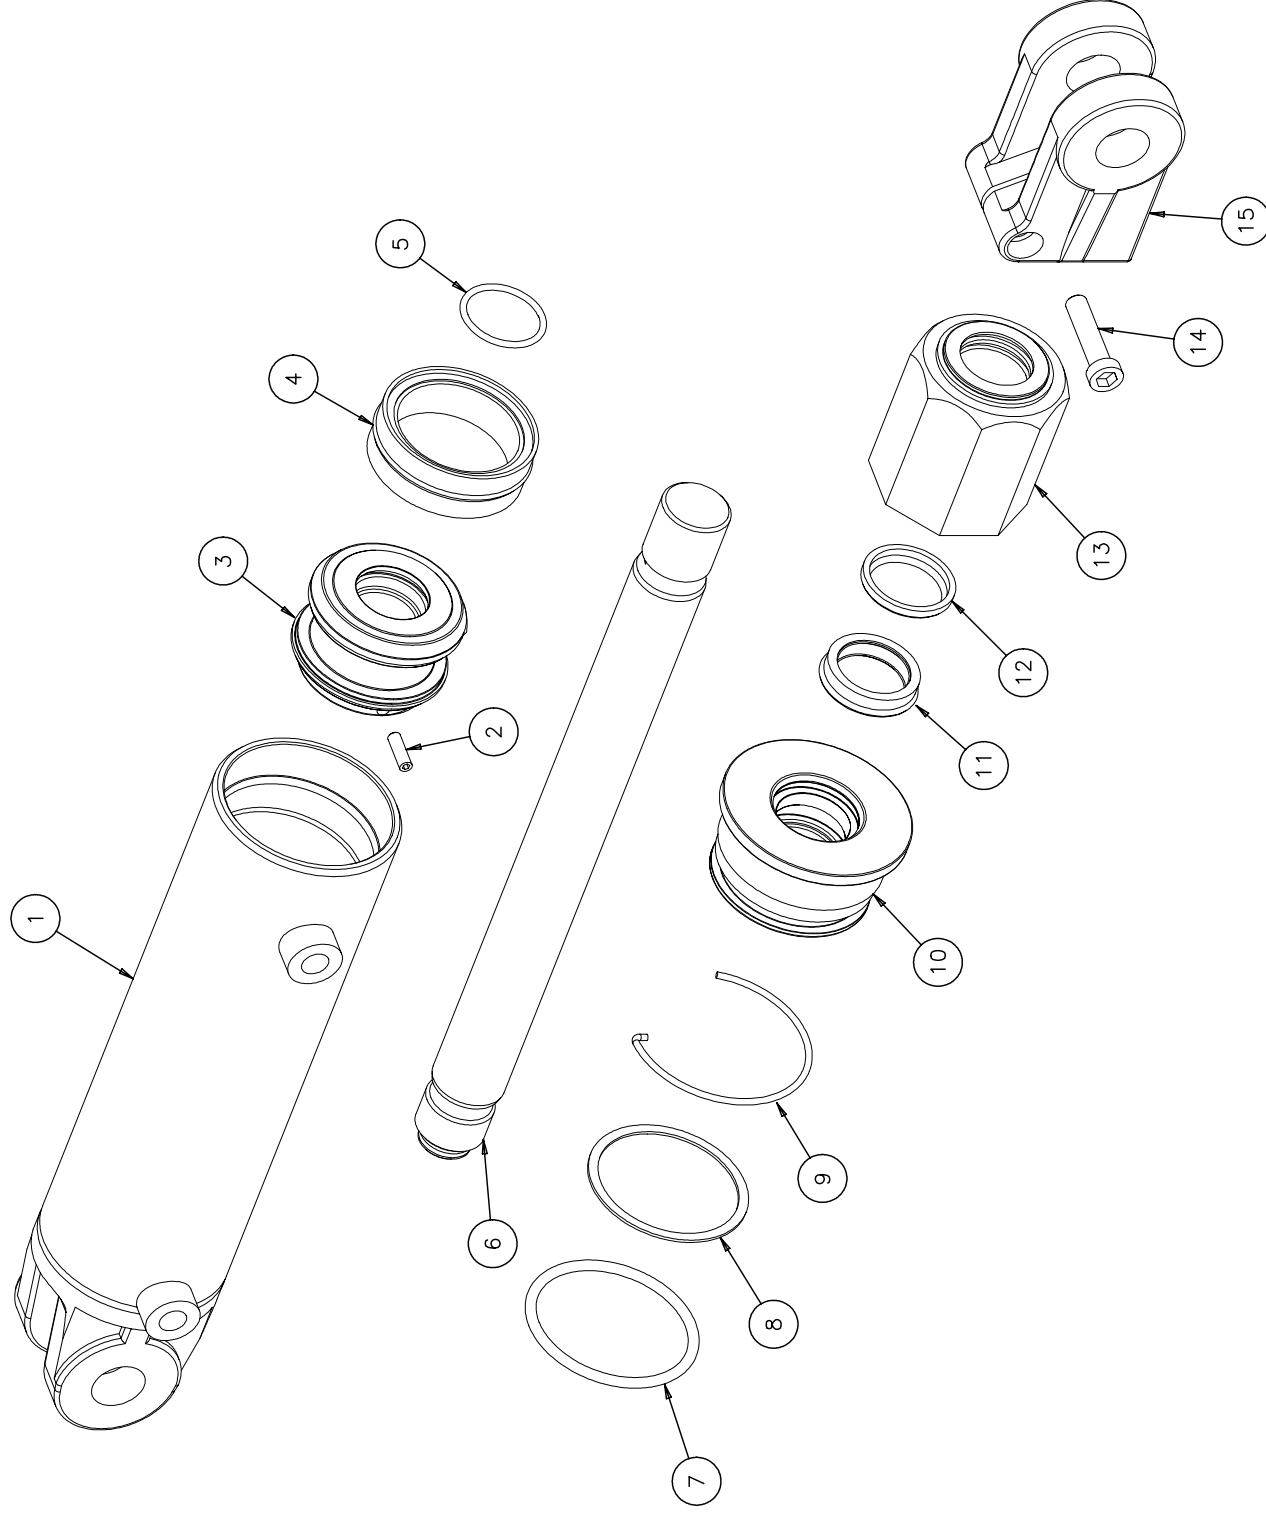

890 Hydraulic cylinder D75 x 200 mm (353704 - 353707)
(From 01.08.96) (Before 01.04.01)




1	KK 35 37 32	Cylinder tube for art.no 353704 (cylinder D75 x 200 mm without stop) and 353705 (cylinder D75 x 200 mm w/stop)
	KK 35 37 35	Cylinder tube for art.no 353706 (cylinder D75 x 200 mm w/90° twisted end cap)
	KK 35 37 36	Cylinder tube for art.no 353707 (cylinder D75 x 400 mm w/90° twisted end cap)
2	KK 03 20 06	Screw w/inner hex M6 x 20 mm
3	KK 35 37 27	Piston
4	KK 01 17 36	Piston packing
5	KK 01 17 37	O-ring
6	KK 35 37 44	Piston rod for art.no 353705 (cylinder D75 x 200 mm w/stop)
	KK 35 37 43	Piston rod for art.no 353704 and 353706 (cylinders D75 x 200 mm without stop)
	KK 35 37 46	Piston rod for art.no 353707 (cylinder D75 x 400 mm w/twisted end cap)
7	KK 01 17 38	O-ring
8	KK 01 17 43	Ring
9	KK 01 17 46	Ring (Before 15.03.99)
	KK 35 37 93	Lock spring (From 15.03.99)
10	KK 35 37 26	Packing seal
11	KK 01 17 44	Piston rod packing
12	KK 01 17 45	Scraper
13	KK 35 37 45	Stop for art.no 353705 (cylinder D75 x 200 mm w/stop)
14	KK 03 20 16	Screw w/inner hex M10 x 45 mm
15	KK 35 37 28	Clevis
Not ill.	KK 35 37 29	Packings cpl.
	KK 35 37 04	Cylinder D75 x 200 mm without stop, cpl.
	KK 35 37 05	Cylinder D75 x 200 mm w/stop, cpl.
	KK 35 37 06	Cylinder D75 x 200 mm w/90° twisted end cap, cpl.
	KK 35 37 07	Cylinder D75 x 400 mm w/90° twisted end cap, cpl.

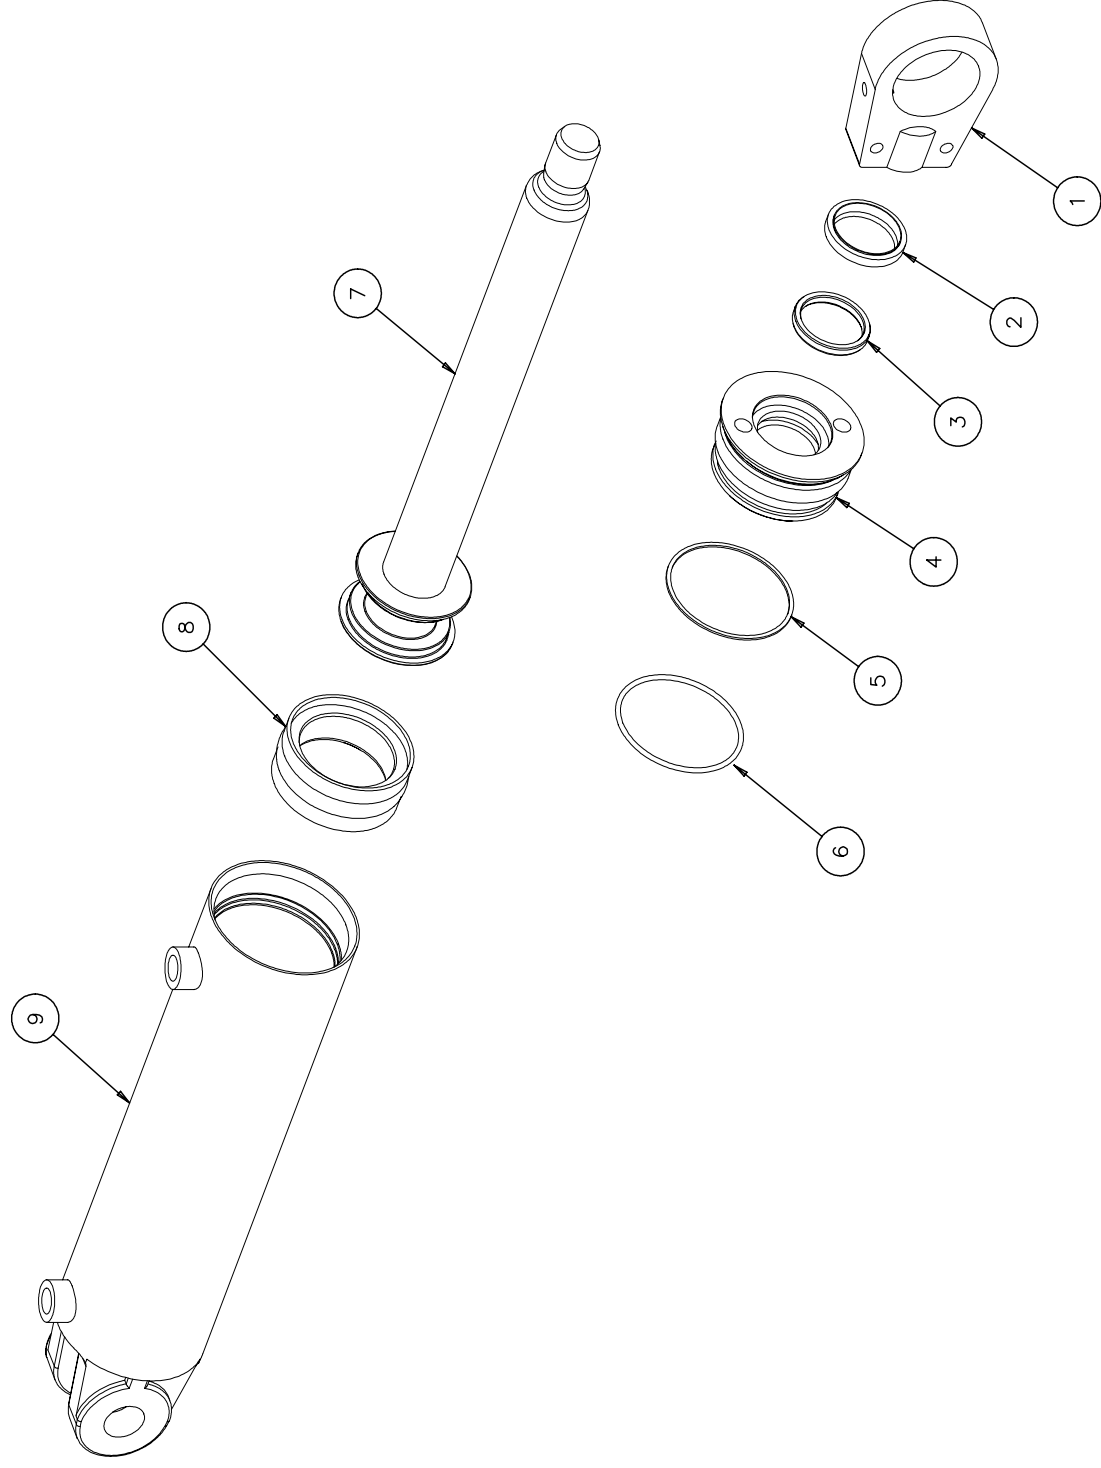

1104 Support cylinder D80 x 240 mm




1	KK 35 21 53	Clevis
2	KK 01 19 12	Scraper seal
3	KK 01 19 51	Packing
4	KK 35 33 56	Rod cap w/packings
5	KK 01 18 76	Retaining ring
6	KK 01 18 24	O-ring
7	KK 35 27 84	Piston rod w/piston
8	KK 01 19 18	Packing
9	KK 35 27 85	Cylinder tube
Not ill.		
	KK 01 20 26	Packings set D80 mm cpl.
	KK 35 27 77	Support cylinder D80 x 240 mm cpl.

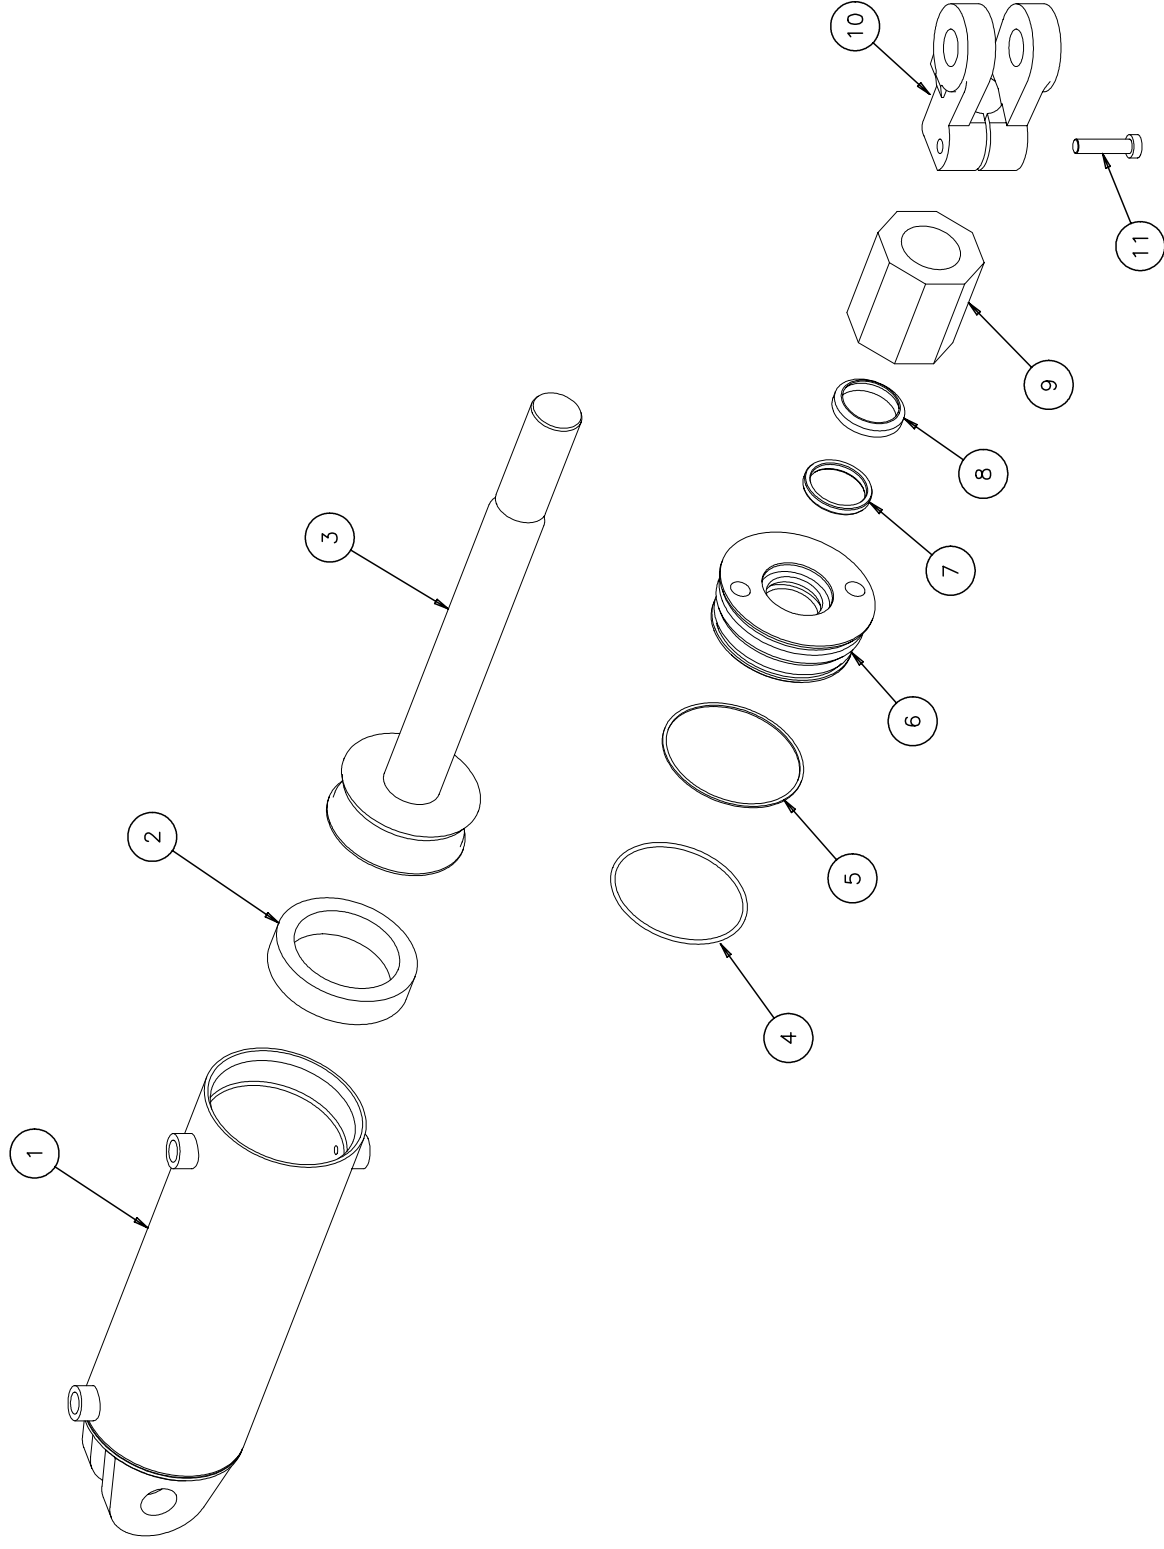





1	KK 35 33 71	Cylinder tube
2	KK 01 19 08	Piston packing
3	KK 35 33 72	Piston rod w/piston
4	KK 01 18 06	O-ring
5	KK 01 18 88	Support ring
6	KK 35 33 73	End cap
7	KK 01 19 51	Piston rod packing
8	KK 01 19 12	Scraper
9	KK 35 22 99	Stop
10	KK 35 33 92	Clevis
11	KK 03 20 40	Screw M10 x 40 mm
Not ill.		
	KK 01 20 27	Packing set cpl.
	KK 35 33 70	Hydraulic cylinder w/stop D100 x 215 mm cpl.

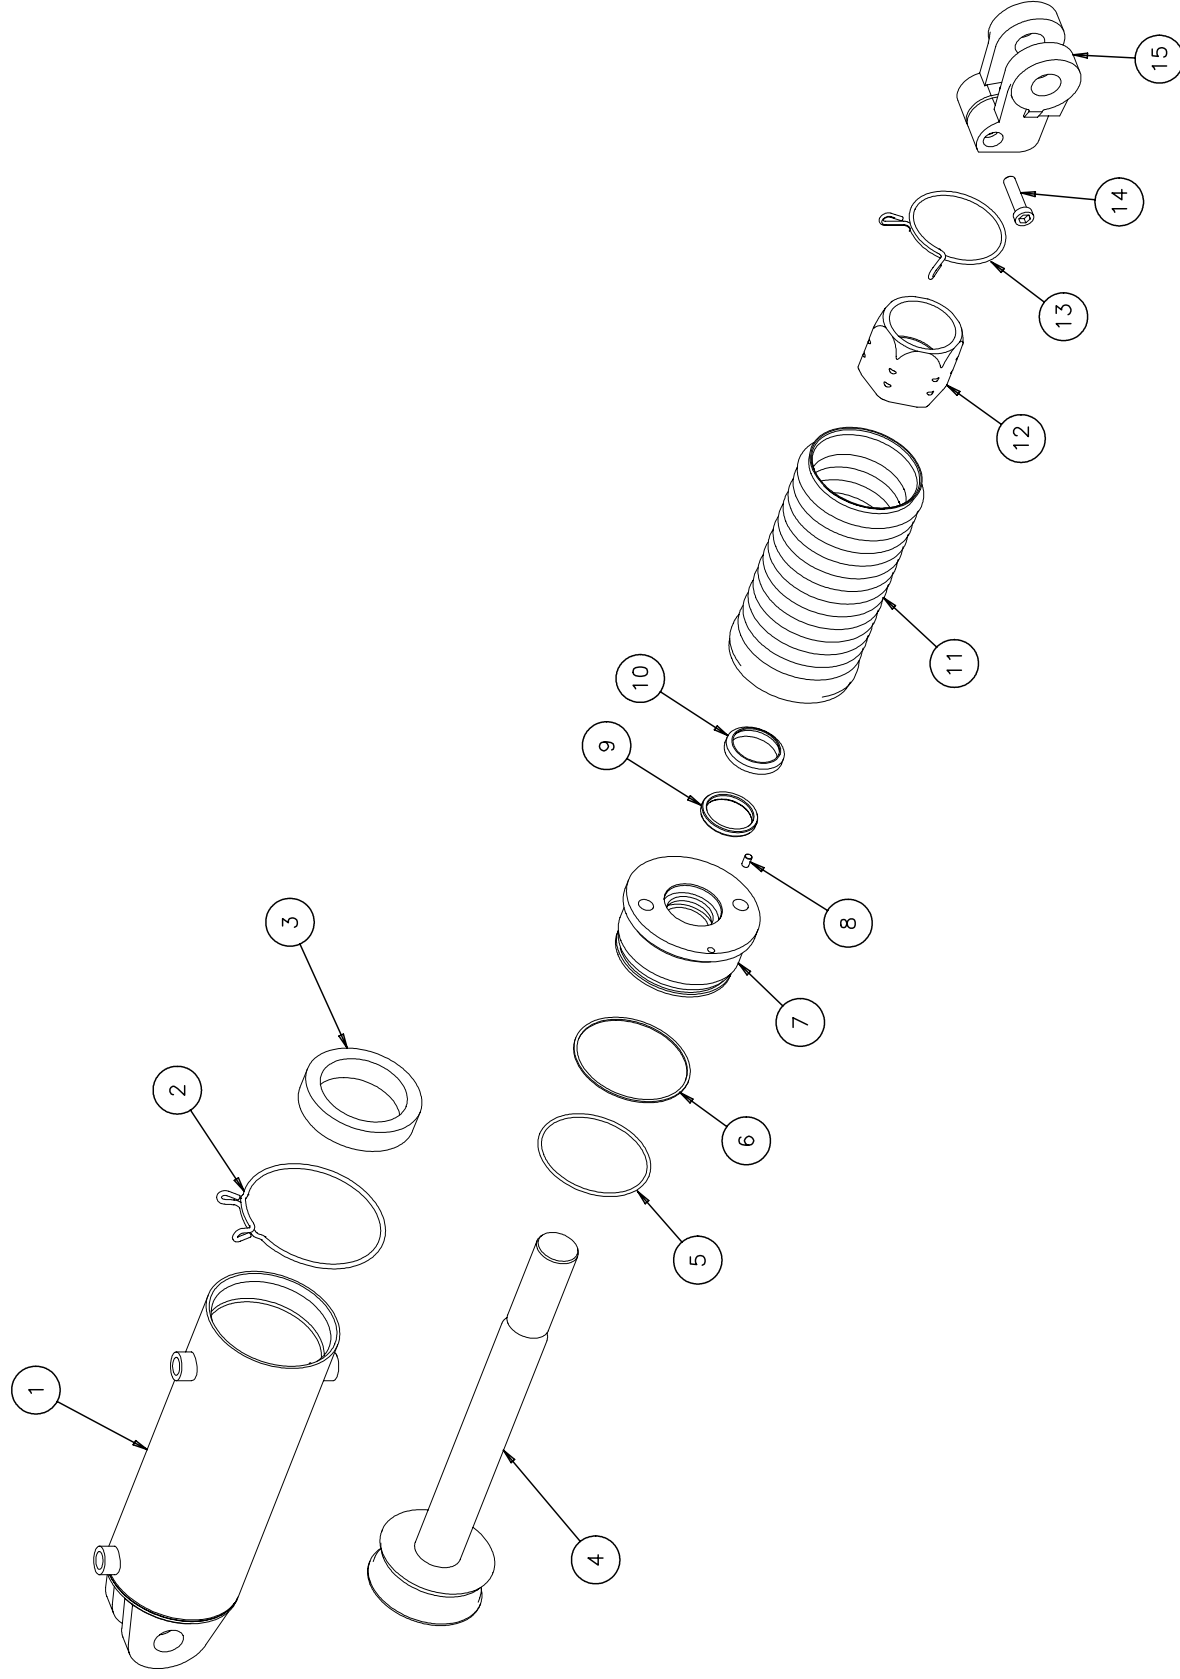

1	KK 35 38 51	Cylinder tube
2	KK 01 35 97	Thread clamp D110
3	KK 01 19 08	Piston packing set
4	KK 35 33 72	Piston rod
5	KK 01 18 06	O-ring
6	KK 01 18 88	Support ring
7	KK 35 38 50	End cap
8	KK 03 20 02	Screw M6 x 10 mm
9	KK 01 19 51	Piston rod packing
10	KK 01 19 12	Scraper
11	KK 01 35 95	Bellow
12	KK 35 36 27	Stop
13	KK 01 35 96	Thread clamp D80
14	KK 03 20 40	Screw M10 x 40 mm
15	KK 35 33 92	Clevis (for PB/RB plough)
	KK 35 27 72	Clevis w/garmax (for PX/RX plough)
Not ill.	KK 01 30 73	Packing set cpl.
	KK 35 38 37	Hydraulic cylinder D100 x 200 mm w/stop and bellow cpl.
	KK 35 38 38	Hydraulic cylinder D100 x 200 mm w/garmax, stop and bellow cpl.

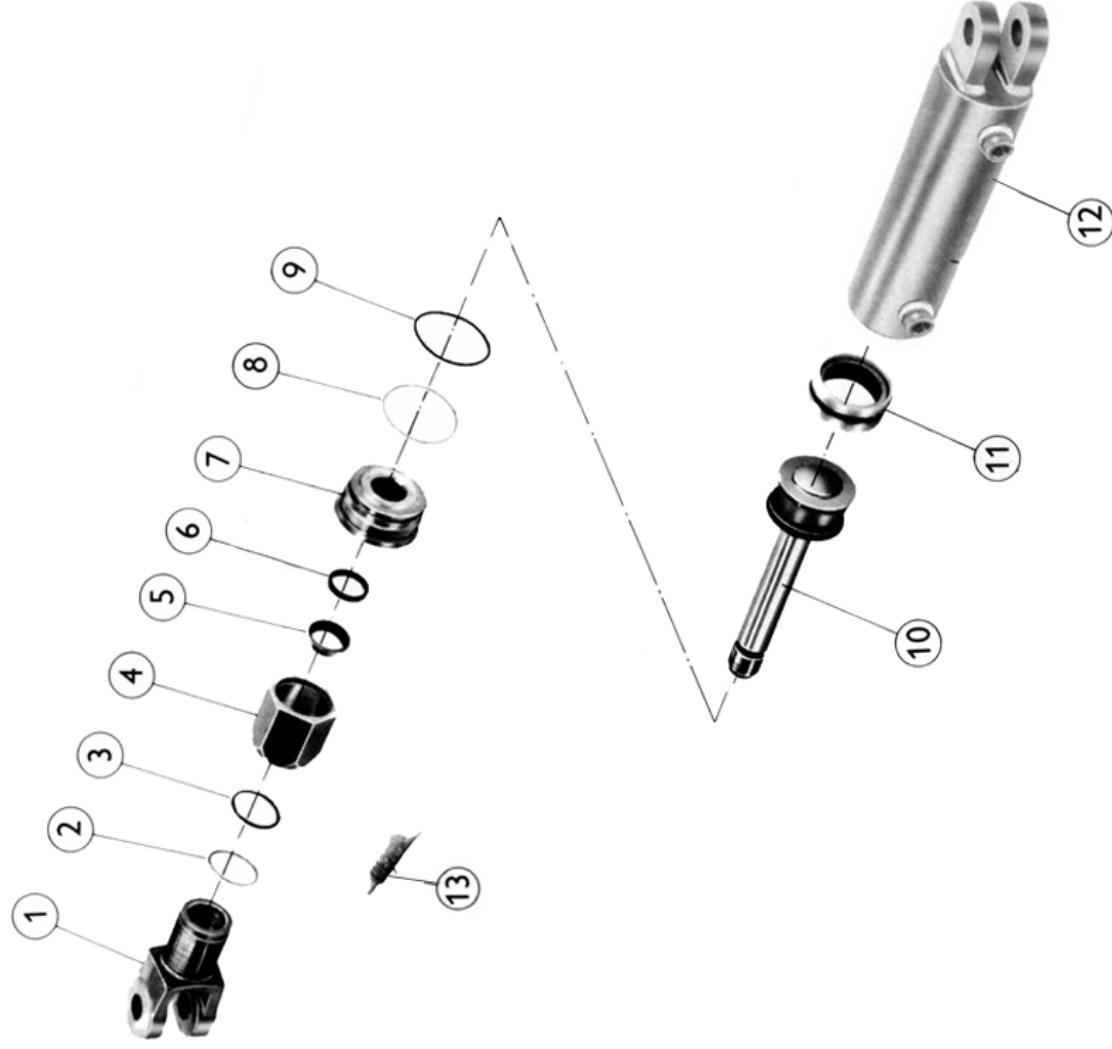


1	KK 35 33 53	Clevis
2	KK 01 18 78	Ring D45 x 2.5 x 1.3
3	KK 01 18 65	O - ring D40 x 4
4	KK 35 33 50	Stop
5	KK 01 19 13	Scraper D32/D44 x 7/10
6	KK 01 19 53	Piston rod packing D32/D40 x 6
7	KK 35 22 61	Endcap D75/D32 cpl.
8	KK 01 18 61	Ring Ø70 x 2.5 x 1.3
9	KK 01 18 02	O - ring D70 x 3 mm
10	KK 35 33 51	Piston rod w/piston D75/D32
11	KK 01 19 06	Piston packing D75/D55 x 22.4
12	KK 35 34 78	Cylinder tube w/clevis cap w/90° turned connectors
13	KK 06 02 21	Glue 3 ml "Locktite 271"
Not ill.	KK 01 20 25	Packings cpl. D75/D32
	KK 35 24 96	Cylinder D75 x 130 mm w/90° turned connectors cpl. (Before 01.09.99)

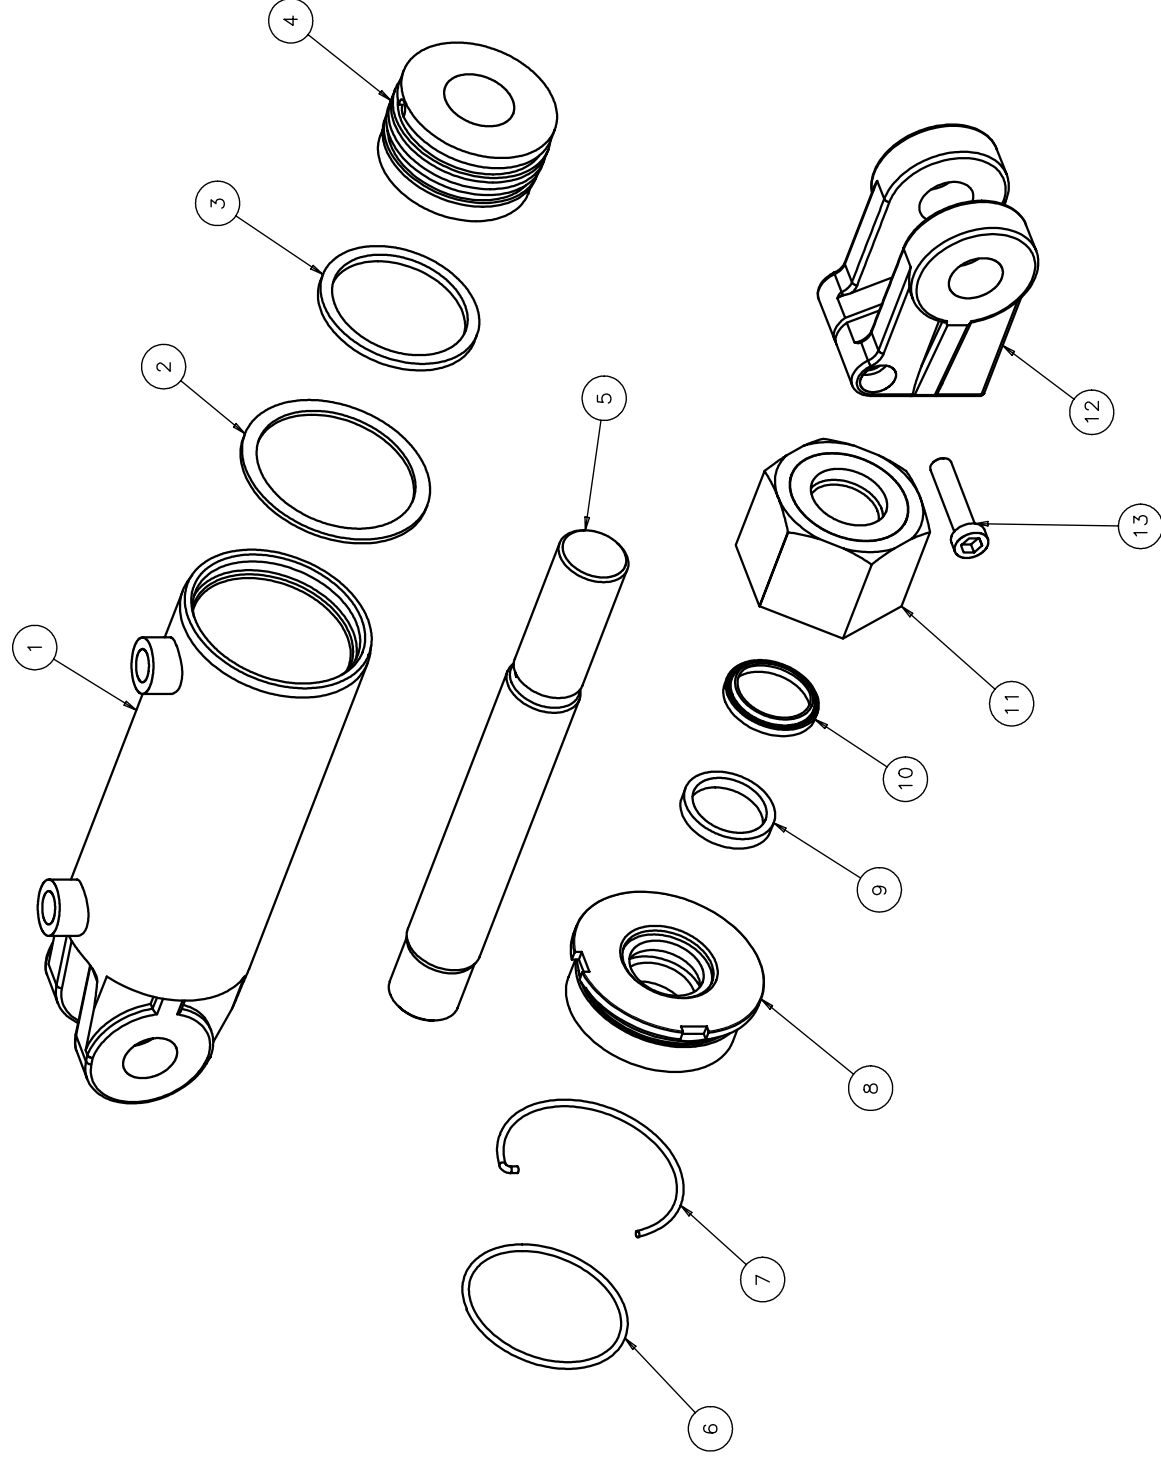




1	KK 35 37 96	Cylinder tube
2	KK 01 65 37	Sliding ring
3	KK 01 65 38	Piston packing
4	KK 35 38 20	Piston
5	KK 35 37 97	Piston rod
6	KK 01 65 36	O-ring
7	KK 35 37 93	Lock ring
8	KK 35 28 21	Rod cap
9	KK 01 65 35	Seal for piston rod
10	KK 01 17 45	Scraper
11	KK 35 38 22	Stop cpl.
12	KK 35 37 28	Clevis
13	KK 03 20 16	Hex screw M10 x 45 mm
Not ill.	KK 01 36 06	Packings cpl.
	KK 35 37 10	Hydraulic cylinder D75 x 130 mm w/90° turned connectors cpl. (From 01.09.99)

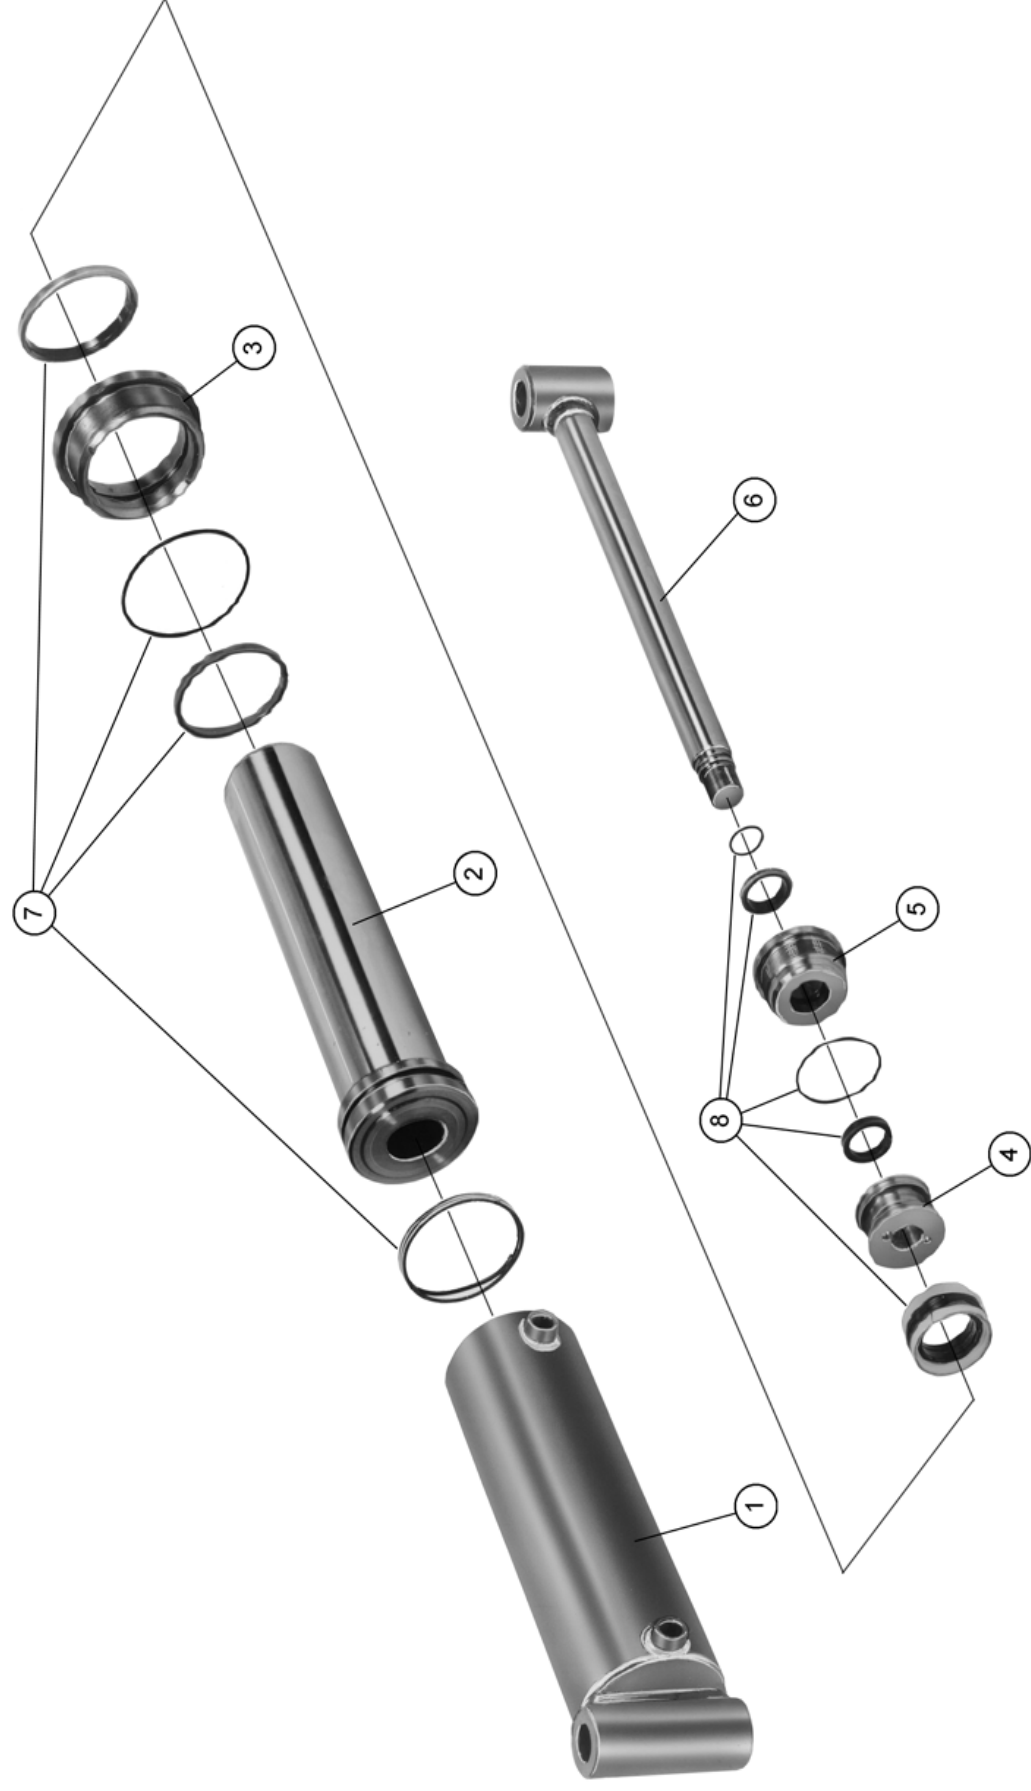

1027 Telescopic cylinder D95 x 445 mm (Before 01.08.00)




1	KK 35 35 62	Main cylinder tube
2	KK 35 35 63	Outer piston
3	KK 35 35 66	Outer bushing
4	KK 35 35 73	Inner piston
5	KK 35 35 65	Inner bushing
6	KK 35 35 64	Inner rod
7	KK 01 26 44	Packings cpl. for outer cylinder
8	KK 01 26 43	Packings cpl. for inner cylinder
Not ill.	KK 35 35 34	Telescopic cylinder D95 x 445 mm cpl.
	KK 01 26 42	Packings cpl. (012644 + 01 26 43)

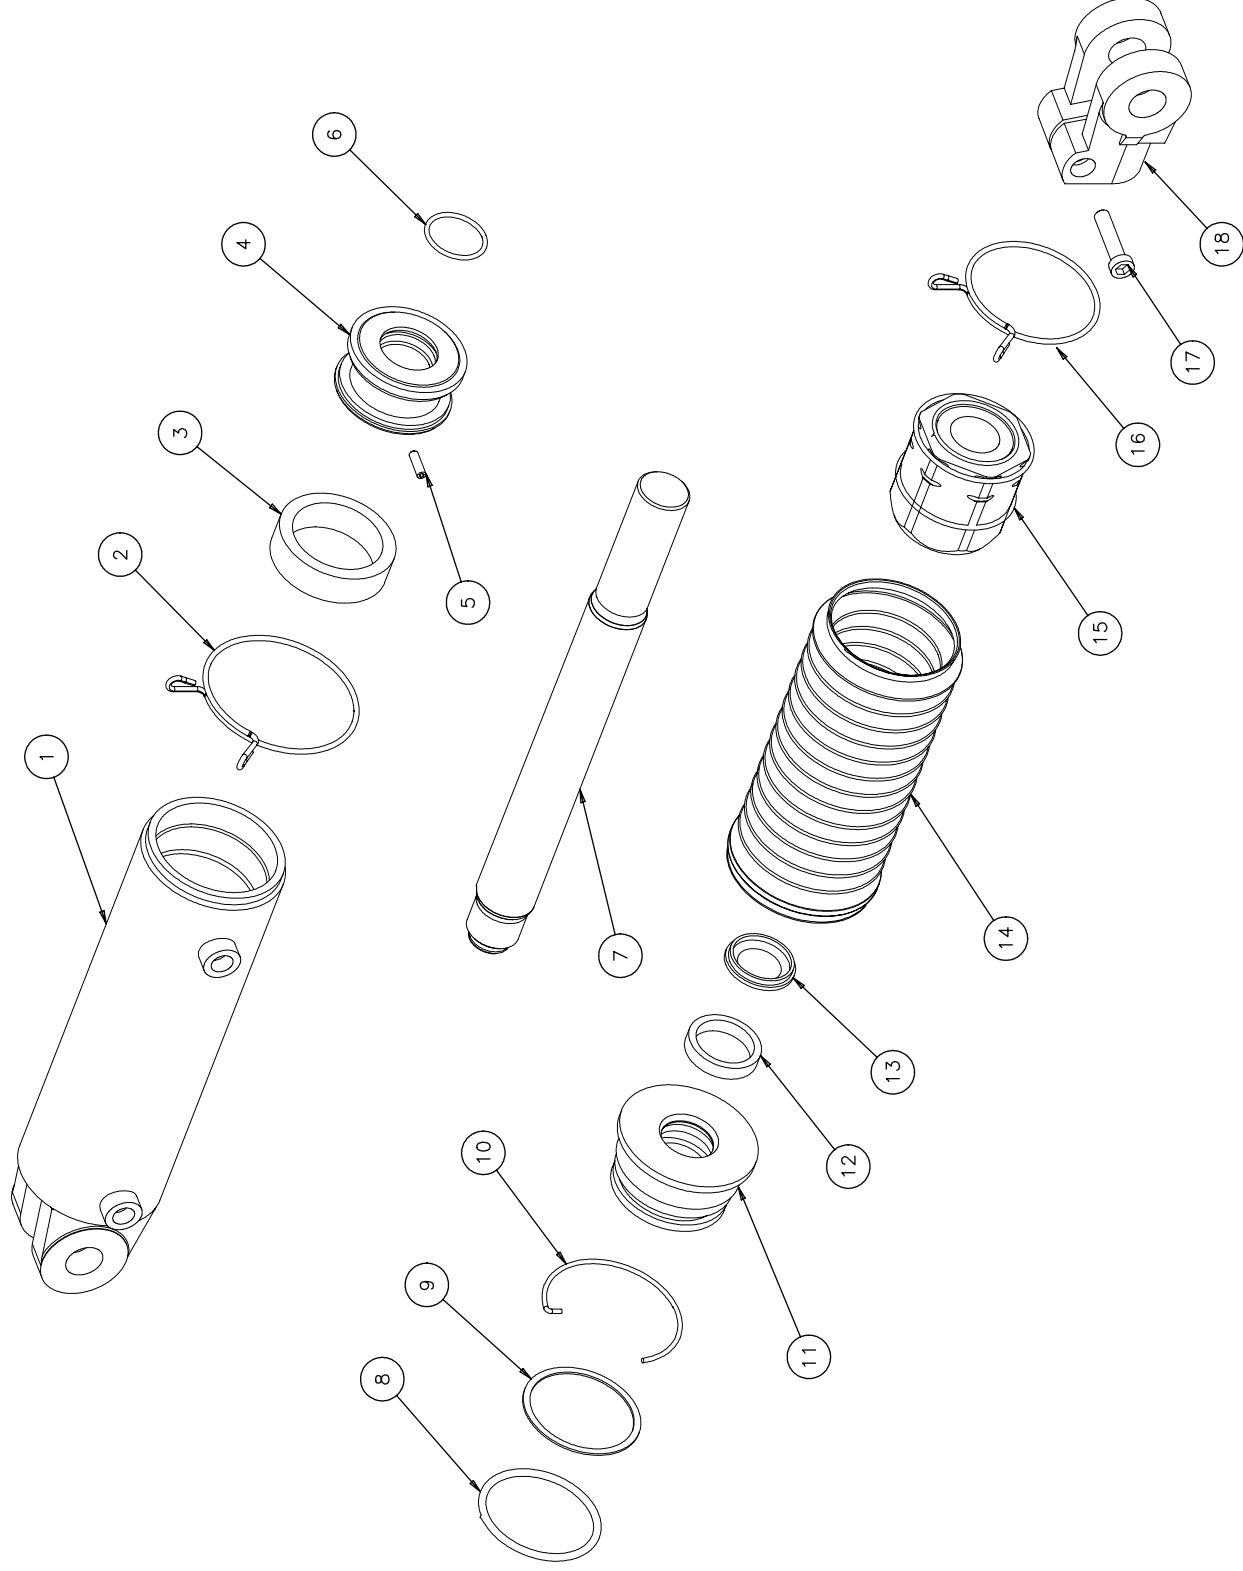

1062 Hydraulic cylinder D80 x 200 mm (From 01.03.99)




1	KK 35 37 74	Cylinder tube
2	KK 01 35 27	Thread clamp D95
3	KK 01 65 09	Piston packing set
4	KK 35 37 55	Piston
5	KK 03 20 06	Screw M6 x 20 mm
6	KK 01 65 10	O-ring D40
7	KK 35 37 75	Piston rod
8	KK 01 65 11	O-ring D75
9	KK 01 65 12	Support ring
10	KK 35 37 94	Lock ring
11	KK 35 37 54	End cap
12	KK 01 65 13	Piston rod packing
13	KK 01 65 14	Scraper
14	KK 01 35 25	Bellow
15	KK 35 37 76	Stopping nut
16	KK 01 35 26	Clamp D80
17	KK 03 20 16	Screw M10 x 45 mm
18	KK 35 37 51	Clevis
Not ill.	KK 01 36 03	Packings set cpl.
	KK 35 38 04	Hydraulic cylinder D80 x 200 mm cpl.

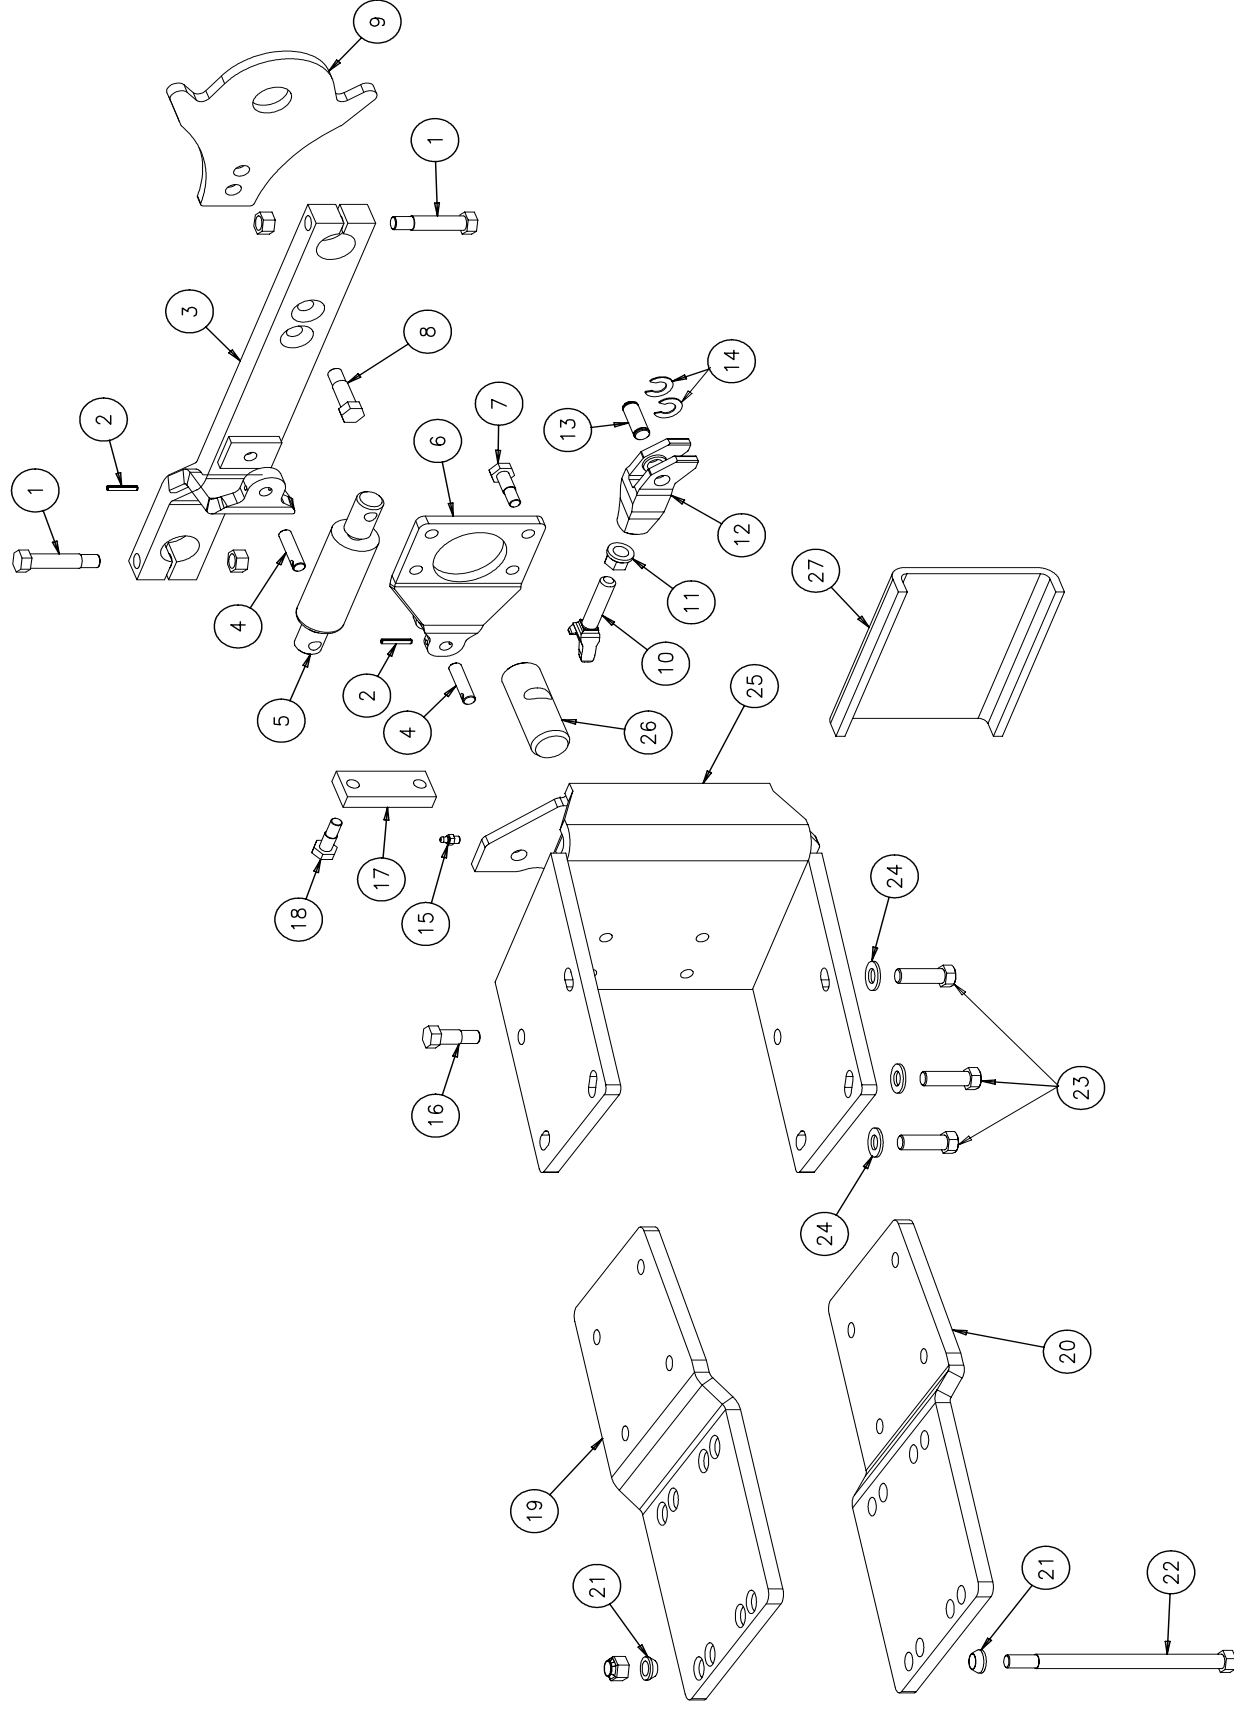

1	KK 03 28 95	Hex screw M20 x 95 mm w/nut
2	KK 01 10 42	Roll pin D6 x 40 mm
3	KK 07 96 07	Arm for wheel
4	KK 07 96 71	Axle for shock absorber
5	KK 35 21 45	Shock absorber (for PX/RX)
	KK 35 35 77	Shock absorber (for PM/RM) (Before 01.01.01)
	KK 35 39 20	Shock absorber (for PM/RM) (From 01.01.01)
6	KK 07 96 42	Fix for shock absorber
7	KK 03 27 55	Hex screw M16 x 55 mm w/nut
8	KK 03 10 60	Countersunk screw M20 x 70 mm w/nut
9	KK 07 96 30	Plate
10	KK 06 40 36	Stop screw M20 x 110 mm
11	KK 01 60 12	Flange nut M20
12	KK 07 97 00	Clevis
13	KK 07 96 70	Axle
14	KK 01 12 73	Circlip
15	KK 02 99 20	Grease nipple
16	KK 03 28 55	Hex screw M20 x 55 mm w/nut
17	KK 07 96 94	Plate
18	KK 03 27 65	Hex screw M16 x 65 mm w/nut
19	KK 07 96 72	Plate, upper for wheel (for PX/RX)
20	KK 07 96 73	Plate, lower for wheel (for PX/RX)
21	KK 30 12 23	Cone (for PX/RX)
22	KK 03 52 29	Hex screw M20 x 290 mm w/lock nut (for PX/RX)
23	KK 03 28 60	Hex screw M20 x 60 mm w/nut
24	KK 01 29 60	Washer
25	KK 07 97 03	Fixing bracket for wheel (for PX/RX)
	KK 08 11 15	Fixing bracket for wheel (for PX/RM)
26	KK 07 96 36	Axle for wheel
27	KK 07 97 30	Plate (for PX/RX)


527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"
(From 01.03.97)

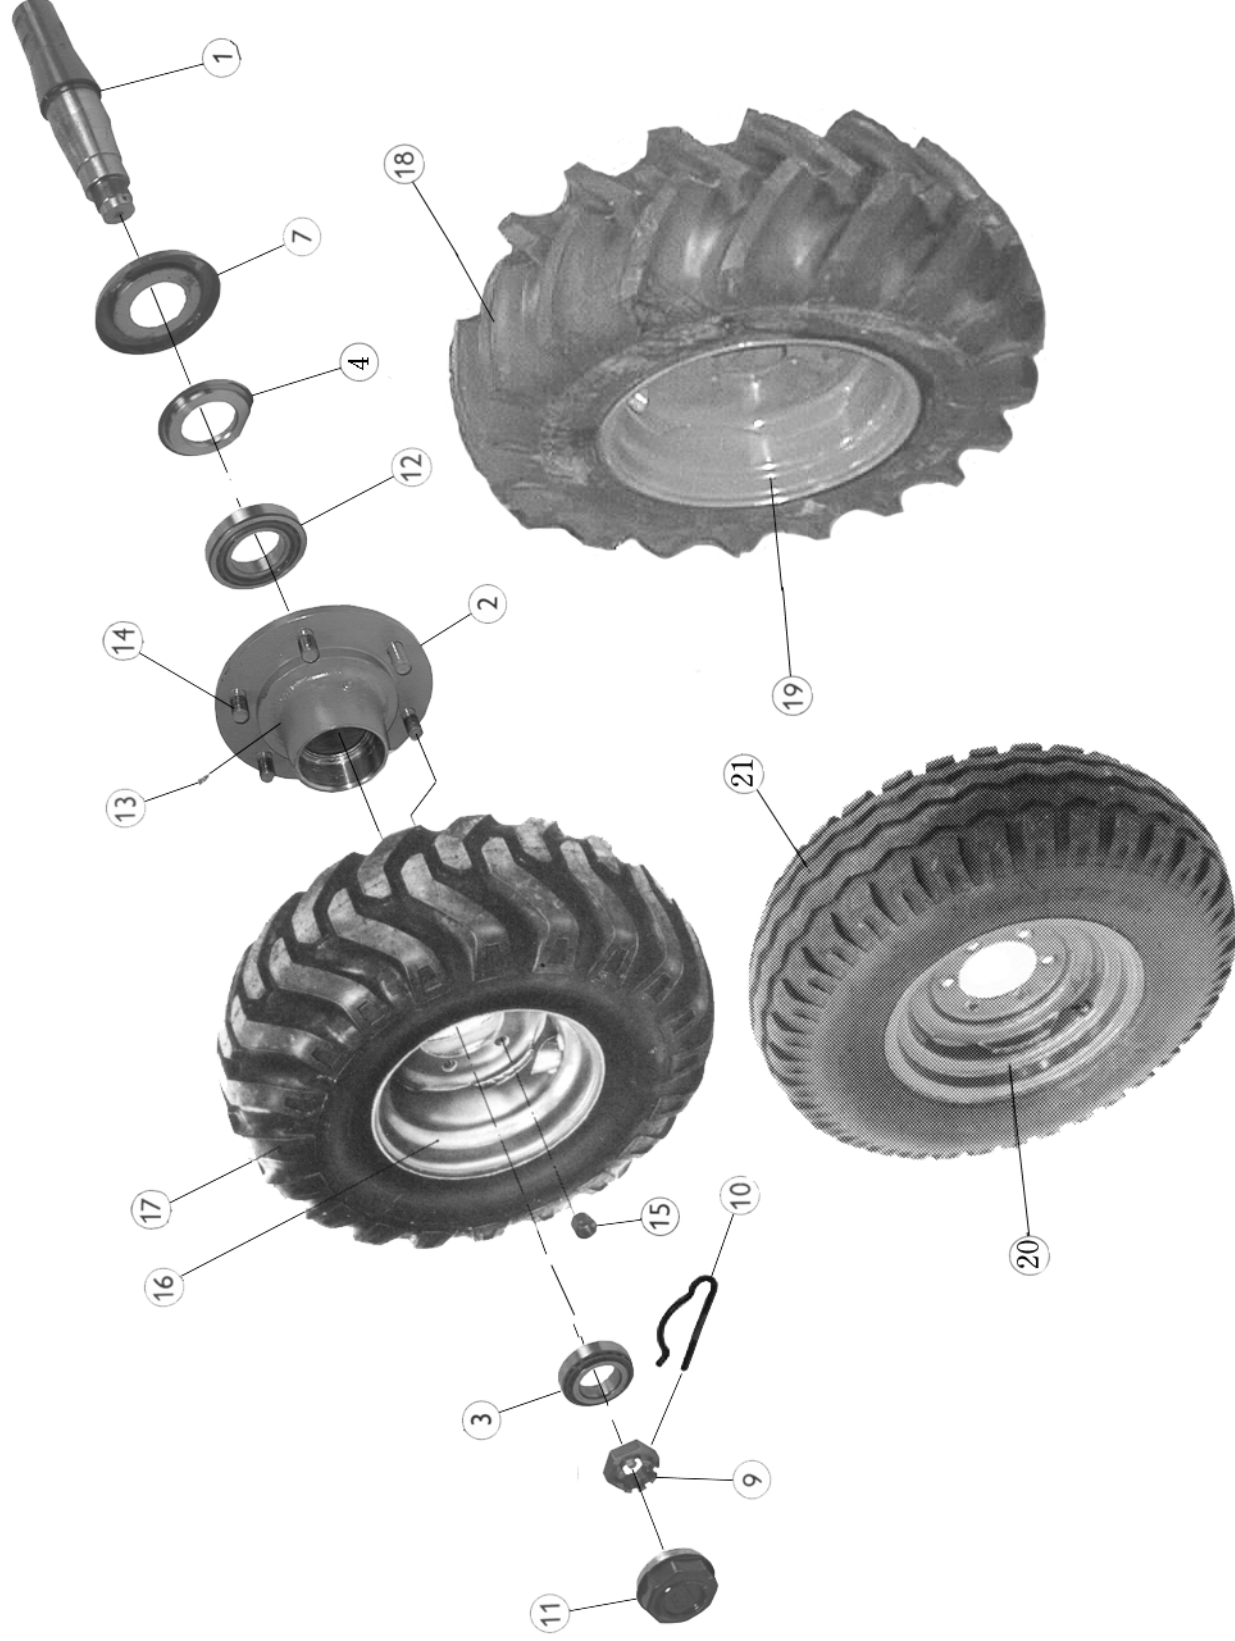

527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"
(From 01.03.97)




1	KK 01 14 62	Axle D75 x 287
	KK 01 14 84	Axle D50 (for DA plough, middle section only)
2	KK 01 14 61	Hub
	KK 01 14 60	Hub w/axle cpl.
3	KK 01 62 01	Bearing 32210
4	KK 01 14 68	Packing w/plate
7	KK 01 14 66	Plate for seal
9	KK 01 14 65	Crown nut
10	KK 01 14 64	Pin
11	KK 01 14 63	Cap for hub
12	KK 01 62 03	Bearing 30213
13	KK 02 99 20	Grease nipple M8 x 1
14	KK 01 14 79	Wheel bolt M18 x 1.5
15	KK 01 14 69	Nut for wheel M18 x 1.5
16	KK 01 13 44	Rim for tyre 400 x 15.5"
	KK 01 13 70	Rim for tyre 400 x 22.5"
	KK 01 14 53	Rim for tyre 500 x 22.5"
	KK 01 14 78	Rim for tyre 500 x 26.5"
17	KK 01 13 42	Tyre 400 x 15.5", 8 ply (also for DA plough, middle section)
	KK 01 14 16	Tyre 400 x 15.5", 14 ply (also for DA plough, middle section)
	KK 01 13 68	Tyre 400 x 22.5", 8 ply
	KK 01 14 14	Tyre 400 x 22.5", 14 ply
	KK 01 14 51	Tyre 500 x 22.5", 8 ply
	KK 01 14 76	Tyre 500 x 26.5", 8 ply
	KK 01 13 43	Inner tube to 400 x 15.5" tyre
	KK 01 13 69	Inner tube to 400 x 22.5" tyre
	KK 01 14 52	Inner tube to 500 x 22.5" tyre
	KK 01 14 77	Inner tube to 500 x 26.5" tyre
18	KK 01 14 72	Tyre 14.9 x 24", 8 ply
	KK 01 14 73	Inner tube to 14.9 x 24" tyre
19	KK 01 14 74	Rim for tyre 14.9 x 24"
20	KK 01 14 57	Rim for tyre 12.5/80 - 12/18
21	KK 01 14 59	Tyre 12.5/80 - 18/12
	KK 01 14 58	Inner tube for tyre 12.5/80 - 12/18

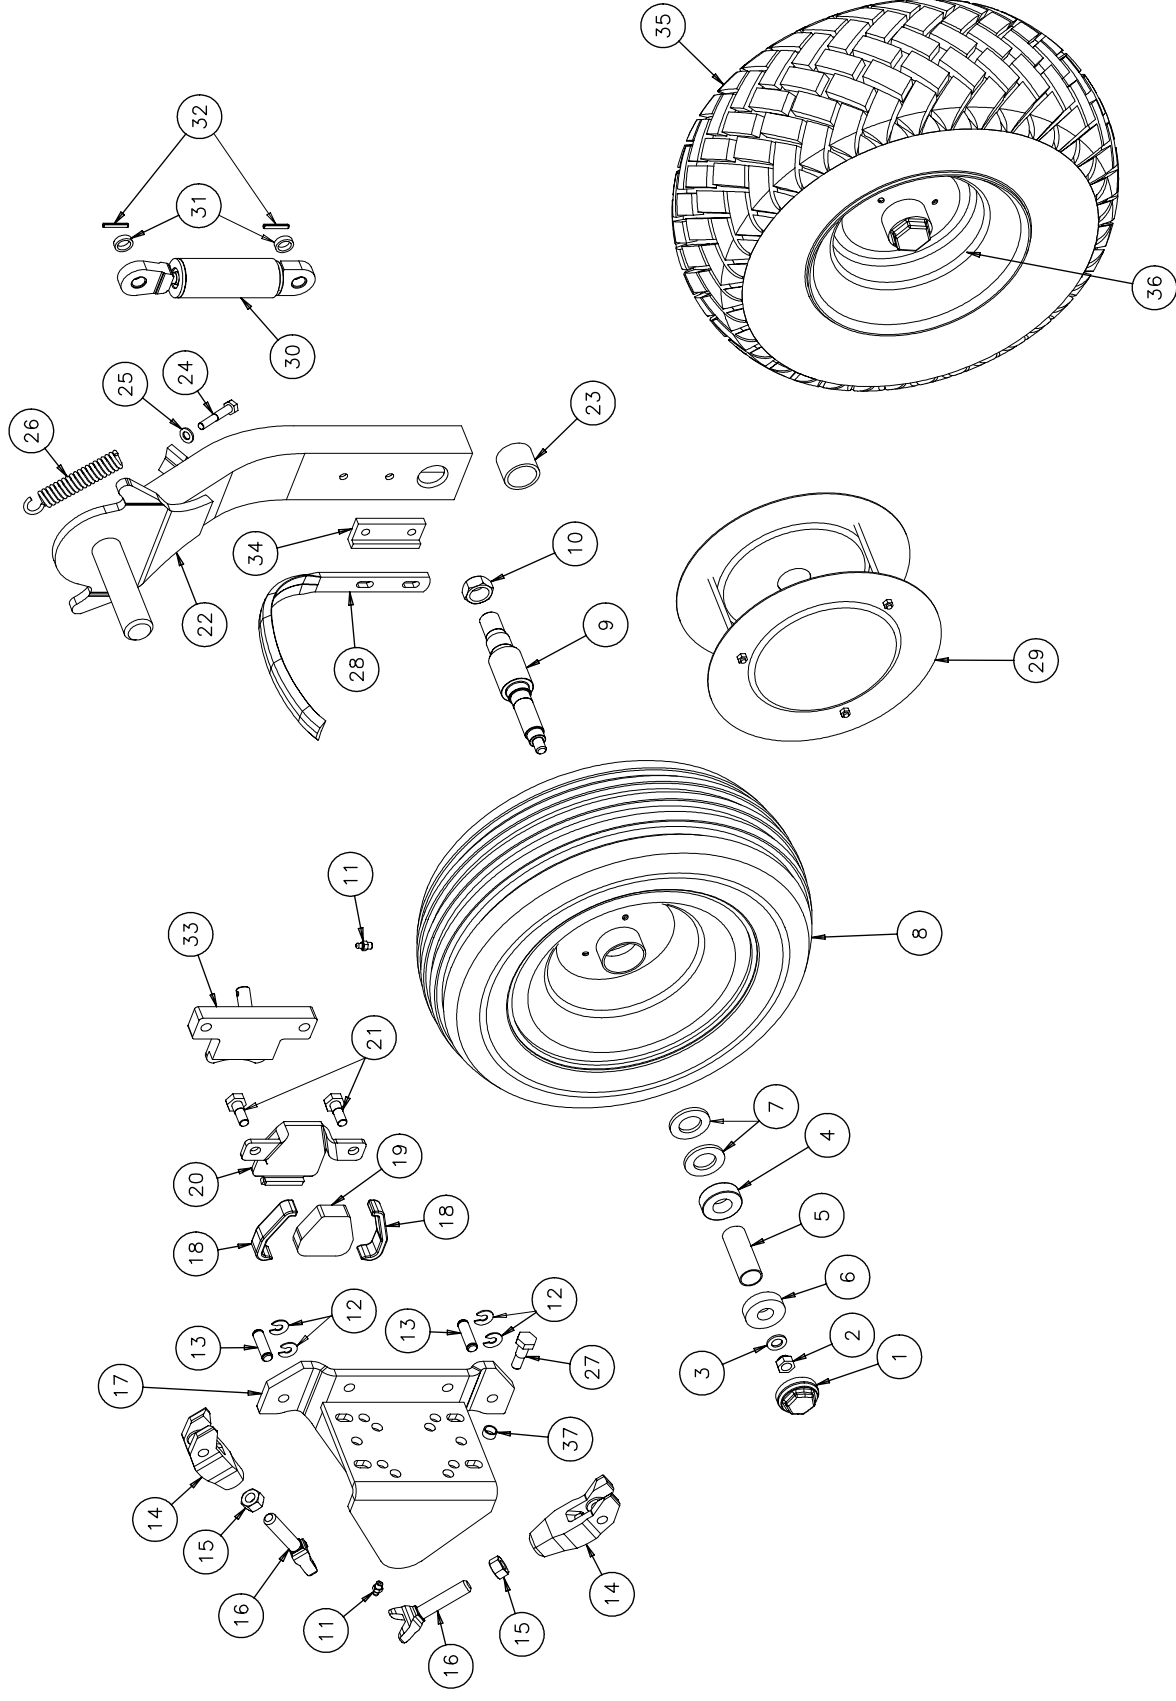


1	KK 01 11 57	End cap		KK 07 46 24	Scraper for wheel 26 x 12-12
2	KK 01 60 10	Nut M16		KK 07 46 17	Scraper for wheel 26 x 12-12 cpl.
3	KK 01 29 27	Washer	29	KK 01 14 01	Cover kit 200 x 14,5 cpl.
4	KK 01 12 00	Bearing		KK 01 14 02	Cover kit 26 x 12-12 cpl.
5	KK 01 00 31	Spacing tube for wheel 200 x 14.5	30	KK 35 35 40	Shock absorber
6	KK 01 00 67	Spacing tube for wheel 26 x 12-12	31	KK 07 48 06	Bushing for shock absorber
7	KK 01 12 31	Bearing	32	KK 01 10 42	Roll pin for shock absorber
8	KK 01 08 06	Packing	33	KK 07 48 10	Bracket for wheelarm (for hydraulic shock absorber)
	KK 01 13 03	Tyre 200 x 14.5	34	KK 07 40 48	Fixing for scraper
	KK 01 13 05	Inner tube for 200 x 14.5	35	KK 01 13 46	Tyre for wheel 26 x 12-12
	KK 01 13 31	Rim w/bearinga for 200 x 14.5		KK 01 13 49	Inner tube for wheel 26 x 12-12
9	KK 06 42 22	Axle for wheel LP-200 x 14,5	36	KK 01 13 47	Rim w/bearings for 26 x 12-12
	KK 06 42 23	Axle for wheel LP-26 x 12-12	37	KK 01 16 36	Bushing (From 01.06.99)
10	KK 01 60 37	Cone nut M30			
11	KK 02 99 20	Grease nipple		KK 03 26 95	Hex screw M12 x 95 mm w/nut (for scraper fixing)
12	KK 01 12 72	Circlip		KK 03 26 85	Hex screw M12 x 85 mm w/nut (for scraper fixing)
13	KK 01 04 61	Axle		KK 07 47 99	Screw and bushing set cpl. (From 01.06.99)
14	KK 06 40 30	Clevis		KK 07 48 17	Rubber wheel 200 x 14 .5, H = 700 cpl.
15	KK 01 58 32	Nut M20		KK 07 48 18	Rubber wheel 200 x 14 .5, H = 800 cpl.
16	KK 06 40 36	Stop screw		KK 07 48 19	Rubber wheel 26 x 12 - 12, H = 700 cpl.
	KK 06 40 39	Clevis cpl.		KK 07 48 20	Rubber wheel 26 x 12 - 12, H = 800 cpl.
17	KK 06 40 75	Support			
18	KK 06 40 86	Protection for damper block			
19	KK 06 40 87	Damper block			
20	KK 06 40 78	Holder for damper block			
21	KK 03 27 40	Hex screw M16 x 40 mm w/nut			
	KK 03 27 60	Hex screw M16 x 60 mm w/nut (for hydraulic shock absorber)			
22	KK 06 40 81	Wheel arm H = 700 mm			
	KK 07 48 01	Wheel arm for hydr. shock absorber H = 700 mm			
	KK 06 40 74	Wheel arm H = 800 mm			
	KK 07 48 02	Wheel arm for hydr. shock absorber H = 800 mm			
23	KK 06 40 73	Tube			
24	KK 03 36 70	Hex screw M12 x 70 mm			
25	KK 01 29 19	Washer			
26	KK 06 40 89	Spring			
27	KK 03 27 50	Hex screw M16 x 50 mm w/nut			
28	KK 07 40 47	Scraper blade for wheel 200 x 14.5			
	KK 07 40 49	Scraper for wheel 200 x 14.5 cpl.			

Not ill.

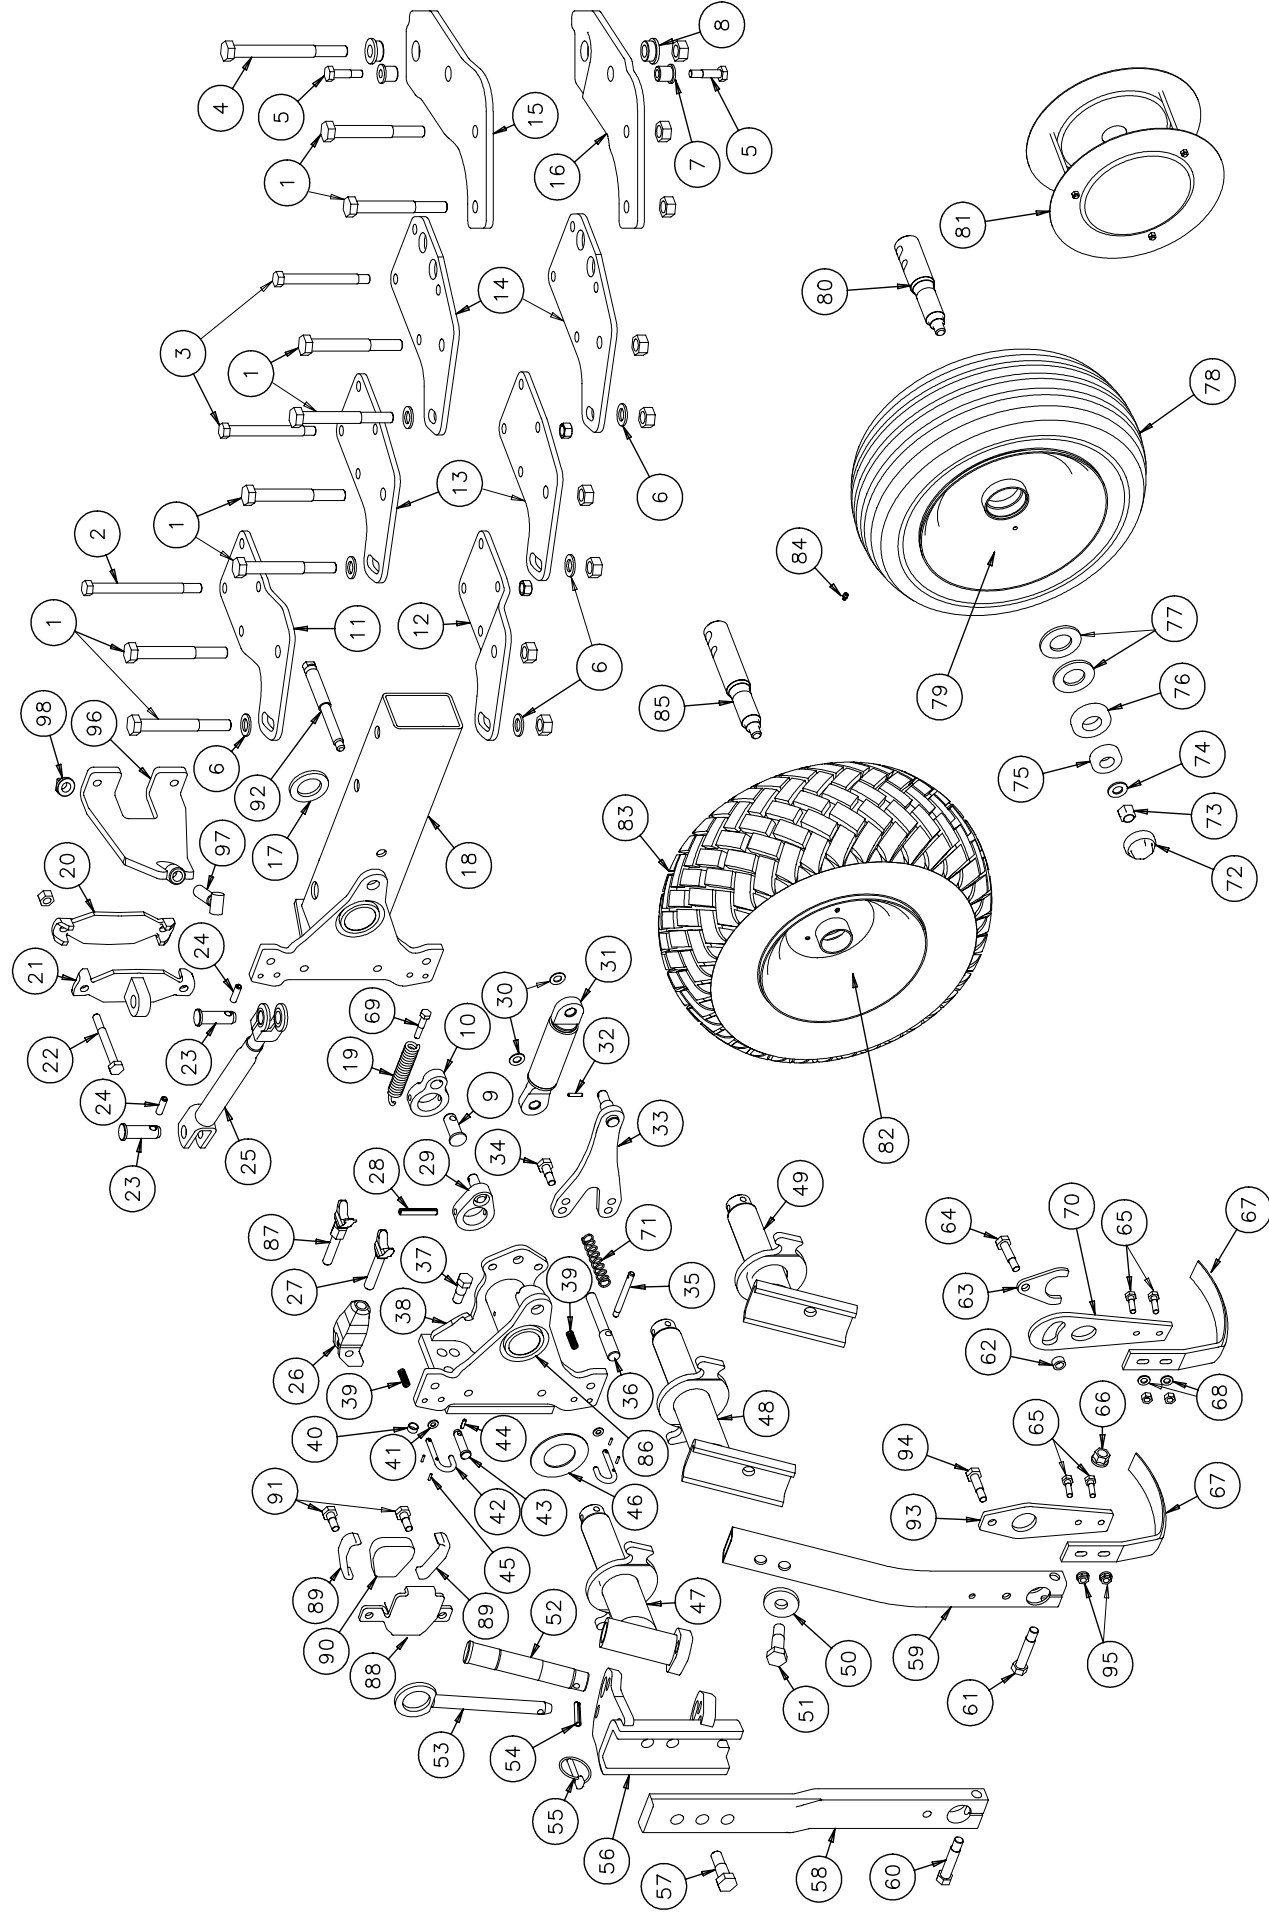


1	KK 03 29 20	Hex screw M24 x 200 mm w/nut	34	KK 03 27 45	Hex screw M16 x 45 mm w/nut	64	KK 03 27 70	Hex screw M16 x 70 mm w/nut (for depth/transport wheel) (Before 01.04.01)
2	KK 03 28 36	Hex screw M20 x 240 mm w/nut	35	KK 07 48 74	Handle			
3	KK 03 28 22	Hex screw M20 x 190 mm w/nut	36	KK 07 48 73	Axle			
4	KK 03 29 25	Hex screw M24 x 250 mm w/nut	37	KK 03 28 50	Hex screw M20 x 50 mm w/nut		KK 03 27 75	Hex screw M16 x 75 mm w/nut (for depth wheel) (Before 01.04.01)
5	KK 03 27 65	Hex screw M16 x 65 mm w/nut	38	KK 07 48 50	Wheel bracket, rear mounted depth wheel	65	KK 03 26 40	Hex screw M12 x 40 mm w/nut
6	KK 01 30 05	Washer			Wheel bracket, rear mounted depth wheel w/bearing	66	KK 01 60 12	Flange nut M20
7	KK 01 16 14	Bushing D30 x D16 x 28 mm		KK 07 48 39		67	KK 07 48 38	Scraper (for wheel 200 x 14.5)
8	KK 01 16 15	Bushing D40 x D24 x 15.5 mm					KK 07 48 43	Scraper (for wheel 26 x 12-12)
9	KK 08 40 40	Rotation bolt (From 01.05.00)	39	KK 01 37 00	Spring	68	KK 01 29 19	Washer (Before 01.04.01)
10	KK 08 40 43	Crank (From 01.05.00)	40	KK 01 16 36	Bushing D20 x D16 x 10 mm	69	KK 03 26 65	Hex screw M12 x 60 mm (From 01.05.00)
11	KK 07 48 84	Plate, over (for ED and LD plough)	41	KK 01 29 16	Washer			Bracket for scraper (Before 01.04.01)
12	KK 07 48 85	Plate, under (for ED and LD plough)	42	KK 07 48 76	Lock	70	KK 07 48 36	Spring
13	KK 07 48 88	Plate (for VD plough)	43	KK 01 02 55	Bolt D16 x 51 mm	71	KK 35 60 42	End cap
14	KK 07 48 91	Plate (for EM/LM plough)	44	KK 01 10 61	Roll pin D6 x 22 mm	72	KK 01 11 57	Lock nut M20
15	KK 07 48 81	Plate, over (for ES and LS plough)	45	KK 01 10 14	Roll pin D4 x 16 mm	73	KK 01 60 00	Washer
16	KK 07 48 82	Plate, under (for ES and LS plough)	46	KK 01 30 04	Washer	74	KK 01 29 34	Bearing
17	KK 06 82 51	Washer	47	KK 07 48 56	Axle w/bearing cpl. (for depth/transport wheel)	75	KK 01 12 00	Bearing
18	KK 07 48 80	Wheel bracket, frame mounted wheel	48	KK 07 48 62	Axle w/bracket shaft cpl. (for depth wheel)	76	KK 01 05 17	Packing
19	KK 06 40 89	Spring (From 01.05.00)	49	KK 07 48 41	Axle w/short bracket shaft cpl. (for depth wheel)	77	KK 01 11 68	Tyre 200 x 14.5
20	KK 07 48 90	Clamp (for 150 mm tube)				78	KK 01 13 03	Inner tube 200 x 14.5
21	KK 07 48 87	Clamp (for 200 mm tube)	50	KK 07 90 63	Washer	79	KK 01 13 05	Rim 200 x 14.5
	KK 07 48 89	Clamp w/fixing lug (for 150 mm tube)	51	KK 03 29 80	Hex screw M24 x 80 mm w/nut	80	KK 07 40 80	Axle 200 x 14.5
22	KK 07 48 86	Clamp w/fixing lug (for 200 mm tube)	52	KK 07 48 75	Axle	81	KK 01 14 01	Cover kit cpl.
	KK 03 27 16	Hex screw M16 x 140 mm w/nut (for VD, ED and LD plough)	53	KK 07 48 93	Axle	82	KK 01 13 47	Rim 26 x 12-12
	KK 03 27 19	Hex screw M16 x 190 mm w/nut (for EM/LM plough)	54	KK 01 10 48	Roll pin D12 x 60 mm	83	KK 01 13 46	Tyre 26 x 12-12
23	KK 01 03 15	Bolt D25.3 x 60 mm	55	KK 01 07 00	Pin D12		KK 01 13 49	Inner tube 26 x 12-12
24	KK 01 10 20	Roll pin D12 x 40 mm	56	KK 07 48 64	Switch bracket	84	KK 02 99 20	Grease nipple
25	KK 07 08 05	Adjustable stay	57	KK 03 29 70	Hex screw M24 x 70 mm w/nut	85	KK 07 40 93	Axle 26 x 12-12
26	KK 06 40 30	Clevis	58	KK 07 48 65	Wheel arm (for depth/transport wheel)	86	KK 01 16 33	Bearing
27	KK 06 40 24	Stop screw	59	KK 07 48 66	Wheel arm (for depth wheel)	87	KK 06 40 97	Crank screw cpl.
28	KK 01 10 52	Roll pin D12 x 80 mm	60	KK 03 28 07	Hex screw M20 x 100 mm w/nut	88	KK 06 40 79	Holder for damper block (From 01.05.00)
29	KK 07 48 67	Crank for shock absorber	61	KK 03 28 90	Hex screw M20 x 90 mm w/nut	89	KK 06 40 86	Protection for damper block (From 01.05.00)
30	KK 01 29 31	Washer	62	KK 10 68 63	Bushing (Before 01.04.01)	90	KK 06 40 87	Damper block (From 01.05.00)
31	KK 35 36 30	Shock absorber	63	KK 07 48 35	Clamp bracket (Before 01.04.01)	91	KK 03 27 40	Hex screw M16 x 40 mm w/nut (From 01.05.00)
32	KK 01 10 35	Roll pin D6 x 30 mm						
33	KK 07 48 70	Bracket arm for shock absorber						

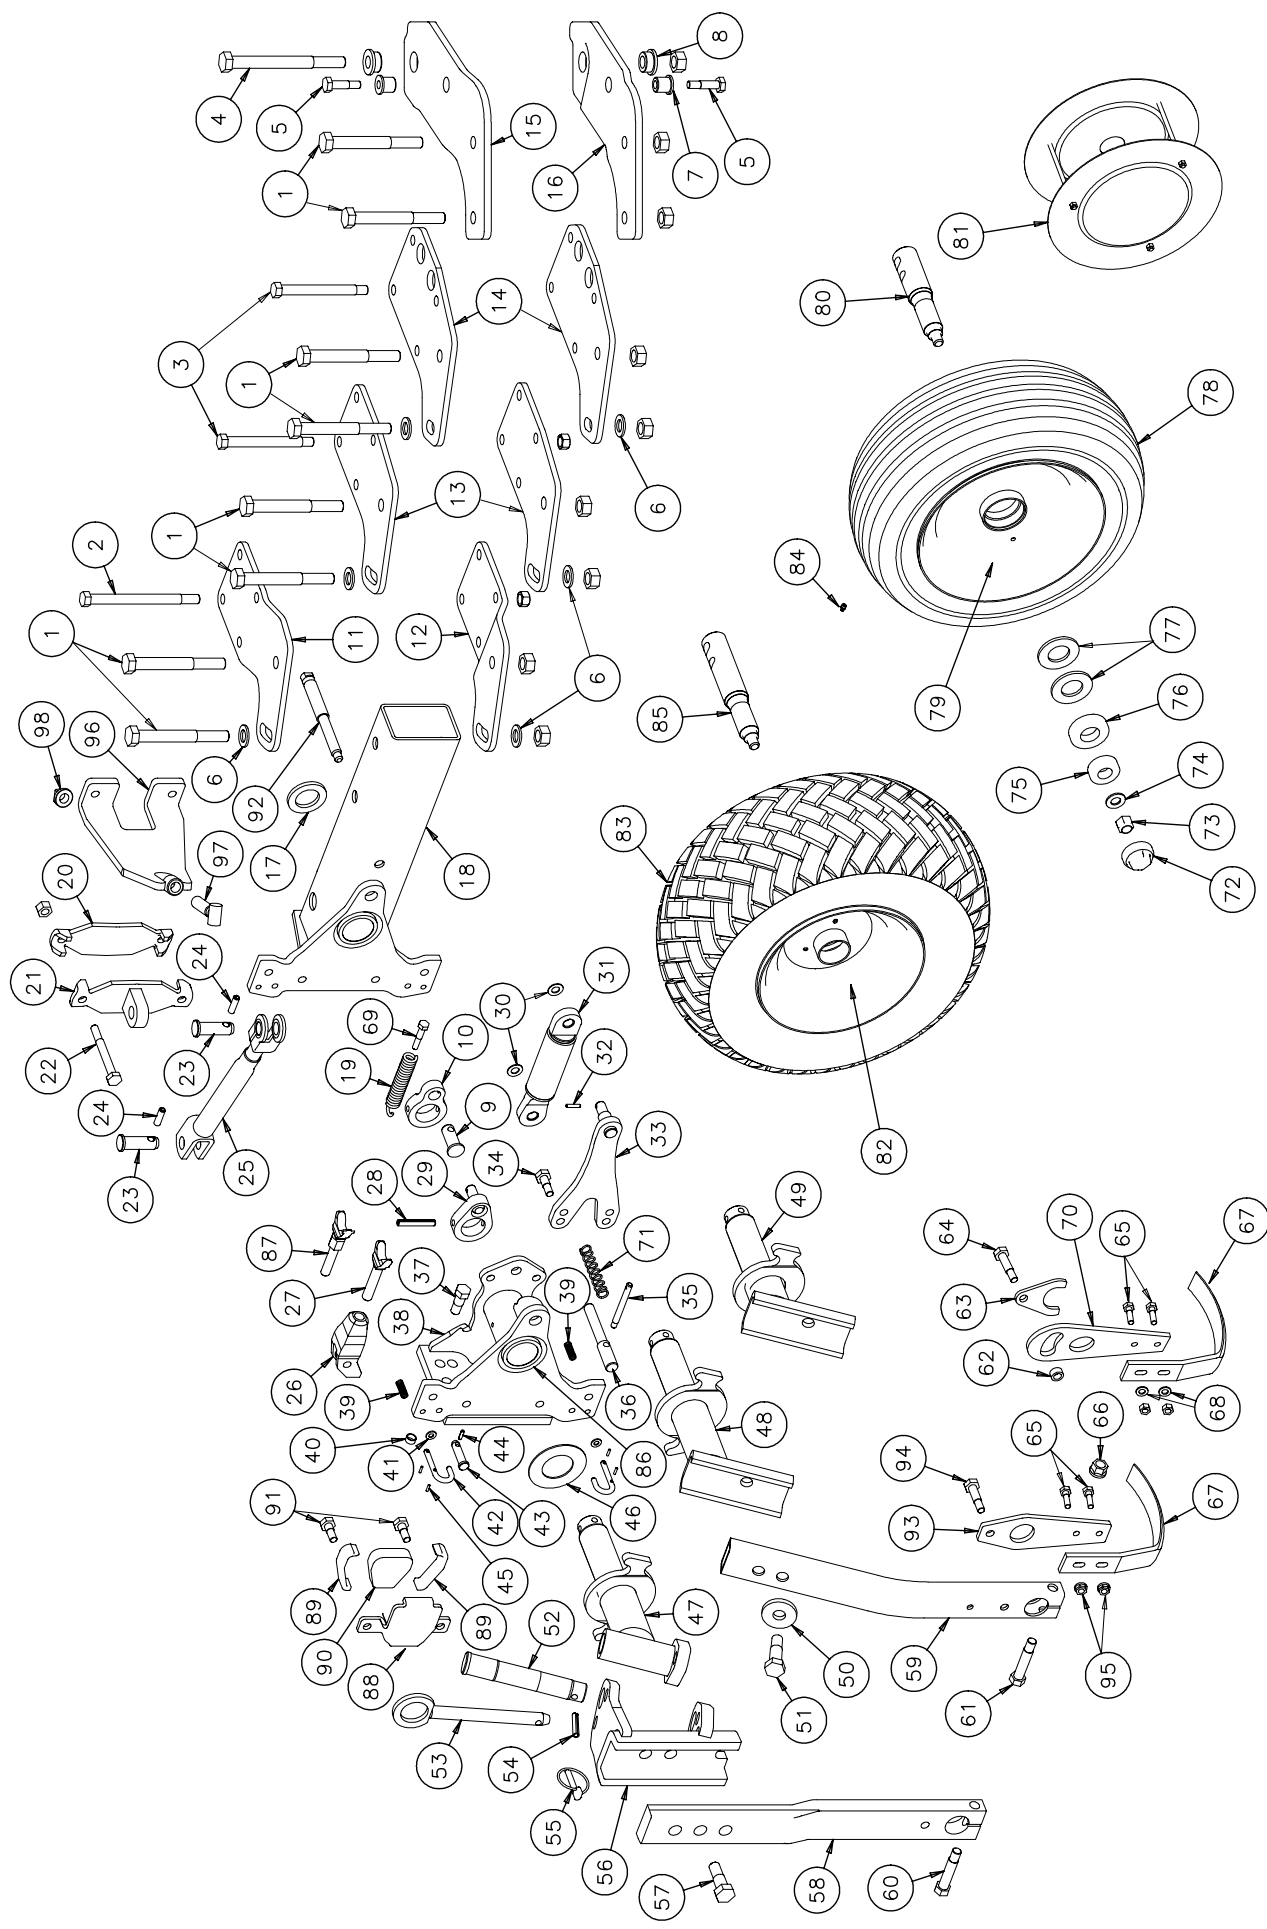

1088 Depth/transport wheel 99

92	KK 08 40 42	Pin (From 01.05.00)
93	KK 07 48 44	Bracket for scraper (From 01.04.01)
94	KK 03 27 65	Hex screw M16 x 65 mm w/nut (From 01.04.01)
95	KK 01 60 38	Flange nut M12 (From 01.04.01)
96	KK 07 48 46	Transportation support (for ES/LS ploughs only) (From 01.04.01)
97	KK 08 40 84	Stop screw (for ES/LS ploughs only) (From 01.04.01)
98	KK 06 18 99	Contra nut M24 (for ES/LS ploughs only) (From 01.04.01)
Not ill.	KK 06 40 47	Stop cpl.
	KK 08 40 00	Depth wheel 200 x 14.5 rear mounted without shock absorber cpl.
	KK 08 40 01	Depth wheel 200 x 14.5 rear mounted w/shock absorber cpl.
	KK 08 40 02	Depth wheel 26 x 12-12 rear mounted w/shock absorber cpl.
	KK 08 40 03	Depth wheel 200 x 14.5 frame mounted without shock absorber cpl.
	KK 08 40 10	Depth/transport wheel 200 x 14.5 rear mounted without shock absorber cpl.
	KK 08 40 11	Depth/transport wheel 200 x 14.5 rear mounted w/shock absorber cpl.
	KK 08 40 12	Depth/transport wheel 26 x 12-12 rear mounted w/shock absorber cpl.
	KK 08 40 13	Depth/transport wheel 200 x 14.5 frame mounted without shock absorber cpl.

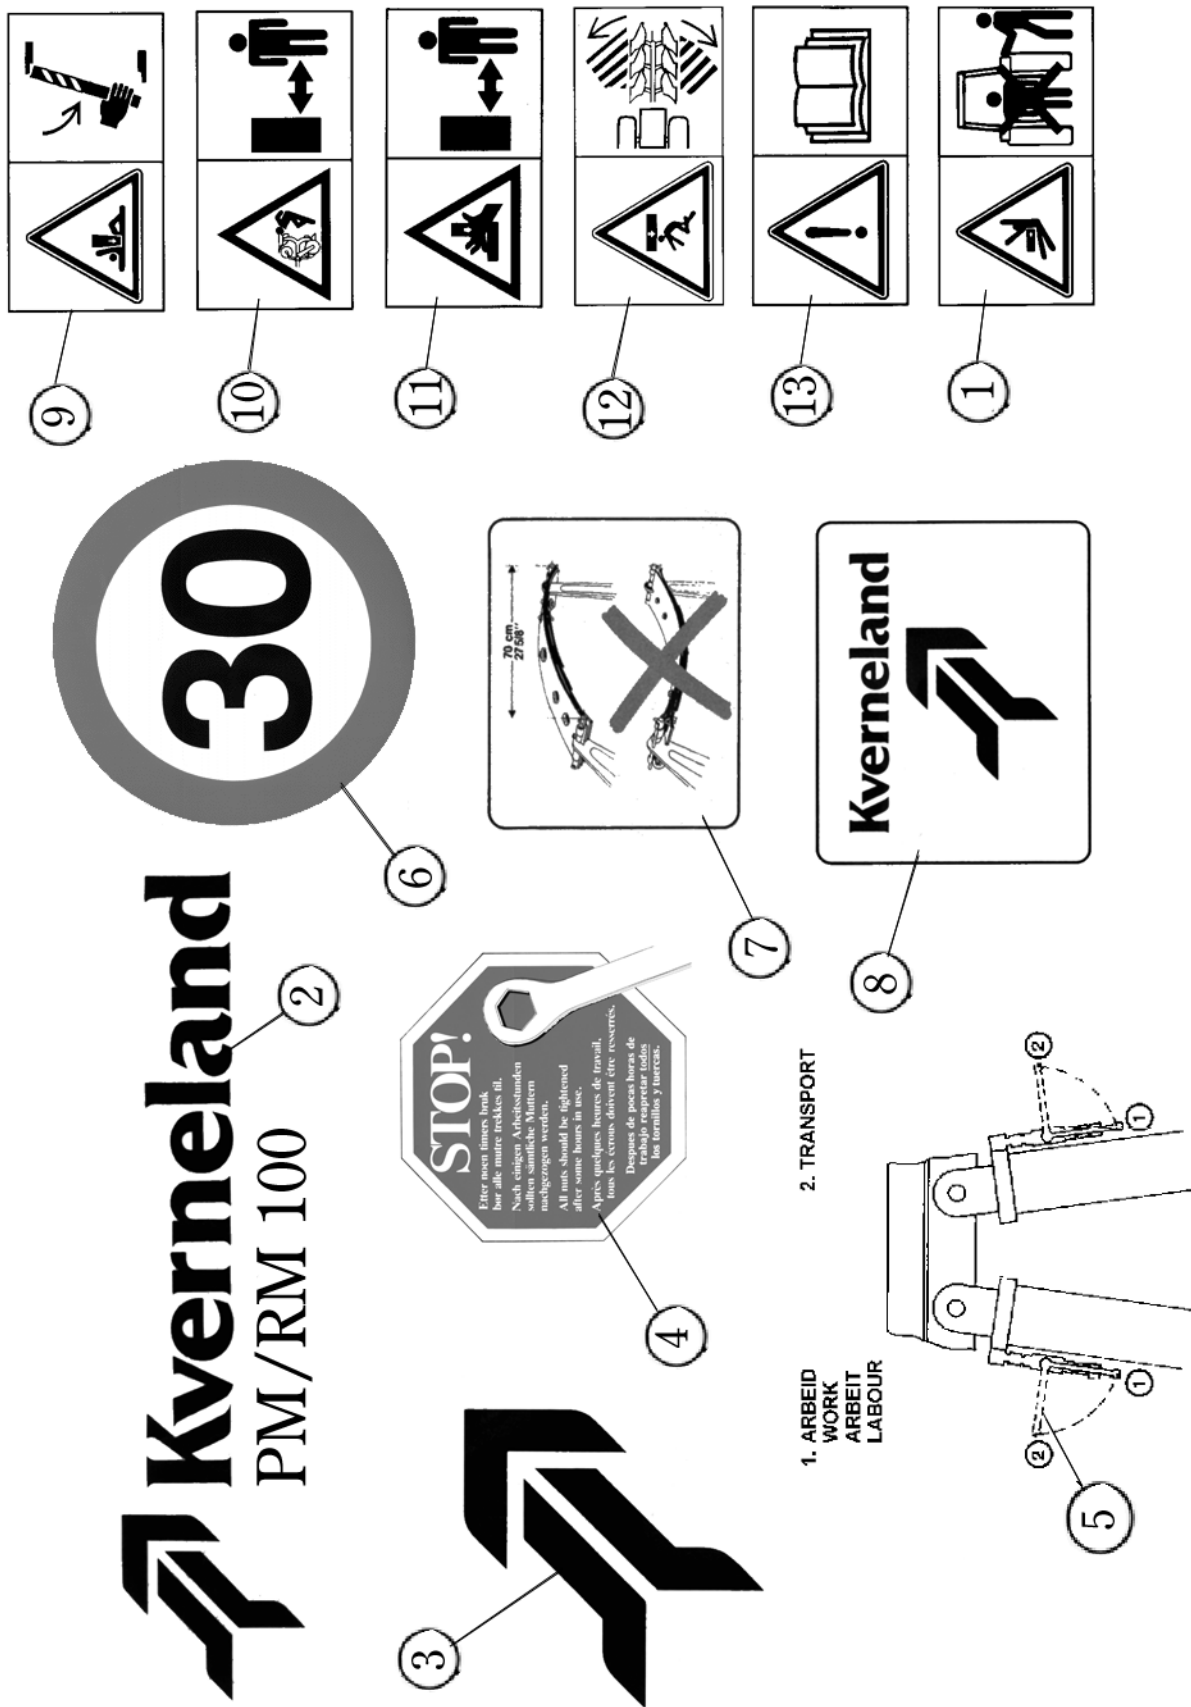



1	KK 70 98 41	Safty sign, danger, tractor/implement
2	KK 70 99 55	Kverneland PM-100
	KK 70 99 59	Kverneland RM-100
3	KK 70 97 37	Arrow
4	KK 70 97 79	Info., nuts
5	KK 70 93 04	Info., lock valves for transport
6	KK 70 97 81	Info., speed limit 30km/h
7	KK 70 92 34	Info., leaf spring
8	KK 70 98 31	Kverneland w/arrow
9	KK 70 98 43	Safty sign, parking support
10	KK 70 98 95	Safty sign, sharp edges
11	KK 70 98 23	Safty sign, crush danger
12	KK 70 98 42	Safty sign, reversible plough
13	KK 70 98 44	Safty sign, read instruction manual
Not ill.		
	KK 70 98 47	Patent label
	KK 70 99 80	Triangular reflexive foil
	KK 70 99 81	Rectangular reflexive foil

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 00 08 37		KK 01 07 00 53		KK 01 12 66 29		KK 01 14 62 77		KK 01 16 91 35		KK 01 19 12 63		KK 01 21 24 53	
KK 01 00 31 79		KK 01 07 00 81		KK 01 12 66 31		KK 01 14 63 77		KK 01 16 91 41		KK 01 19 12 65		KK 01 21 58 53	
KK 01 00 67 79		KK 01 07 72 25		KK 01 12 72 79		KK 01 14 64 77		KK 01 17 19 57		KK 01 19 13 67		KK 01 21 85 35	
KK 01 01 55 11		KK 01 07 75 25		KK 01 12 73 75		KK 01 14 65 77		KK 01 17 24 57		KK 01 19 18 61		KK 01 22 61 45	
KK 01 01 55 13		KK 01 08 06 79		KK 01 12 77 45		KK 01 14 66 77		KK 01 17 25 57		KK 01 19 51 61		KK 01 22 61 47	
KK 01 01 55 17		KK 01 08 18 29		KK 01 12 92 25		KK 01 14 68 77		KK 01 17 27 57		KK 01 19 51 63		KK 01 22 61 49	
KK 01 01 55 7		KK 01 08 18 31		KK 01 13 03 79		KK 01 14 69 77		KK 01 17 36 59		KK 01 19 51 65		KK 01 22 61 53	
KK 01 01 56 11		KK 01 09 60 47		KK 01 13 03 81		KK 01 14 72 77		KK 01 17 37 59		KK 01 19 53 67		KK 01 23 07 45	
KK 01 01 56 13		KK 01 09 61 47		KK 01 13 05 79		KK 01 14 73 77		KK 01 17 38 59		KK 01 20 15 55		KK 01 23 19 53	
KK 01 01 56 17		KK 01 09 67 35		KK 01 13 05 81		KK 01 14 74 77		KK 01 17 43 59		KK 01 20 25 67		KK 01 23 23 53	
KK 01 01 56 7		KK 01 10 14 81		KK 01 13 31 79		KK 01 14 76 77		KK 01 17 44 59		KK 01 20 26 61		KK 01 23 24 45	
KK 01 02 55 81		KK 01 10 20 37		KK 01 13 42 77		KK 01 14 77 77		KK 01 17 45 59		KK 01 20 27 63		KK 01 23 24 47	
KK 01 03 15 81		KK 01 10 20 47		KK 01 13 43 77		KK 01 14 78 77		KK 01 17 46 59		KK 01 20 32 55		KK 01 23 24 49	
KK 01 03 19 49		KK 01 10 20 49		KK 01 13 44 77		KK 01 14 79 77		KK 01 17 46 59		KK 01 20 39 55		KK 01 23 24 51	
KK 01 03 19 53		KK 01 10 20 51		KK 01 13 46 79		KK 01 14 84 77		KK 01 17 50 27		KK 01 20 56 53		KK 01 23 24 53	
KK 01 03 23 41		KK 01 10 20 53		KK 01 13 46 81		KK 01 15 23 49		KK 01 17 50 29		KK 01 20 59 45		KK 01 23 39 45	
KK 01 03 23 47		KK 01 10 20 81		KK 01 13 47 79		KK 01 15 23 51		KK 01 17 50 31		KK 01 20 59 47		KK 01 23 74 53	
KK 01 03 28 41		KK 01 10 35 81		KK 01 13 47 81		KK 01 15 41 45		KK 01 17 83 55		KK 01 20 59 51		KK 01 25 08 53	
KK 01 03 28 47		KK 01 10 37 21		KK 01 13 49 79		KK 01 15 65 45		KK 01 18 02 67		KK 01 20 59 53		KK 01 25 09 53	
KK 01 03 28 47		KK 01 10 42 21		KK 01 13 49 81		KK 01 15 65 47		KK 01 18 06 55		KK 01 20 60 45		KK 01 25 22 45	
KK 01 03 28 53		KK 01 10 42 75		KK 01 13 68 77		KK 01 15 65 49		KK 01 18 06 63		KK 01 20 60 47		KK 01 25 22 47	
KK 01 03 29 37		KK 01 10 42 79		KK 01 13 69 77		KK 01 15 65 51		KK 01 18 06 65		KK 01 20 60 49		KK 01 25 22 49	
KK 01 03 29 51		KK 01 10 48 81		KK 01 13 70 77		KK 01 15 85 45		KK 01 18 24 61		KK 01 20 60 51		KK 01 25 22 51	
KK 01 03 35 37		KK 01 10 52 81		KK 01 13 79 81		KK 01 15 85 47		KK 01 18 61 67		KK 01 20 62 45		KK 01 25 26 53	
KK 01 03 35 49		KK 01 10 59 45		KK 01 14 01 79		KK 01 15 85 49		KK 01 18 65 67		KK 01 20 62 47		KK 01 25 31 53	
KK 01 03 35 51		KK 01 10 61 81		KK 01 14 01 81		KK 01 15 85 51		KK 01 18 66 27		KK 01 20 62 51		KK 01 25 48 45	
KK 01 04 61 79		KK 01 11 57 79		KK 01 14 02 79		KK 01 15 85 53		KK 01 18 66 29		KK 01 20 62 53		KK 01 25 48 53	
KK 01 05 17 81		KK 01 11 57 81		KK 01 14 14 77		KK 01 15 96 53		KK 01 18 66 31		KK 01 20 68 45		KK 01 25 51 45	
KK 01 05 32 27		KK 01 11 68 81		KK 01 14 16 77		KK 01 16 14 81		KK 01 18 76 61		KK 01 20 69 45		KK 01 25 70 45	
KK 01 05 32 29		KK 01 12 00 79		KK 01 14 51 77		KK 01 16 15 81		KK 01 18 78 67		KK 01 20 82 53		KK 01 25 77 53	
KK 01 05 32 31		KK 01 12 00 81		KK 01 14 52 77		KK 01 16 33 81		KK 01 18 88 63		KK 01 20 83 53		KK 01 26 42 71	
KK 01 05 72 27		KK 01 12 31 79		KK 01 14 53 77		KK 01 16 36 79		KK 01 18 88 65		KK 01 21 14 45		KK 01 26 43 71	
KK 01 05 72 29		KK 01 12 59 27		KK 01 14 57 77		KK 01 16 36 81		KK 01 19 06 67		KK 01 21 14 47		KK 01 26 44 71	
KK 01 05 72 31		KK 01 12 59 29		KK 01 14 58 77		KK 01 16 68 35		KK 01 19 08 55		KK 01 21 14 49		KK 01 26 54 53	
KK 01 06 06 35		KK 01 12 59 31		KK 01 14 59 77		KK 01 16 82 35		KK 01 19 08 63		KK 01 21 14 51		KK 01 26 55 45	
KK 01 06 50 35		KK 01 12 66 25		KK 01 14 60 77		KK 01 16 82 39		KK 01 19 08 65		KK 01 21 16 47		KK 01 26 62 53	
KK 01 06 55 35		KK 01 12 66 27		KK 01 14 61 77		KK 01 16 82 41		KK 01 19 12 61		KK 01 21 20 53		KK 01 27 00 45	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 29 31 81		KK 01 33 46 15		KK 01 58 34 9		KK 02 99 20 27		KK 03 24 80 53		KK 03 27 50 11		KK 03 28 22 37	
KK 01 29 34 81		KK 01 33 46 19		KK 01 58 41 33		KK 02 99 20 29		KK 03 25 40 27		KK 03 27 50 13		KK 03 28 22 39	
KK 01 29 60 31		KK 01 33 46 5		KK 01 60 00 81		KK 02 99 20 31		KK 03 26 40 81		KK 03 27 50 17		KK 03 28 22 81	
KK 01 29 60 75		KK 01 33 46 7		KK 01 60 10 79		KK 02 99 20 35		KK 03 26 55 21		KK 03 27 50 17		KK 03 28 24 39	
KK 01 29 80 45		KK 01 33 46 9		KK 01 60 12 75		KK 02 99 20 41		KK 03 26 65 21		KK 03 27 50 35		KK 03 28 26 43	
KK 01 29 29 19		KK 01 33 61 11		KK 01 60 12 81		KK 02 99 20 75		KK 03 26 65 81		KK 03 27 50 7		KK 03 28 28 37	
KK 01 30 04 81		KK 01 33 61 13		KK 01 60 15 11		KK 02 99 20 77		KK 03 26 85 79		KK 03 27 50 79		KK 03 28 30 27	
KK 01 30 05 81		KK 01 33 61 19		KK 01 60 15 13		KK 02 99 20 79		KK 03 26 95 79		KK 03 27 50 9		KK 03 28 30 39	
KK 01 30 51 55		KK 01 33 61 7		KK 01 60 15 19		KK 02 99 20 81		KK 03 27 02 29		KK 03 27 52 37		KK 03 28 35 43	
KK 01 30 52 55		KK 01 33 85 11		KK 01 60 15 7		KK 02 99 27 35		KK 03 27 02 31		KK 03 27 52 39		KK 03 28 36 43	
KK 01 30 53 55		KK 01 33 85 13		KK 01 60 22 23		KK 03 10 30 29		KK 03 27 02 41		KK 03 27 55 75		KK 03 28 36 81	
KK 01 30 73 65		KK 01 33 85 19		KK 01 60 31 25		KK 03 10 30 31		KK 03 27 13 39		KK 03 27 60 79		KK 03 28 37 35	
KK 01 32 28 11		KK 01 33 85 7		KK 01 60 31 27		KK 03 10 60 75		KK 03 27 16 41		KK 03 27 62 23		KK 03 28 40 21	
KK 01 32 28 13		KK 01 35 01 53		KK 01 60 31 29		KK 03 13 40 25		KK 03 27 16 81		KK 03 27 65 11		KK 03 28 40 23	
KK 01 32 28 13		KK 01 35 18 45		KK 01 60 37 79		KK 03 17 30 25		KK 03 27 19 81		KK 03 27 65 13		KK 03 28 40 23	
KK 01 32 28 15		KK 01 35 22 45		KK 01 60 38 83		KK 03 17 40 25		KK 03 27 25 35		KK 03 27 65 17		KK 03 28 40 27	
KK 01 32 28 17		KK 01 35 25 73		KK 01 60 45 23		KK 03 20 02 65		KK 03 27 25 37		KK 03 27 65 7		KK 03 28 40 31	
KK 01 32 28 17		KK 01 35 26 73		KK 01 62 01 77		KK 03 20 06 57		KK 03 27 25 5		KK 03 27 65 75		KK 03 28 43 35	
KK 01 32 28 5		KK 01 35 27 73		KK 01 62 03 77		KK 03 20 06 59		KK 03 27 25 9		KK 03 27 65 81		KK 03 28 43 37	
KK 01 32 28 7		KK 01 35 29 53		KK 01 65 09 73		KK 03 20 06 73		KK 03 27 30 13		KK 03 27 65 83		KK 03 28 45 35	
KK 01 32 28 9		KK 01 35 44 53		KK 01 65 10 57		KK 03 20 16 57		KK 03 27 30 15		KK 03 27 70 81		KK 03 28 45 35	
KK 01 32 34 13		KK 01 35 45 53		KK 01 65 10 73		KK 03 20 16 59		KK 03 27 30 35		KK 03 27 75 11		KK 03 28 45 37	
KK 01 32 34 15		KK 01 35 89 53		KK 01 65 11 73		KK 03 20 16 69		KK 03 27 30 41		KK 03 27 75 13		KK 03 28 45 39	
KK 01 32 34 5		KK 01 35 90 53		KK 01 65 12 73		KK 03 20 16 73		KK 03 27 35 13		KK 03 27 75 17		KK 03 28 45 39	
KK 01 32 34 9		KK 01 35 95 65		KK 01 65 13 73		KK 03 20 40 55		KK 03 27 35 5		KK 03 27 75 31		KK 03 28 45 43	
KK 01 33 32 13		KK 01 35 96 65		KK 01 65 14 73		KK 03 20 40 63		KK 03 27 35 9		KK 03 27 75 7		KK 03 28 50 23	
KK 01 33 32 15		KK 01 35 97 65		KK 01 65 31 57		KK 03 20 40 65		KK 03 27 40 11		KK 03 27 75 81		KK 03 28 50 31	
KK 01 33 32 15		KK 01 36 05 57		KK 01 65 32 57		KK 03 23 35 45		KK 03 27 40 13		KK 03 27 85 31		KK 03 28 50 39	
KK 01 33 32 17		KK 01 36 06 69		KK 01 65 35 69		KK 03 24 03 35		KK 03 27 40 15		KK 03 27 95 33		KK 03 28 50 81	
KK 01 33 32 5		KK 01 37 00 81		KK 01 65 36 69		KK 03 24 45 49		KK 03 27 40 17		KK 03 28 07 23		KK 03 28 50 21	
KK 01 33 32 9		KK 01 58 11 45		KK 01 65 37 69		KK 03 24 45 51		KK 03 27 40 41		KK 03 28 07 81		KK 03 28 55 43	
KK 01 33 32 9		KK 01 58 25 33		KK 01 65 38 69		KK 03 24 45 53		KK 03 27 40 7		KK 03 28 15 43		KK 03 28 55 75	
KK 01 33 33 13		KK 01 58 30 15		KK 02 97 27 21		KK 03 24 50 47		KK 03 27 40 79		KK 03 28 20 35		KK 03 28 60 21	
KK 01 33 33 5		KK 01 58 32 5		KK 02 97 27 21		KK 03 24 60 53		KK 03 27 40 81		KK 03 28 21 37		KK 03 28 60 23	
KK 01 33 33 9		KK 01 58 32 79		KK 02 97 70 35		KK 03 24 65 45		KK 03 27 45 37		KK 03 28 21 37		KK 03 28 60 35	
KK 01 33 46 11		KK 01 58 34 13		KK 02 99 20 21		KK 03 24 75 35		KK 03 27 45 39		KK 03 28 21 39		KK 03 28 60 75	
KK 01 33 46 13		KK 01 58 34 15		KK 02 99 20 25		KK 03 24 75 53		KK 03 27 45 81		KK 03 28 21 43		KK 03 28 65 23	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 03 31 81	15	KK 03 51 79	41	KK 06 02 21	67	KK 06 33 88	9	KK 06 61 70	27	KK 07 02 93	15	KK 07 12 80	23
KK 03 31 85	15	KK 03 51 79	41	KK 06 06 24	25	KK 06 36 07	15	KK 06 61 75	25	KK 07 02 94	15	KK 07 12 81	23
KK 03 32 51	13	KK 03 51 98	39	KK 06 06 57	33	KK 06 36 07	5	KK 06 61 75	27	KK 07 03 88	9	KK 07 15 00	15
KK 03 32 51	15	KK 03 52 09	21	KK 06 07 03	21	KK 06 36 07	9	KK 06 61 75	29	KK 07 03 89	9	KK 07 15 08	23
KK 03 32 51	17	KK 03 52 15	23	KK 06 12 80	21	KK 06 38 01	5	KK 06 61 78	25	KK 07 03 90	5	KK 07 15 29	23
KK 03 32 51	5	KK 03 52 16	23	KK 06 12 91	21	KK 06 38 01	5	KK 06 61 78	27	KK 07 03 91	5	KK 07 17 34	35
KK 03 32 51	9	KK 03 52 29	75	KK 06 12 91	35	KK 06 40 24	81	KK 06 61 78	31	KK 07 03 92	9	KK 07 21 46	41
KK 03 32 56	13	KK 03 52 35	35	KK 06 15 15	23	KK 06 40 30	79	KK 06 61 82	25	KK 07 03 93	9	KK 07 30 00	5
KK 03 32 56	17	KK 03 52 36	35	KK 06 15 15	53	KK 06 40 30	81	KK 06 61 82	27	KK 07 03 94	5	KK 07 30 01	5
KK 03 32 56	5	KK 05 07 06	21	KK 06 16 37	37	KK 06 40 36	75	KK 06 61 85	25	KK 07 03 95	5	KK 07 30 02	17
KK 03 32 56	9	KK 05 30 90	11	KK 06 16 37	39	KK 06 40 36	79	KK 06 61 89	25	KK 07 03 96	9	KK 07 30 02	5
KK 03 32 86	13	KK 05 30 90	13	KK 06 18 99	41	KK 06 40 39	79	KK 06 61 89	27	KK 07 03 97	9	KK 07 30 03	17
KK 03 32 86	15	KK 05 30 90	13	KK 06 18 99	83	KK 06 40 47	83	KK 06 61 90	25	KK 07 03 98	9	KK 07 30 03	5
KK 03 32 86	17	KK 05 30 90	15	KK 06 20 20	23	KK 06 40 73	79	KK 06 61 90	27	KK 07 03 99	9	KK 07 30 04	17
KK 03 32 86	5	KK 05 30 90	17	KK 06 20 25	13	KK 06 40 74	79	KK 06 68 11	33	KK 07 06 39	33	KK 07 30 04	5
KK 03 32 86	9	KK 05 30 90	17	KK 06 20 25	9	KK 06 40 75	79	KK 06 68 12	33	KK 07 06 40	5	KK 07 30 05	17
KK 03 32 95	13	KK 05 30 90	5	KK 06 24 58	35	KK 06 40 78	79	KK 06 68 68	33	KK 07 06 40	9	KK 07 30 05	5
KK 03 32 95	17	KK 05 30 90	7	KK 06 25 00	35	KK 06 40 79	81	KK 06 68 69	33	KK 07 06 41	5	KK 07 30 06	17
KK 03 32 95	5	KK 05 30 90	9	KK 06 25 05	35	KK 06 40 81	79	KK 06 68 73	33	KK 07 06 41	9	KK 07 30 06	5
KK 03 32 95	9	KK 05 33 87	13	KK 06 25 06	35	KK 06 40 86	79	KK 06 68 80	33	KK 07 06 42	5	KK 07 30 07	17
KK 03 33 08	53	KK 05 33 87	5	KK 06 30 90	11	KK 06 40 86	81	KK 06 68 81	33	KK 07 06 42	9	KK 07 30 07	5
KK 03 33 21	53	KK 05 33 87	9	KK 06 30 90	13	KK 06 40 87	79	KK 06 70 31	21	KK 07 06 53	33	KK 07 30 08	5
KK 03 36 70	79	KK 05 61 12	25	KK 06 30 90	13	KK 06 40 87	81	KK 06 70 39	21	KK 07 08 05	81	KK 07 30 09	5
KK 03 42 25	33	KK 05 61 14	25	KK 06 30 90	15	KK 06 40 89	79	KK 06 70 39	41	KK 07 12 07	23	KK 07 30 16	15
KK 03 42 28	33	KK 05 61 15	25	KK 06 30 90	17	KK 06 40 89	81	KK 06 70 40	21	KK 07 12 08	23	KK 07 30 30	17
KK 03 42 50	33	KK 05 61 16	25	KK 06 30 90	17	KK 06 40 97	81	KK 06 70 51	21	KK 07 12 09	23	KK 07 30 30	5
KK 03 44 46	33	KK 05 61 56	25	KK 06 30 90	5	KK 06 42 22	79	KK 06 70 57	21	KK 07 12 11	23	KK 07 30 31	17
KK 03 50 20	21	KK 05 68 73	33	KK 06 30 90	7	KK 06 42 23	79	KK 06 70 59	21	KK 07 12 12	23	KK 07 30 31	5
KK 03 50 21	21	KK 05 70 63	21	KK 06 30 90	9	KK 06 43 17	35	KK 06 70 60	21	KK 07 12 28	23	KK 07 30 40	5
KK 03 50 31	25	KK 05 70 64	21	KK 06 30 91	15	KK 06 43 21	35	KK 06 70 68	21	KK 07 12 56	37	KK 07 30 41	5
KK 03 50 31	27	KK 05 70 65	21	KK 06 30 91	17	KK 06 43 60	35	KK 06 70 70	21	KK 07 12 56	39	KK 07 30 42	17
KK 03 50 60	23	KK 05 70 66	21	KK 06 30 91	5	KK 06 61 02	25	KK 06 70 75	21	KK 07 12 70	23	KK 07 30 42	5
KK 03 50 72	23	KK 05 70 67	21	KK 06 30 92	15	KK 06 61 08	25	KK 06 70 76	21	KK 07 12 71	23	KK 07 30 43	17
KK 03 51 09	35	KK 05 70 68	21	KK 06 30 92	17	KK 06 61 40	25	KK 06 70 77	21	KK 07 12 72	23	KK 07 30 43	5
KK 03 51 43	41	KK 05 70 89	21	KK 06 30 92	5	KK 06 61 42	25	KK 06 70 80	21	KK 07 12 73	23	KK 07 30 44	17
KK 03 51 65	21	KK 06 01 08	21	KK 06 33 88	13	KK 06 61 43	25	KK 06 82 51	81	KK 07 12 74	23	KK 07 30 44	5
KK 03 51 75	29	KK 06 01 09	21	KK 06 33 88	5	KK 06 61 45	25	KK 07 02 92	15	KK 07 12 75	23	KK 07 30 45	17

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 30 81	13	KK 07 32 42	9	KK 07 33 01	15	KK 07 34 70	13	KK 07 36 35	17	KK 07 38 35	15	KK 07 48 75	81	KK 07 64 06	29
KK 07 30 81	15	KK 07 32 45	15	KK 07 33 01	17	KK 07 34 70	15	KK 07 36 35	7	KK 07 38 36	15	KK 07 48 76	81	KK 07 64 06	31
KK 07 30 81	17	KK 07 32 46	15	KK 07 33 01	5	KK 07 34 71	13	KK 07 38 00	13	KK 07 38 42	9	KK 07 48 80	81	KK 07 64 07	27
KK 07 30 81	9	KK 07 32 50	5	KK 07 33 01	9	KK 07 34 71	15	KK 07 38 00	5	KK 07 40 47	79	KK 07 48 81	81	KK 07 64 07	29
KK 07 30 88	13	KK 07 32 51	5	KK 07 33 03	15	KK 07 36 07	15	KK 07 38 00	9	KK 07 40 48	79	KK 07 48 82	81	KK 07 64 07	31
KK 07 30 88	15	KK 07 32 56	5	KK 07 33 04	15	KK 07 36 07	5	KK 07 38 01	13	KK 07 40 49	79	KK 07 48 84	81	KK 07 64 09	27
KK 07 30 88	17	KK 07 32 57	5	KK 07 33 10	5	KK 07 36 07	9	KK 07 38 01	5	KK 07 40 80	81	KK 07 48 85	81	KK 07 64 09	29
KK 07 30 88	5	KK 07 32 60	5	KK 07 33 10	9	KK 07 36 08	13	KK 07 38 01	9	KK 07 40 93	81	KK 07 48 86	81	KK 07 64 09	31
KK 07 30 88	9	KK 07 32 61	5	KK 07 33 11	5	KK 07 36 08	15	KK 07 38 03	15	KK 07 46 17	79	KK 07 48 87	81	KK 07 64 10	27
KK 07 30 89	13	KK 07 32 63	5	KK 07 33 11	9	KK 07 36 08	17	KK 07 38 03	5	KK 07 46 24	79	KK 07 48 88	81	KK 07 64 10	29
KK 07 30 89	15	KK 07 32 64	5	KK 07 33 28	13	KK 07 36 08	5	KK 07 38 03	5	KK 07 47 99	79	KK 07 48 89	81	KK 07 64 10	31
KK 07 30 89	17	KK 07 32 66	5	KK 07 33 29	13	KK 07 36 08	9	KK 07 38 04	9	KK 07 48 01	79	KK 07 48 90	81	KK 07 64 99	27
KK 07 30 89	5	KK 07 32 66	9	KK 07 33 32	15	KK 07 36 09	13	KK 07 38 04	9	KK 07 48 02	79	KK 07 48 91	81	KK 07 64 99	29
KK 07 30 89	9	KK 07 32 67	5	KK 07 33 33	15	KK 07 36 09	15	KK 07 38 05	15	KK 07 48 06	79	KK 07 48 93	81	KK 07 64 99	31
KK 07 30 91	13	KK 07 32 67	9	KK 07 33 38	13	KK 07 36 09	17	KK 07 38 05	9	KK 07 48 10	79	KK 07 49 10	23	KK 07 65 15	31
KK 07 30 91	15	KK 07 32 72	13	KK 07 33 39	13	KK 07 36 09	5	KK 07 38 07	5	KK 07 48 17	79	KK 07 49 11	23	KK 07 65 27	31
KK 07 30 91	17	KK 07 32 72	15	KK 07 33 50	13	KK 07 36 09	9	KK 07 38 08	5	KK 07 48 18	79	KK 07 49 30	31	KK 07 65 75	29
KK 07 30 91	5	KK 07 32 73	13	KK 07 33 51	13	KK 07 36 14	13	KK 07 38 10	15	KK 07 48 19	79	KK 07 49 31	31	KK 07 65 75	31
KK 07 30 91	9	KK 07 32 73	15	KK 07 33 52	13	KK 07 36 14	15	KK 07 38 11	15	KK 07 48 20	79	KK 07 49 36	31	KK 07 68 12	33
KK 07 30 92	13	KK 07 32 75	13	KK 07 33 53	13	KK 07 36 14	17	KK 07 38 12	15	KK 07 48 35	81	KK 07 49 37	31	KK 07 68 13	33
KK 07 30 92	15	KK 07 32 75	15	KK 07 33 54	13	KK 07 36 14	5	KK 07 38 13	15	KK 07 48 36	81	KK 07 49 38	31	KK 07 68 17	33
KK 07 30 92	17	KK 07 32 76	13	KK 07 34 06	5	KK 07 36 14	9	KK 07 38 15	15	KK 07 48 38	81	KK 07 49 39	31	KK 07 68 18	33
KK 07 30 92	5	KK 07 32 76	15	KK 07 34 07	5	KK 07 36 15	13	KK 07 38 16	15	KK 07 48 39	81	KK 07 58 89	39	KK 07 68 25	33
KK 07 30 92	9	KK 07 32 78	13	KK 07 34 11	5	KK 07 36 15	15	KK 07 38 17	15	KK 07 48 41	81	KK 07 60 60	29	KK 07 68 26	33
KK 07 32 24	9	KK 07 32 79	13	KK 07 34 12	5	KK 07 36 15	17	KK 07 38 20	15	KK 07 48 43	81	KK 07 60 63	29	KK 07 68 33	33
KK 07 32 25	9	KK 07 32 80	5	KK 07 34 14	5	KK 07 36 15	5	KK 07 38 21	15	KK 07 48 44	83	KK 07 60 75	29	KK 07 68 34	33
KK 07 32 27	9	KK 07 32 81	5	KK 07 34 15	5	KK 07 36 15	9	KK 07 38 22	15	KK 07 48 46	83	KK 07 60 76	29	KK 07 68 59	33
KK 07 32 28	9	KK 07 32 86	5	KK 07 34 17	9	KK 07 36 16	13	KK 07 38 23	15	KK 07 48 50	81	KK 07 60 76	31	KK 07 68 72	33
KK 07 32 30	17	KK 07 32 87	5	KK 07 34 18	9	KK 07 36 16	17	KK 07 38 26	13	KK 07 48 56	81	KK 07 60 82	29	KK 07 68 78	33
KK 07 32 30	9	KK 07 32 90	5	KK 07 34 35	9	KK 07 36 16	5	KK 07 38 26	9	KK 07 48 62	81	KK 07 60 97	29	KK 07 69 62	33
KK 07 32 31	17	KK 07 32 90	9	KK 07 34 36	9	KK 07 36 16	9	KK 07 38 26	9	KK 07 48 64	81	KK 07 62 10	29	KK 07 69 63	33
KK 07 32 31	9	KK 07 32 91	5	KK 07 34 40	9	KK 07 36 34	11	KK 07 38 29	13	KK 07 48 65	81	KK 07 62 11	29	KK 07 70 23	23
KK 07 32 36	9	KK 07 32 91	9	KK 07 34 41	9	KK 07 36 34	13	KK 07 38 29	9	KK 07 48 66	81	KK 07 62 12	29	KK 07 70 24	23
KK 07 32 37	9	KK 07 33 00	15	KK 07 34 64	13	KK 07 36 34	17	KK 07 38 30	5	KK 07 48 67	81	KK 07 62 13	29	KK 07 70 31	35
KK 07 32 39	9	KK 07 33 00	17	KK 07 34 64	15	KK 07 36 34	7	KK 07 38 31	5	KK 07 48 70	81	KK 07 64 00	29	KK 07 70 39	35
KK 07 32 40	9	KK 07 33 00	5	KK 07 34 65	13	KK 07 36 35	11	KK 07 38 31	9	KK 07 48 73	81	KK 07 64 00	31	KK 07 70 90	43
KK 07 32 41	9	KK 07 33 00	9	KK 07 34 65	15	KK 07 36 35	13	KK 07 38 34	15	KK 07 48 74	81	KK 07 64 06	27	KK 07 70 91	43

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 70 92 43		KK 07 96 94 75		KK 08 12 29 41		KK 08 14 03 37		KK 08 32 22 17		KK 08 60 85 27		KK 35 27 79 45	
KK 07 71 37 35		KK 07 97 00 75		KK 08 12 30 37		KK 08 14 90 37		KK 08 32 23 17		KK 08 60 86 31		KK 35 27 79 55	
KK 07 71 72 41		KK 07 97 03 75		KK 08 12 33 R37		KK 08 14 93 39		KK 08 32 24 17		KK 08 60 87 31		KK 35 27 84 61	
KK 07 71 91 35		KK 07 97 30 75		KK 08 12 33 37		KK 08 16 20 39		KK 08 33 00 17		KK 08 60 89 31		KK 35 27 85 61	
KK 07 72 07 35		KK 07 97 65 35		KK 08 12 34 37		KK 08 17 83 39		KK 08 33 01 17		KK 08 60 90 31		KK 35 27 86 55	
KK 07 72 08 35		KK 08 10 44 35		KK 08 12 48 41		KK 08 18 80 37		KK 08 34 06 17		KK 08 61 00 27		KK 35 27 87 45	
KK 07 72 09 35		KK 08 10 98 35		KK 08 12 49 41		KK 08 18 81 37		KK 08 34 07 17		KK 08 61 00 29		KK 35 27 87 55	
KK 07 72 30 35		KK 08 11 09 41		KK 08 12 58 41		KK 08 18 82 37		KK 08 34 08 17		KK 08 61 01 27		KK 35 27 96 55	
KK 07 72 31 35		KK 08 11 15 75		KK 08 12 65 39		KK 08 18 83 39		KK 08 34 09 17		KK 08 61 01 29		KK 35 27 97 55	
KK 07 72 64 45		KK 08 11 17 37		KK 08 12 68 39		KK 08 18 84 39		KK 08 34 15 17		KK 08 61 01 31		KK 35 37 10 49	
KK 07 72 66 35		KK 08 11 28 37		KK 08 12 69 39		KK 08 18 85 39		KK 08 34 16 17		KK 08 61 10 27		KK 35 37 10 69	
KK 07 72 67 35		KK 08 11 29 37		KK 08 12 70 41		KK 08 18 86 35		KK 08 34 17 17		KK 08 61 11 27		KK 35 37 26 59	
KK 07 72 72 41		KK 08 11 38 43		KK 08 12 71 41		KK 08 18 87 35		KK 08 34 18 17		KK 08 61 12 27		KK 35 37 27 59	
KK 07 72 80 35		KK 08 11 50 35		KK 08 12 74 41		KK 08 18 88 35		KK 08 38 02 17		KK 08 61 13 27		KK 35 37 28 59	
KK 07 72 81 35		KK 08 11 55 43		KK 08 12 78 41		KK 08 18 89 39		KK 08 38 03 17		KK 08 61 14 27		KK 35 37 28 69	
KK 07 72 86 35		KK 08 11 59 43		KK 08 12 80 37		KK 08 20 88 53		KK 08 38 04 17		KK 08 61 15 27		KK 35 37 29 59	
KK 07 72 90 43		KK 08 11 82 41		KK 08 12 83 41		KK 08 21 38 37		KK 08 38 05 17		KK 10 68 63 81		KK 35 37 32 59	
KK 07 76 82 45		KK 08 11 94 41		KK 08 12 84 41		KK 08 21 39 35		KK 08 38 06 17		KK 12 41 57 37		KK 35 37 35 59	
KK 07 78 82 41		KK 08 11 98 41		KK 08 12 85 41		KK 08 21 70 35		KK 08 38 07 17		KK 12 41 57 49		KK 35 37 36 59	
KK 07 85 50 35		KK 08 12 04 35		KK 08 12 90 37		KK 08 21 71 45		KK 08 38 08 17		KK 12 41 57 51		KK 35 37 39 57	
KK 07 85 64 35		KK 08 12 08 37		KK 08 12 91 39		KK 08 21 77 35		KK 08 40 00 83		KK 19 54 15 41		KK 35 37 43 59	
KK 07 85 64 37		KK 08 12 09 41		KK 08 12 92 37		KK 08 21 81 43		KK 08 40 01 83		KK 30 12 23 75		KK 35 37 44 59	
KK 07 85 64 39		KK 08 12 10 37		KK 08 12 93 39		KK 08 21 82 43		KK 08 40 02 83		KK 35 11 48 37		KK 35 37 45 59	
KK 07 85 83 45		KK 08 12 11 37		KK 08 12 98 41		KK 08 21 83 43		KK 08 40 03 83		KK 35 11 70 37		KK 35 37 46 59	
KK 07 85 84 45		KK 08 12 12 37		KK 08 12 99 41		KK 08 21 84 43		KK 08 40 10 83		KK 35 11 72 37		KK 35 37 51 73	
KK 07 88 98 35		KK 08 12 13 39		KK 08 13 02 39		KK 08 21 90 43		KK 08 40 11 83		KK 35 35 34 51		KK 35 37 54 73	
KK 07 90 63 81		KK 08 12 14 35		KK 08 13 18 39		KK 08 32 10 17		KK 08 40 12 83		KK 35 35 34 71		KK 35 37 55 73	
KK 07 90 75 37		KK 08 12 14 37		KK 08 13 19 39		KK 08 32 11 17		KK 08 40 13 83		KK 35 35 40 79		KK 35 37 73 57	
KK 07 91 53 35		KK 08 12 14 39		KK 08 13 40 39		KK 08 32 12 17		KK 08 40 40 81		KK 35 35 62 71		KK 35 37 74 73	
KK 07 96 07 75		KK 08 12 14 39		KK 08 13 58 37		KK 08 32 13 17		KK 08 40 42 83		KK 35 35 63 71		KK 35 37 75 73	
KK 07 96 30 75		KK 08 12 15 35		KK 08 13 59 39		KK 08 32 14 17		KK 08 40 43 81		KK 35 35 64 71		KK 35 37 76 73	
KK 07 96 36 75		KK 08 12 15 37		KK 08 13 69 39		KK 08 32 15 17		KK 08 40 84 83		KK 35 35 65 71		KK 35 37 83 57	
KK 07 96 42 75		KK 08 12 16 35		KK 08 13 76 39		KK 08 32 16 17		KK 08 60 80 27		KK 35 35 66 71		KK 35 37 85 57	
KK 07 96 70 75		KK 08 12 16 37		KK 08 13 90 37		KK 08 32 17 17		KK 08 60 81 27		KK 35 35 73 71		KK 35 37 93 59	
KK 07 96 71 75		KK 08 12 17 35		KK 08 13 91 39		KK 08 32 18 17		KK 08 60 82 27		KK 35 35 77 75		KK 35 37 93 69	
KK 07 96 72 75		KK 08 12 18 35		KK 08 13 92 39		KK 08 32 20 17		KK 08 60 83 27		KK 35 36 16 55		KK 35 37 94 73	
KK 07 96 73 75		KK 08 12 19 35		KK 08 14 01 39		KK 08 32 21 17		KK 08 60 84 27		KK 35 36 17 55		KK 35 37 95 57	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 35 37 96	69	KK 35 38 13	45	KK 35 38 37	47	KK 35 39 20	75	KK 70 92 34	85	KK 70 98 23	85	KK 70 98 44	85	KK 70 99 80	85
KK 35 37 97	69	KK 35 38 13	57	KK 35 38 37	65	KK 35 60 42	81	KK 70 93 04	85	KK 70 98 31	85	KK 70 98 47	85	KK 70 99 81	85
KK 35 37 98	57	KK 35 38 20	69	KK 35 38 38	65	KK 36 11 66	37	KK 70 97 37	85	KK 70 98 41	85	KK 70 98 95	85		
KK 35 37 99	57	KK 35 38 22	69	KK 35 38 50	65	KK 36 11 74	37	KK 70 97 79	85	KK 70 98 42	85	KK 70 99 55	85		
KK 35 38 04	53	KK 35 38 34	45	KK 35 38 51	65	KK 36 11 75	37	KK 70 97 81	85	KK 70 98 43	85	KK 70 99 59	85		